


# **Olympus D590 Motherboard Replacement**

Step-by-step Instruction Guide Olympus D590...

Written By: Sara

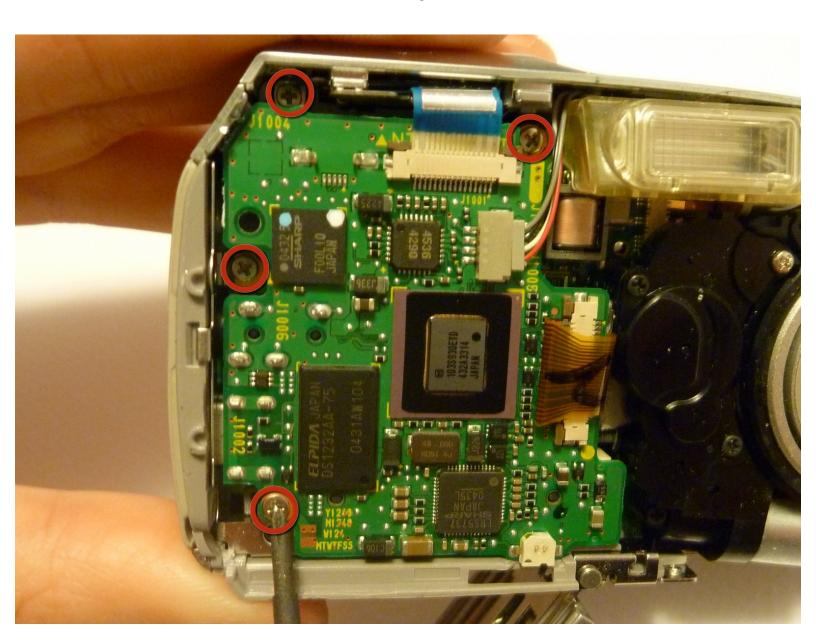

# **INTRODUCTION**

Step-by-step Instruction Guide

Olympus D590 Logic Board Replacement



# **TOOLS:**


- Tweezers (1)
- Phillips #1 Screwdriver (1)

#### Step 1 — Face Plate




 Remove five baseplate screws using a Phillips #00 screwdriver.

# Step 2

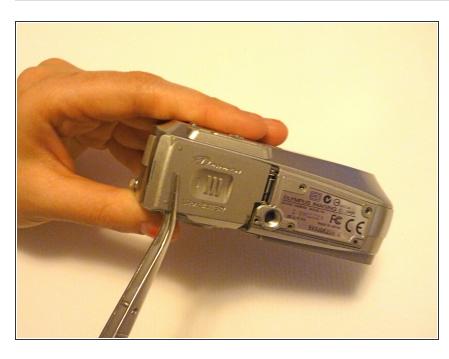


 Press and slide the battery cover retainer clip to the left. Use tweezers to lift the battery cover away.

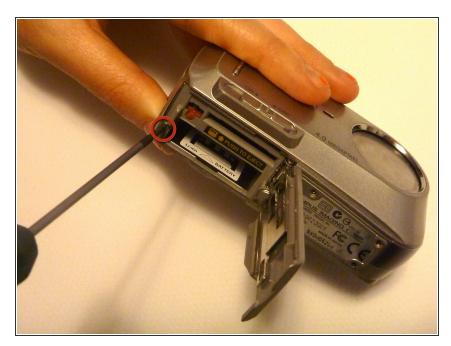

 Remove the single screw from the battery housing using a Phillips #00 screwdriver.

# Step 4

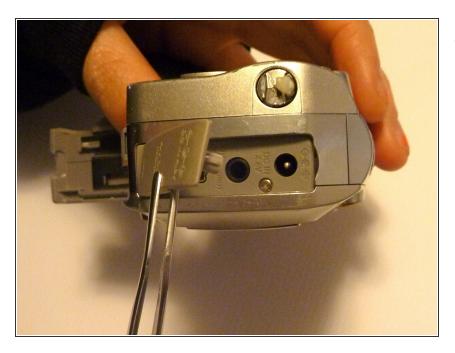


 Using tweezers, lift the rubber plate to expose the ports.



 Remove two screws from the ports using a Phillips #00 screwdriver.

# Step 6

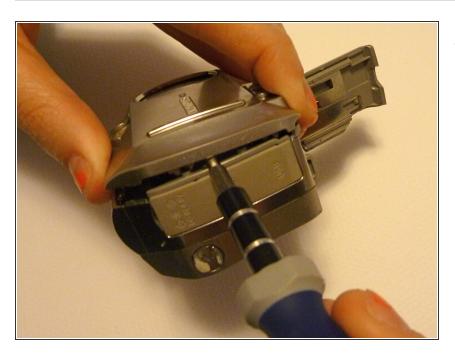


 Use a spudger to pry the faceplate away from the rest of the camera.



- To avoid disconnection of the connector line to the motherboard, use caution when pulling faceplate away from camera case.
- ↑ Damage to the connector line will prevent the on/off power switch's operational function.

#### Step 8 — Motherboard

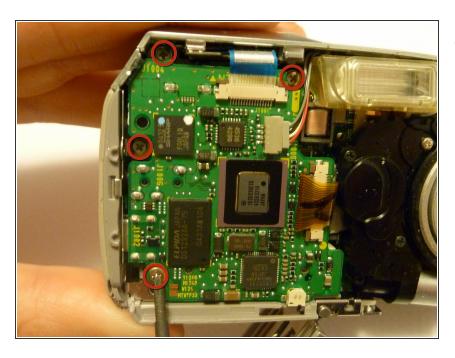


 Remove four screws holding the motherboard to the internal housing component using a Phillips #1 screwdriver.




- A Be cautious of the wires attached to the motherboard.
- Remove the motherboard from the internal housing component.
- ⚠ Do not completely lift the motherboard out with the wiring connected. The wires must be disconnected before proceeding. The next step will demonstrate disconnection process.

#### Step 10

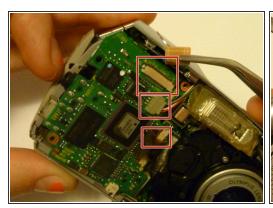



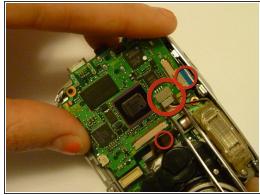

- Use rounded tweezers to disconnect the three wiring strips from the motherboard.
- ↑ Using sharp tweezers may tear wiring tape and wires.
- (i) Use gentle force when wiggling or pulling wiring tape and wires to disconnect from the motherboard.

To reassemble your device, follow these instructions in reverse order.