



Lenovo IdeaPad U350 Battery Replacement

This guide will demonstrate how to remove and replace the battery for the Lenovo IdeaPad U350.

Written By: Katherine



INTRODUCTION

If your battery no longer holds a charge or stops functioning all together, use this guide to remove and replace the battery. No tools required.

Step 1 — Battery



- Locate the battery by turning the laptop over.

Step 2



- Locate the lock switch and slide toward the outside edge of the laptop until it clicks into place and the battery unit pops up.
- Remove the battery unit from the laptop and set it aside.

To reassemble your device, follow these instructions in reverse order.