




Disassembling Nokia 3560 Microphone

This guide will show you how to remove the...

Written By: Sam Ryan

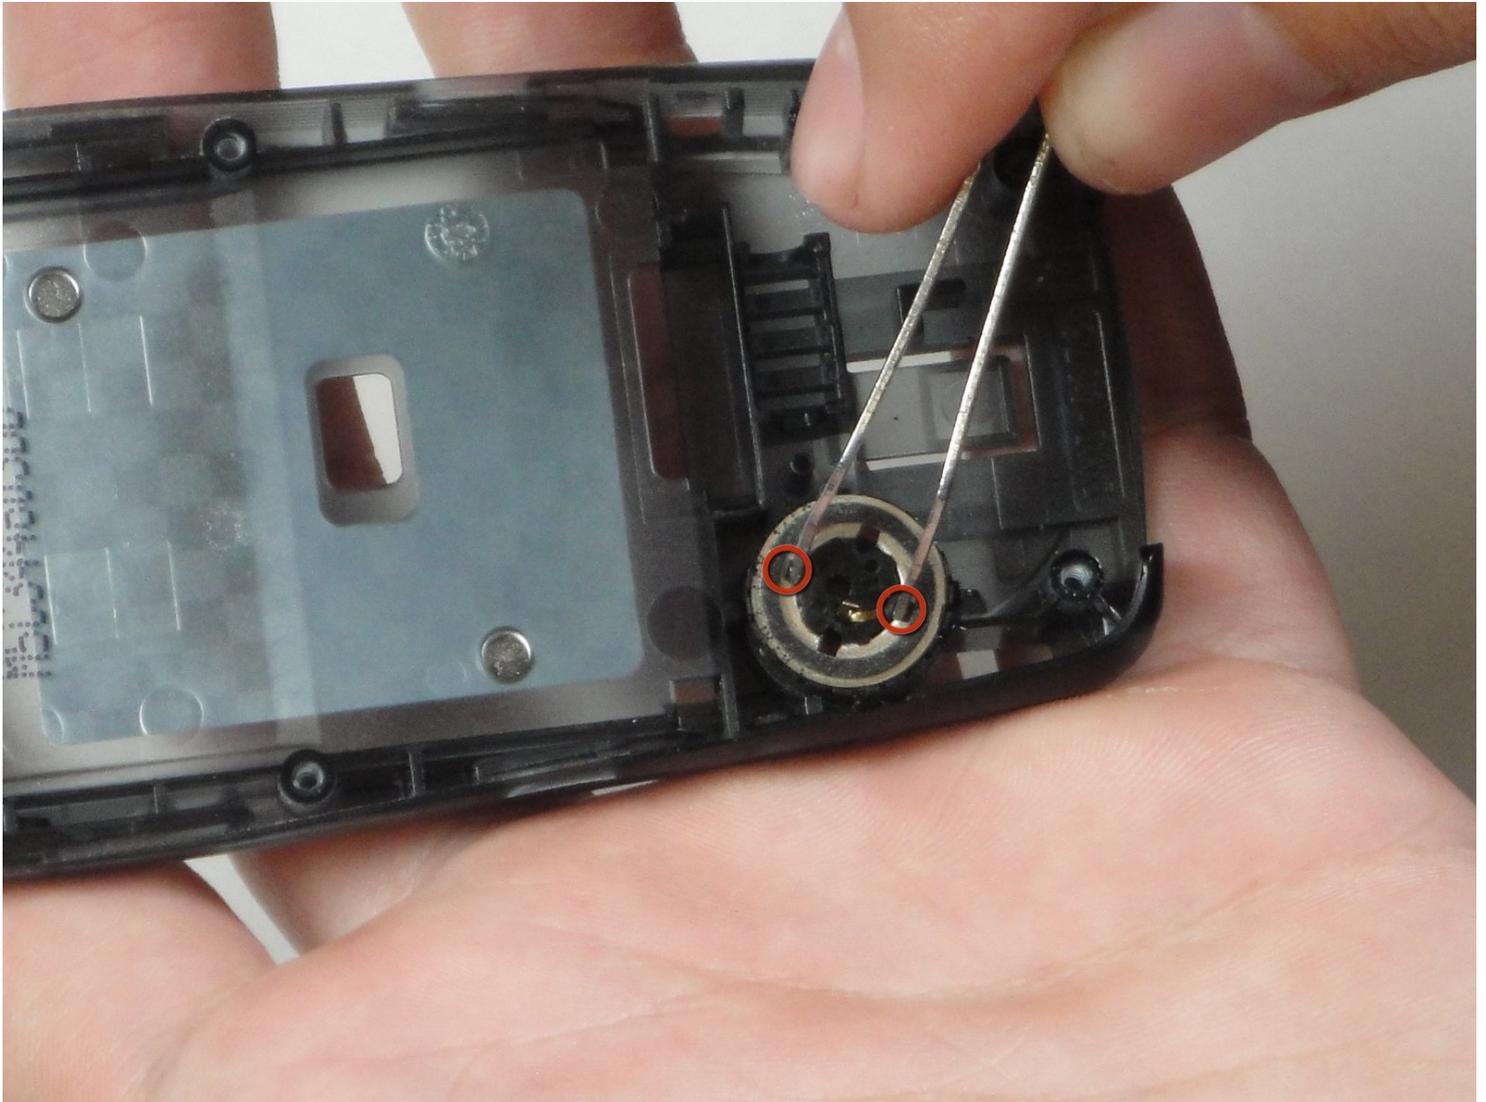

INTRODUCTION

This guide will show you how to remove the microphone from the Nokia 3560.

TOOLS:

[Tweezers](#) (1)

Step 1 — Back Cover




- Press down on the release latch on the bottom of the cover.
- Once the latch is released, lift the cover from the phone.

Step 2 — Disassembling Nokia 3560 Keypad



- Lift the front case off of the phone body.

Step 3

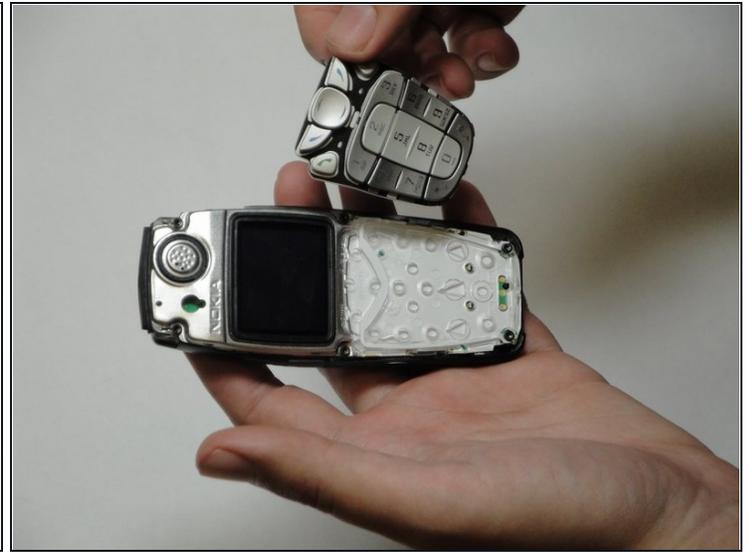

- Lift the keypad off of the phone.

Step 4 — Disassembling Nokia 3560 LCD Display




- The screen is held to the body by six screws.

Step 5




- Unscrew the six screws with a Torx screwdriver (six-pointed star shaped bit).

Step 6

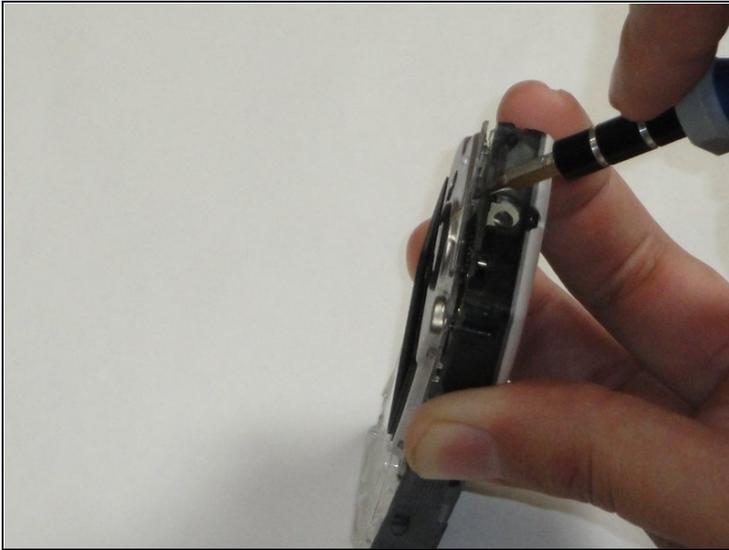


- Insert a flat screwdriver between the black body and plastic layer.

Step 7

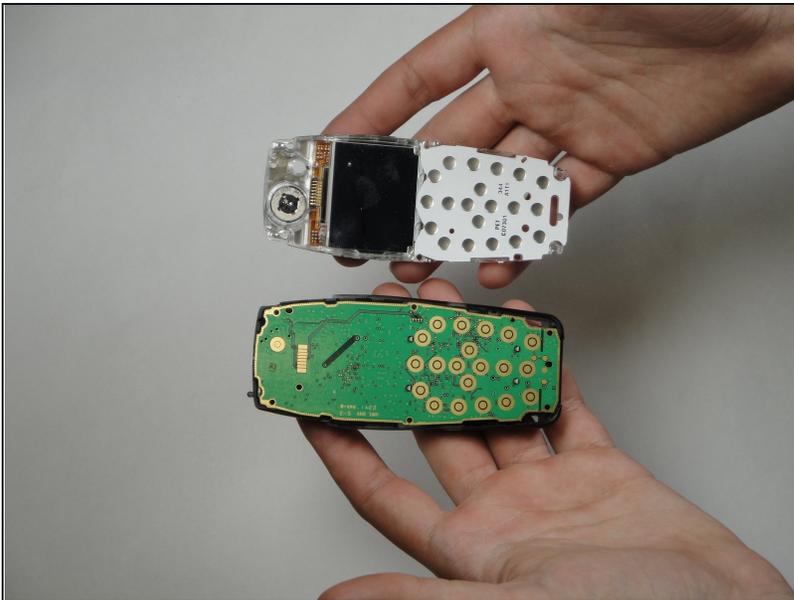


- Pry the layers apart. The LCD and plastic layer will lift out as one piece.

Step 8 — Disassembling Nokia 3560 Logic Board

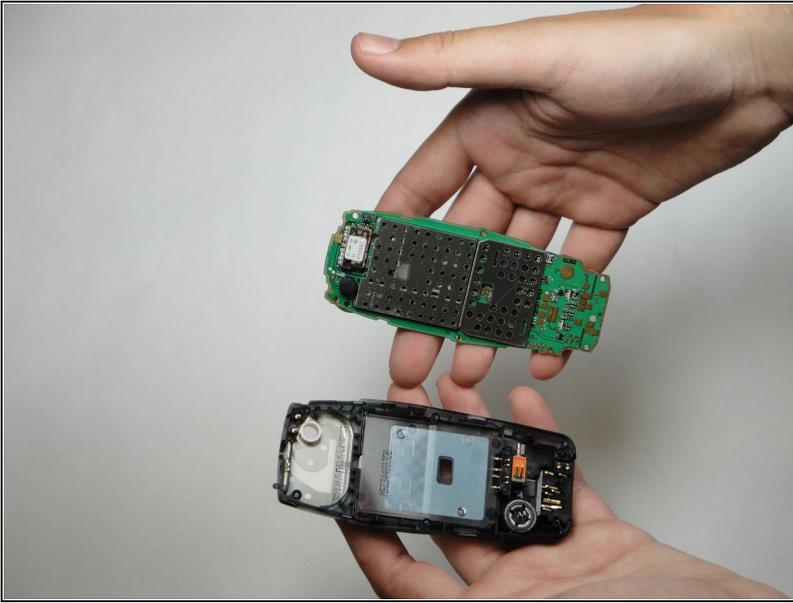

- With the screws removed, the logic board can then be lifted out of the body by hand.

Step 9 — Microphone

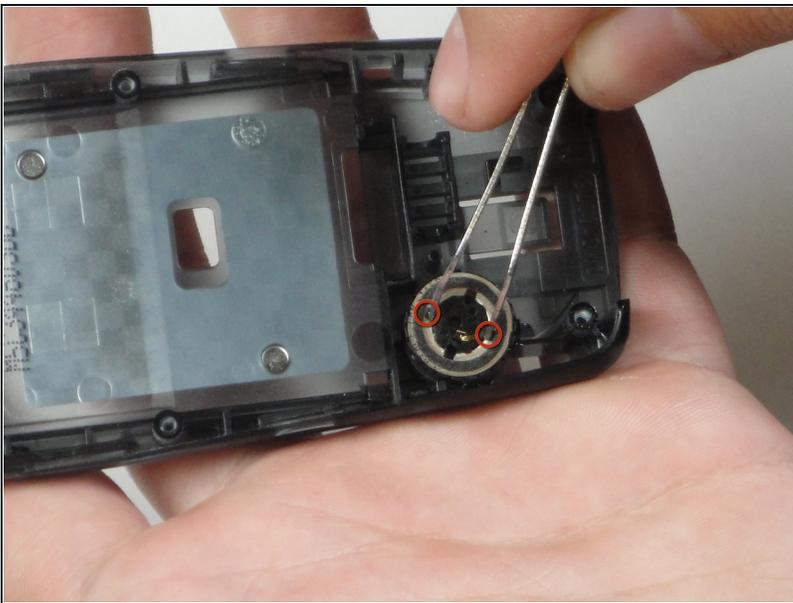

- Use [tweezers](#) to securely grip the microphone, then pull.
- ⚠ Be careful not to remove the metal prongs.

To reassemble your device, follow these instructions in reverse order.