



Asus Memo Pad ME172V - LCD Display Replacement

Asus Memo Pad ME172V - LCD Display Replacement

Written By: ZFix



INTRODUCTION

How to disassemble the Memo Pad and replace the LCD display.

[Please SUBSCRIBE to my channel ツ](#)



[video: <http://youtu.be/vdQdcnEF50k>]



TOOLS:



- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — LCD Display

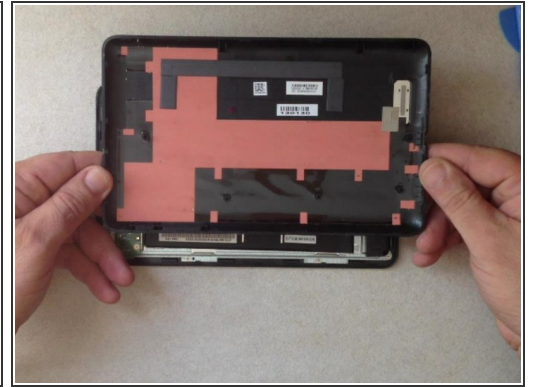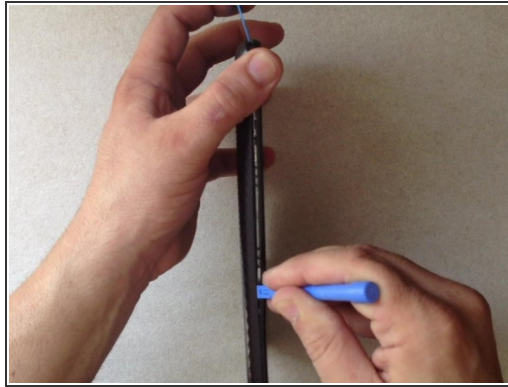




- Open the back/battery cover.

Step 2

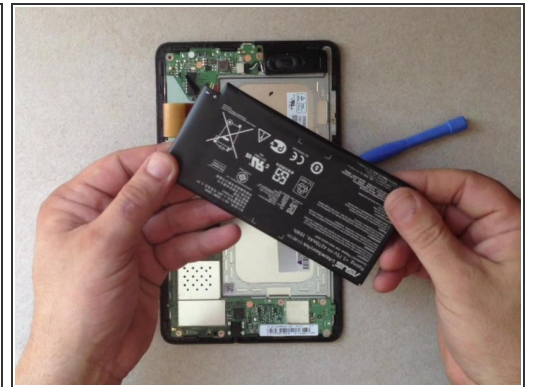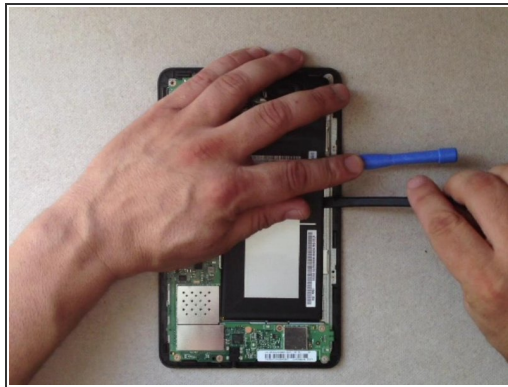



- Disconnect and remove the battery.

Step 3

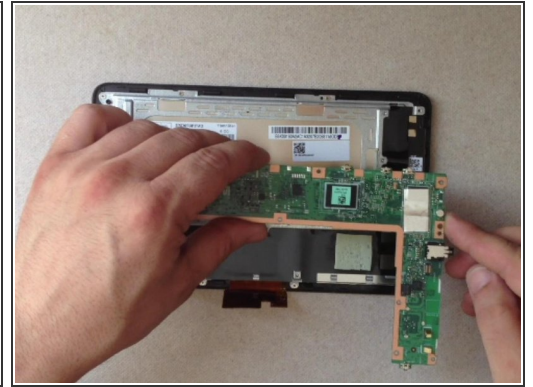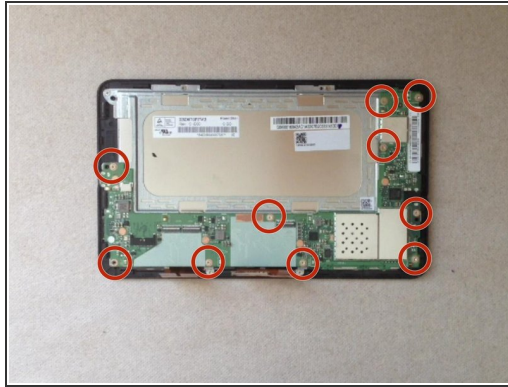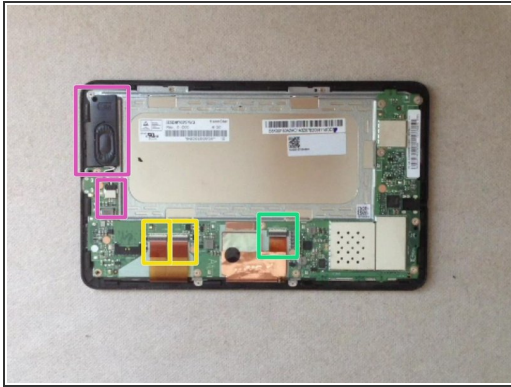

- Disconnect the LCD display flex cable.
- Disconnect the touch screen flex cable.
- Disconnect and remove the loudspeaker.
- Unscrew 10x screws and remove the mother board.

Step 4

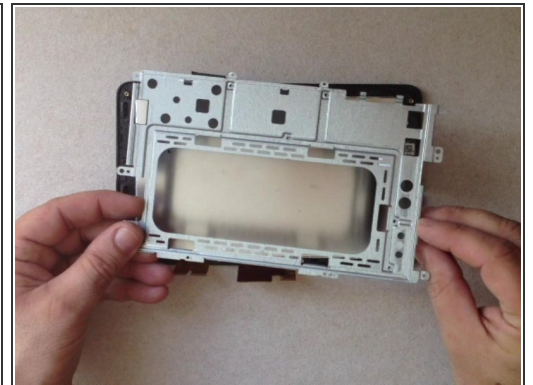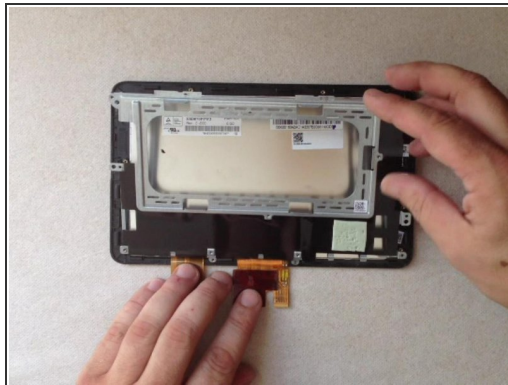

- Remove the LCD display metal shield.

Step 5



- The LCD display is held from a metal frame, glued to the touch screen. By using cutter, start carefully open the frame to remove the LCD display.
- .
- **Did you do it successfully?**
- .



[Please SUBSCRIBE to my channel ツ](#)

To reassemble your device, follow these instructions in reverse order.