




FujiFilm FinePix A340 LCD Screen Replacement

Remove and replace LCD screen.

Written By: Cody

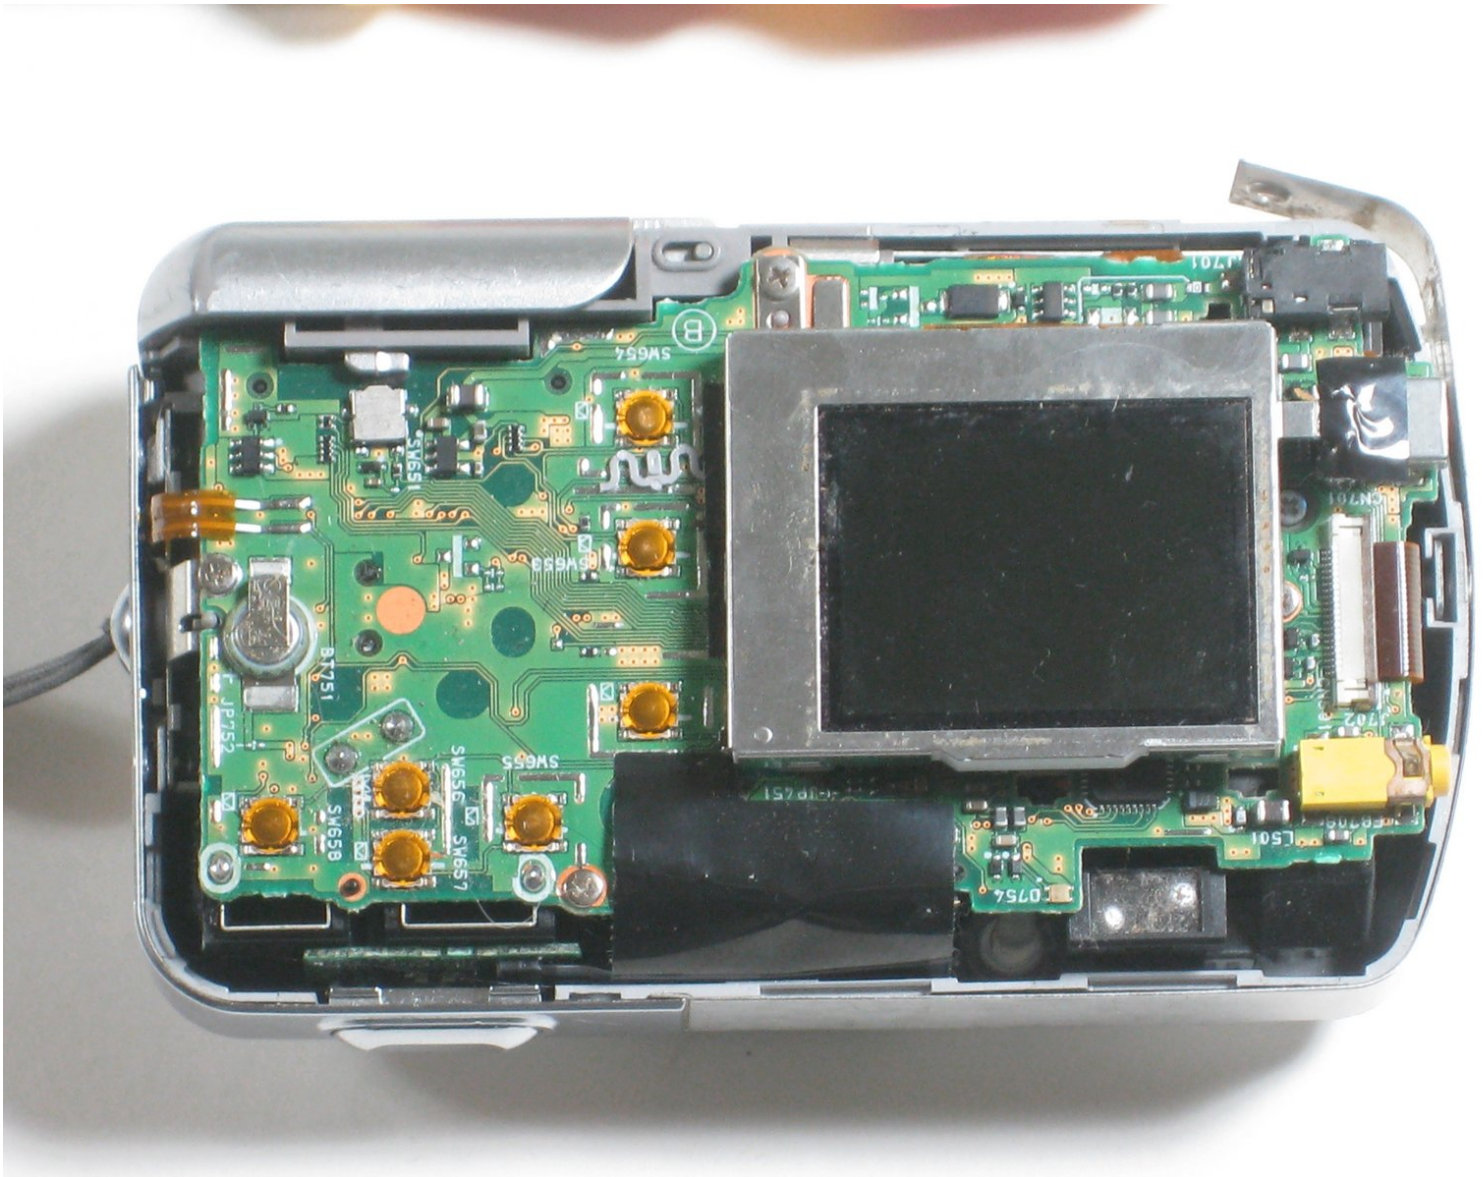

INTRODUCTION

Remove and replace LCD screen.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tri-point Y0 Screwdriver](#) (1)
-

Step 1 — Outer Case



⚠ To prevent the danger of electric shock, remove the batteries before continuing to the next steps.



- Slide the battery cover to the side to release the batteries.

Step 2



- Remove five screws from the camera casing using a tri-point Y0 screwdriver.

Step 3

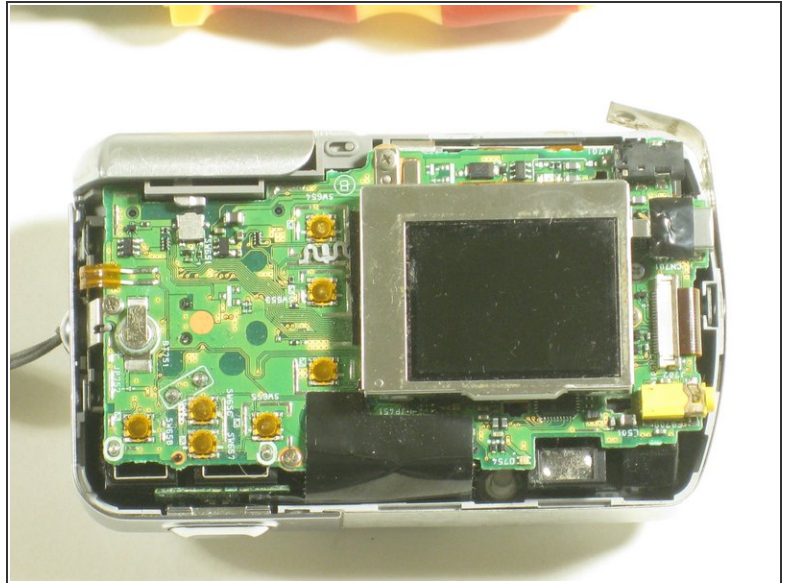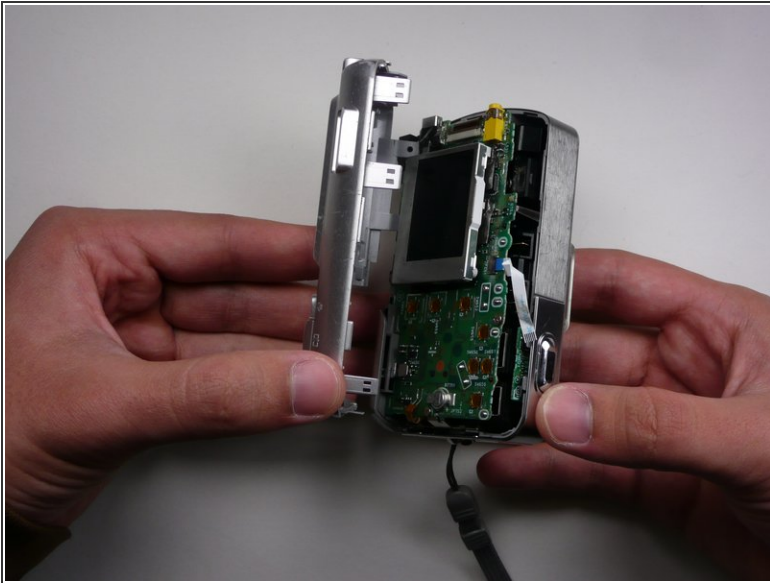

- Grab the case with your hands and slowly pull back the outer casing.

Step 4 — LCD Screen




- Locate the LCD screen and anchoring screw.
- Remove screw.

Step 5




- Carefully pull the LCD screen away from the board it is connected to.

Step 6

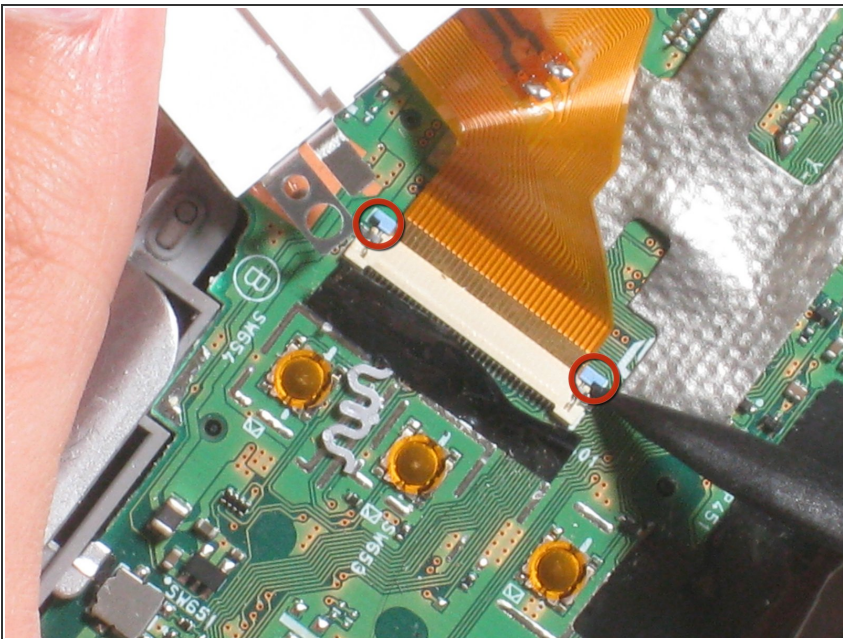


- Push both blue switches away from the holding device to unlash lcd ribbon.
- ⚠ Be careful when removing ribbon. If you damage it, you will need to replace it as well.

Step 7

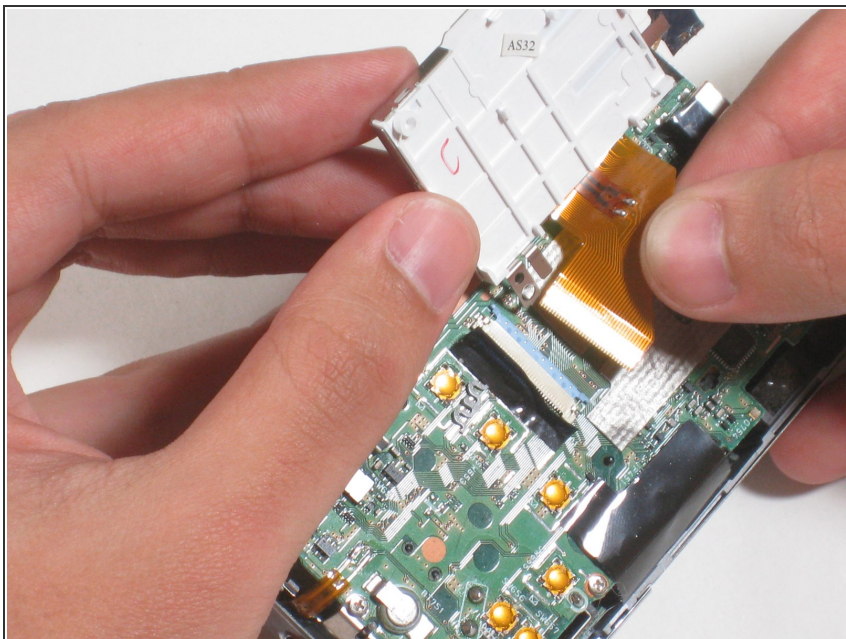

- Carefully detach the ribbon from where it was connected by the blue pins.

Step 8

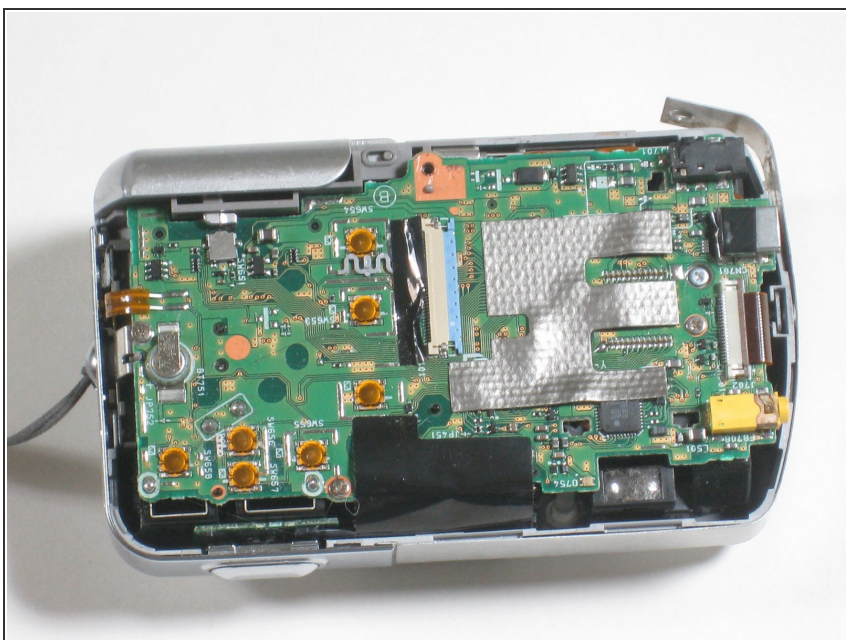

- Now that everything has been disconnected from the board, remove LCD screen.

To reassemble your device, follow these instructions in reverse order.