



Disassembling Axis 214 PTZ Camera

How to disassemble Axis 214 PTZ camera.

Written By: lukahlastec



INTRODUCTION

How to disassemble Axis 214 PTZ camera.



TOOLS:

- [Pro Tech Toolkit](#) (1)
-

Step 1 — Disassembling Axis 214 PTZ Camera



- 4 screws

Step 2



- 7 screws

Step 3




- Remove (4) Phillips screws.
- Carefully disconnect the ribbon connector.

Step 4




- Remove (4) Phillips screws.
- If replacing the logic board, remove (2) cables at the connectors.
- At the underside of the logic board, disconnect the connector.

Step 5

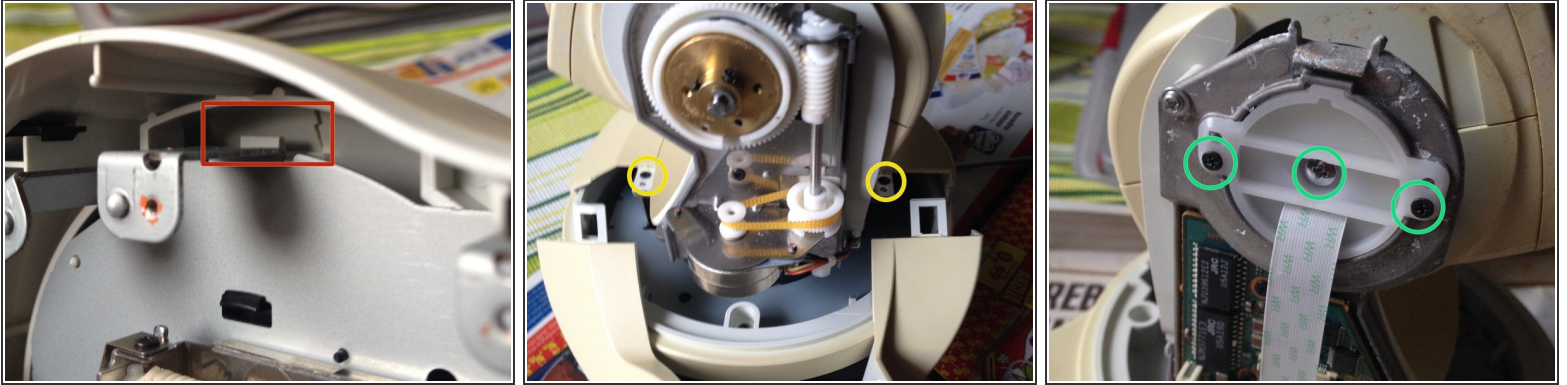

- Gently press back the plastic clip at both sides.
- Remove 2 screws.
- Remove (3) Phillip screws.

Step 6 — Odključitev heada

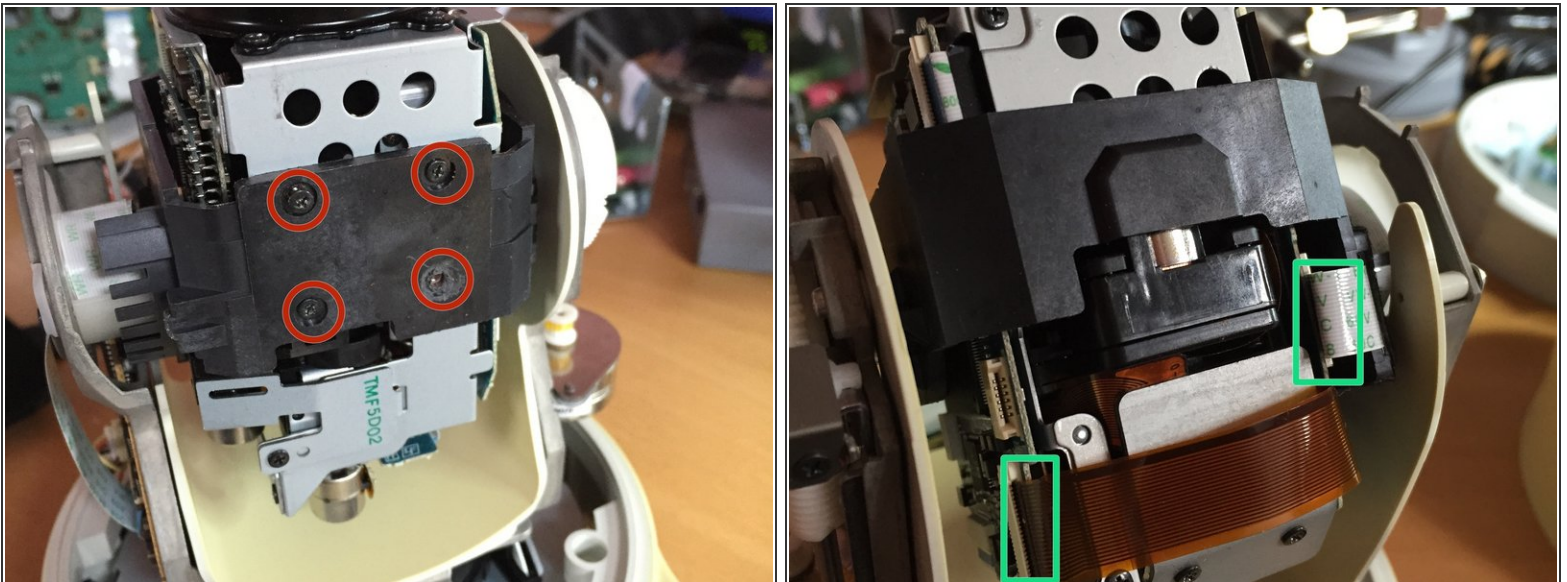



- Remove (4) Phillips screws.
- Carefully disconnect ribbon and flex cables.

Step 7



- Remove (2) Phillip screws.
- Remove (1) protective clip.

Step 8

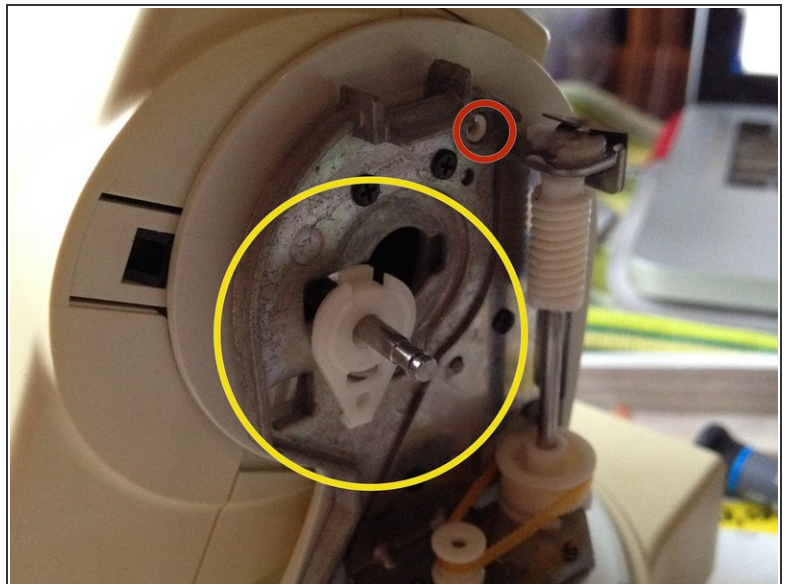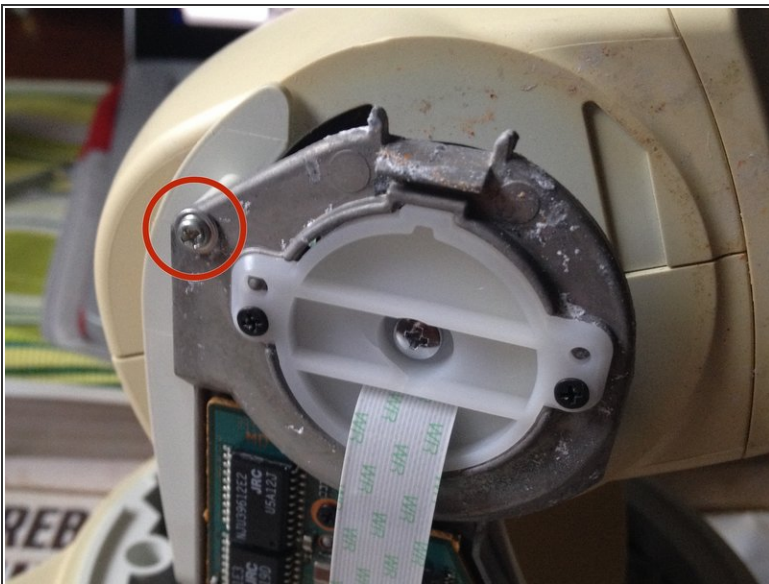



- Remove 2 screws one on each side.
- Turn the latch mechanism to the right.

Step 9



- It is difficult to disassemble.

Step 10

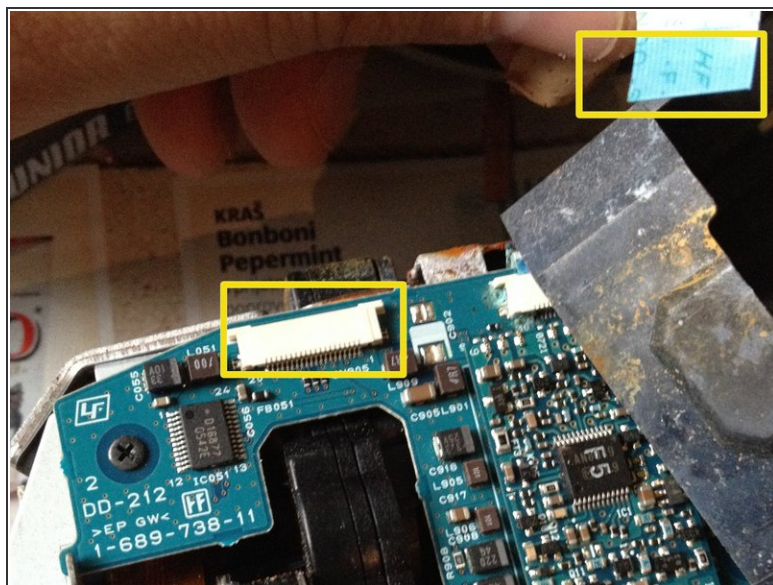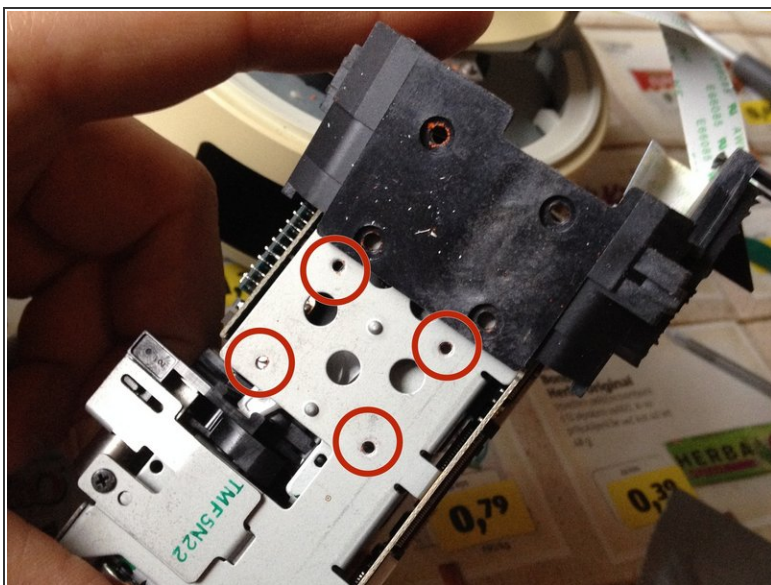

- Remove (4) recessed screws.
- Disconnect flat Ribbon Cable.

To reassemble your device, follow these instructions in reverse order.