

# **Besta Super 5000 Motherboard Replacement**

Written By: Jessie



## TOOLS:

iFixit Opening Tool (1) Phillips #0 Screwdriver (1) ESD Safe Blunt Nose Tweezers (1)

## Step 1 — Battery



• Turn the device over so that the barcode is facing upwards.





• Place your fingers on the battery cover arrow and pull the cover down and off the device.

# Step 3



 Pull upwards on the battery tab to remove the battery from the device.

#### Step 4 — Back Cover



 Remove the five screws around the edge of the device using a Phillips #0 screwdriver.

# Step 5



 Remove the two screws behind the battery using a Phillips #0 screwdriver.





- ⚠ Potential for device damage: All screws must be removed before you begin this step. Do not forcefully pry apart the device with screws still in it because you may damage it.
- Gently pry off the backing using an opening tool.

#### Step 7 — Motherboard



 Remove the three silver screws from the black round battery using a Phillips #0 screwdriver.



 Remove the five small screws from the motherboard using a Phillips #0 screwdriver.

#### Step 9




• Using a pair of <u>tweezers</u>, pinch the center of the yellow ribbon located in the corner of the device.

🛆 Potential for device damage: Do not yank or remove the ribbon from the device.

• Carefully pull the hidden piece of yellow ribbon out from underneath the motherboard.



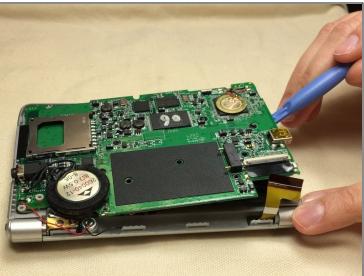


- ⚠ Potential for device damage: All screws must be removed before you begin this step. Do not forcefully pry apart the motherboard with screws still in it because you may damage it.
- Carefully pry off the motherboard with an opening tool.

### Step 11



• Take the motherboard out of the body frame.



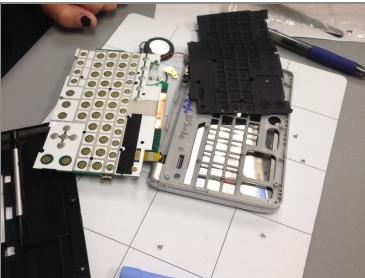

- Lift the black keyboard mat off of the motherboard.
- Replace the motherboard.

To reassemble your device, follow these instructions in reverse order.