



Palm Zire 21 Keypad Replacement

Use this guide to replace the keypad on a Palm...

Written By: Jeremy Craft




INTRODUCTION

Use this guide to replace the keypad on a Palm Zire 21.

TOOLS:




[Pro Tech Toolkit](#) (1)

Step 1 — Keypad

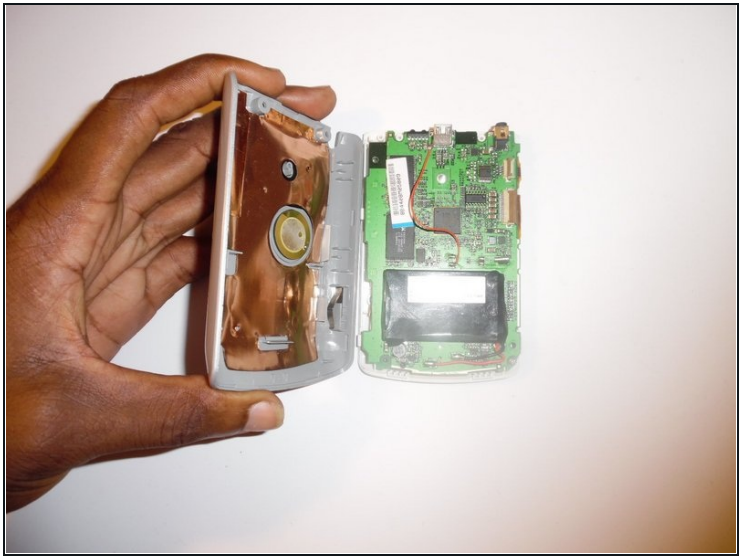



- Remove the two 0.8 mm screws located on the back of the device.

Step 2

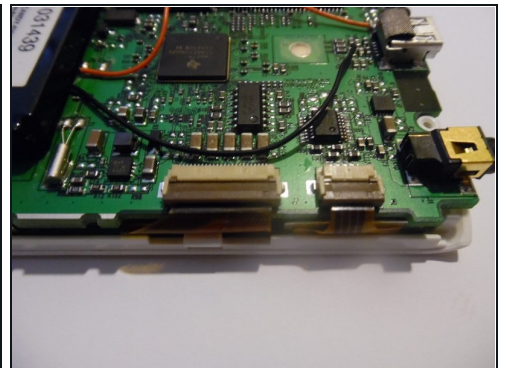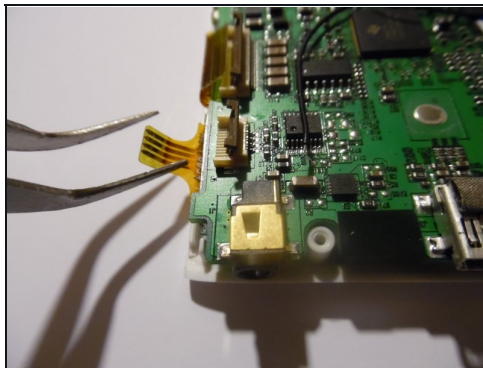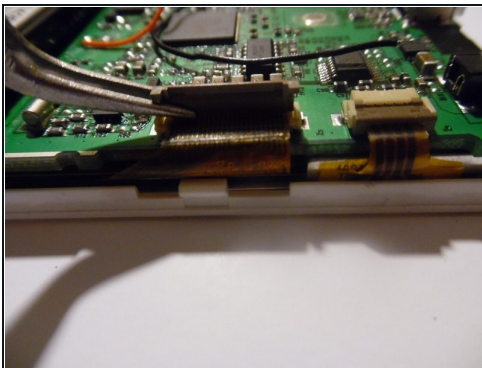


- Using [tweezers](#), or something similar flip up the tab, releasing the wires located under the flap.

Step 3

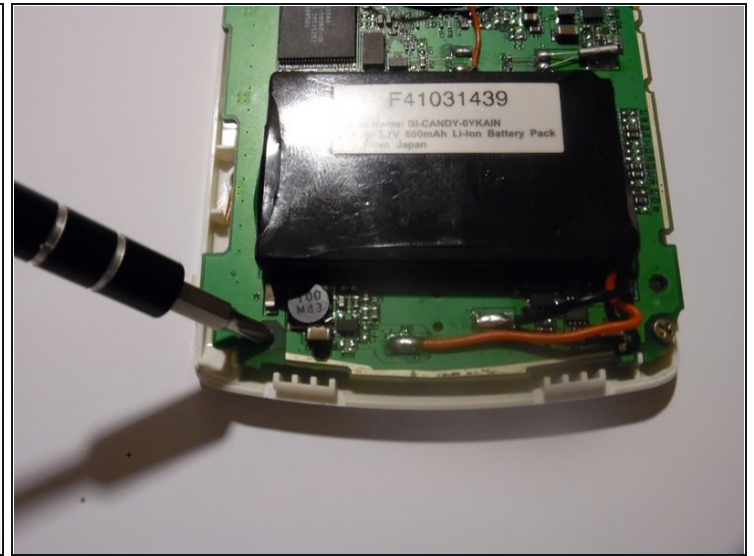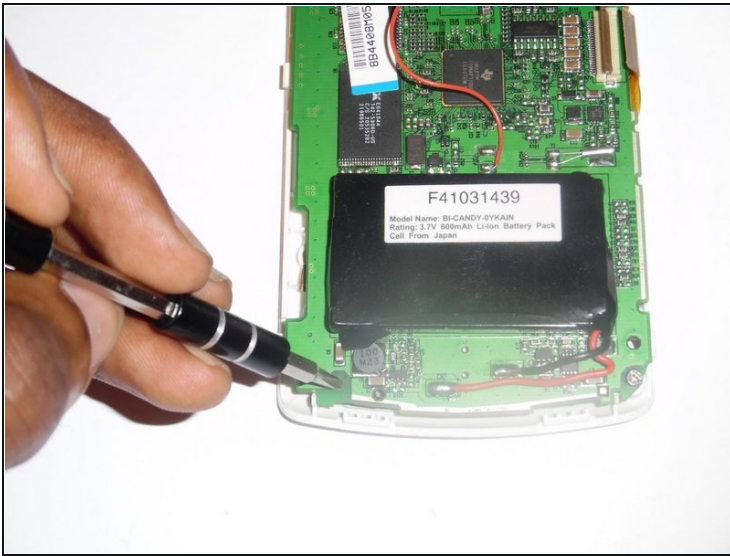


- Remove the two screws located at the bottom of the mothership, using a Philips head screwdriver.

Step 4

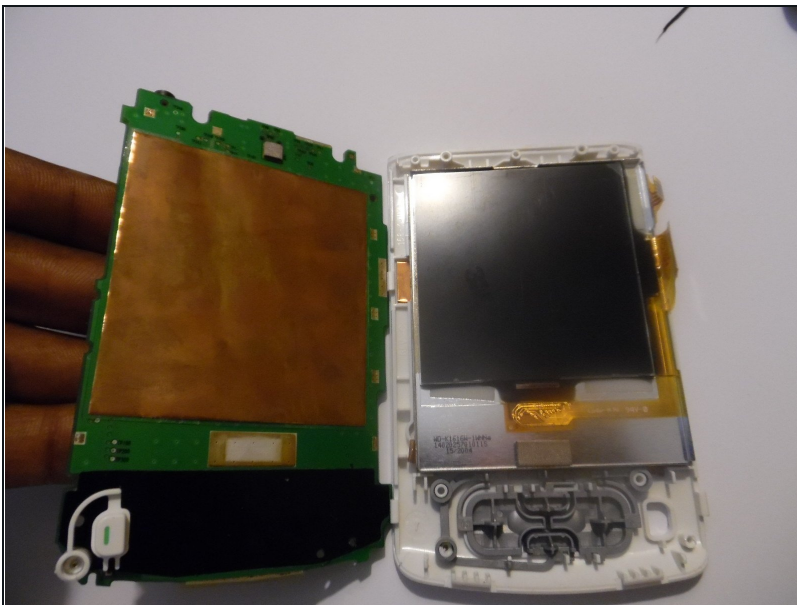

- Carefully remove the mother board by lifting up, exposing the keypad.

Step 5

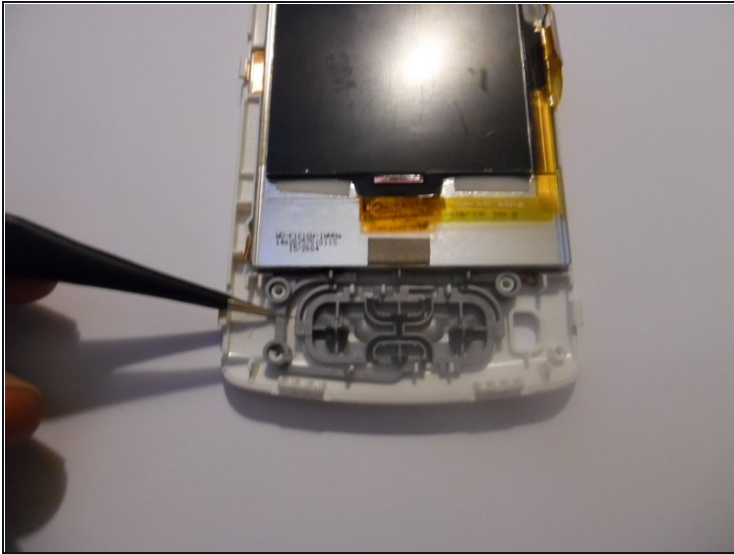

- Using tweezers, or something similar remove the keypad from the device and replace with a new one.

To reassemble your device, follow these instructions in reverse order.