



# Nokia C6-00 Flex Ribbon Cable or LCD screen Replacement

Dis-assembly guide for Nokia C6-00, to replace worn out flex ribbon cable from prolonged sliding in and out, or LCD screen and/or digitizer as required.

Written By: weiji14

## INTRODUCTION

The Nokia C6-00 is a pretty tough phone (as most Nokia phones are), even as it is a touchscreen enabled smartphone. It does have one weak point however, in that the sliding keyboard (which is awesome of course) or the 'ribbon' connecting the keyboard to the LCD display will wear off after thousands of times of sliding open and closing.

Luckily, the phone itself is very modular and accessible via Torx screwdrivers which you can purchase from your local hardware store. Replacement parts can be bought just as easily online, hopefully they still exist by the time you read this.

[video: <https://www.youtube.com/watch?v=4h4WZsKCEZs>] [video: <https://www.youtube.com/watch?v=9JxCoyJPslg>]

for detailed video instructions (note I am not the video creator). Pictures will come up soon!



### TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [T6 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Double-Sided Tape](#) (1)



### PARTS:

- [Nokia C6-00 Flex Ribbon Cable](#) (1)

To reassemble your device, follow these instructions in reverse order.