


Canon PowerShot A630 Back Panel Replacement

You may want to replace the back panel of your camera if it becomes damaged. Removal of the back panel is also a prerequisite step for replacement of most internal parts. This guide will show you how to replace the back panel of your camera.

Written By: Alicia Burns



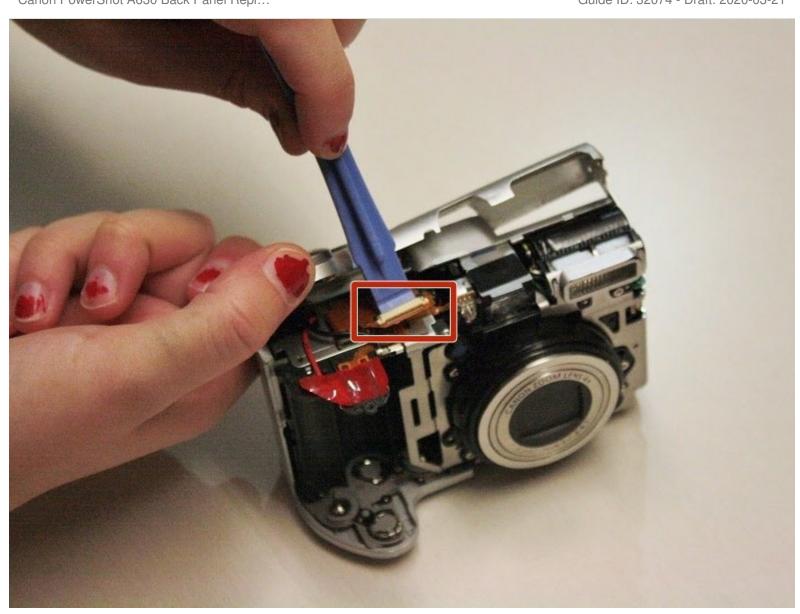


- Phillips #00 Screwdriver (1)
- Spudger (1)
- iFixit Opening Tools (1)

Step 1 — Front Panel





- Open the battery door by sliding the tab on the battery door while pushing the battery door away from the camera.
- Remove batteries.

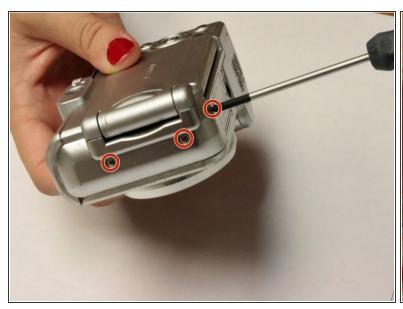





- Remove the three indicated .2mm screws using a Phillips #00 screwdriver.
- Gently pull off side-panel to remove it.

Step 3



 Remove the two indicated .2mm screws using a Phillips #00 screwdriver.

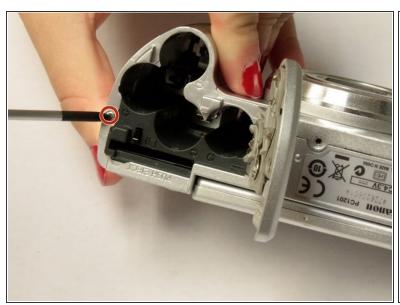

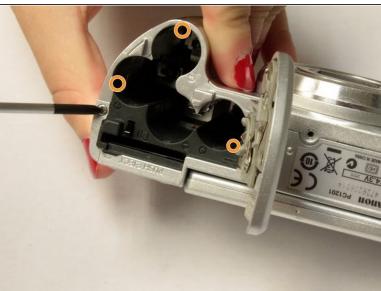

- Remove the indicated .2mm screw using a Phillips #00 screwdriver.
- Remove the three .2mm screws located on the internal side of the top panel within the battery chamber using a Phillips #00 screwdriver.






- Open 'DIGITAL A/V OUT' door on camera.
- Remove the two indicated .2mm screws using a Phillips #00 screwdriver.

Step 6




- Grip the sides of the top panel and gently pull to separate the top panel from the camera body.
- i The top panel will not completely detach.




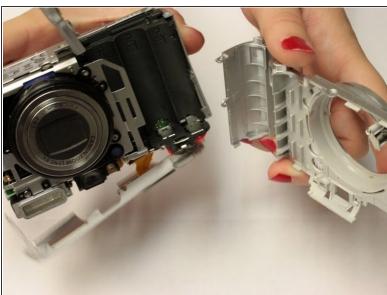

- Gently pull the front and back panels apart, and use a Phillips #00 screwdriver to remove the screw connecting the panels.
- Gripping the top and bottom, gently pull the front panel away from the camera body to remove it.


Step 8 — Back Panel

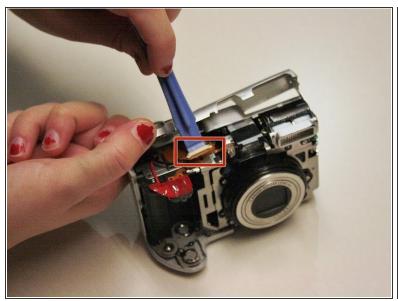

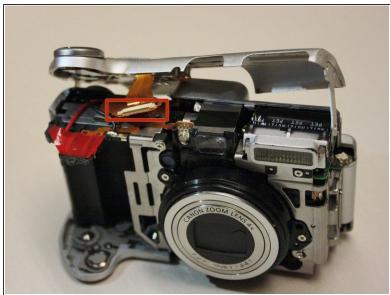

- Use the spudger to gently pull back the retaining clip and pull the ribbon out.
- The top panel should now be completely detached from the camera.
- Applying too much force to the spudger may damage the retaining clip.



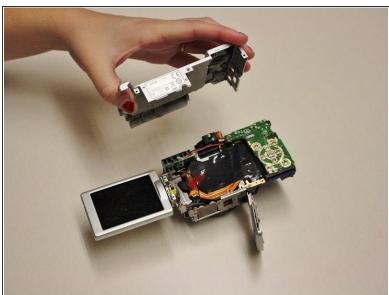

- Remove .2 mm screw using a #00 Philips screwdriver.
- Gently pry off back panel to remove it.

To reassemble your device, follow these instructions in reverse order.