




Kodak EasyShare Z740 LCD Screen Replacement

This guide is for the replacement of the LCD screen.

Written By: Kirsten Price

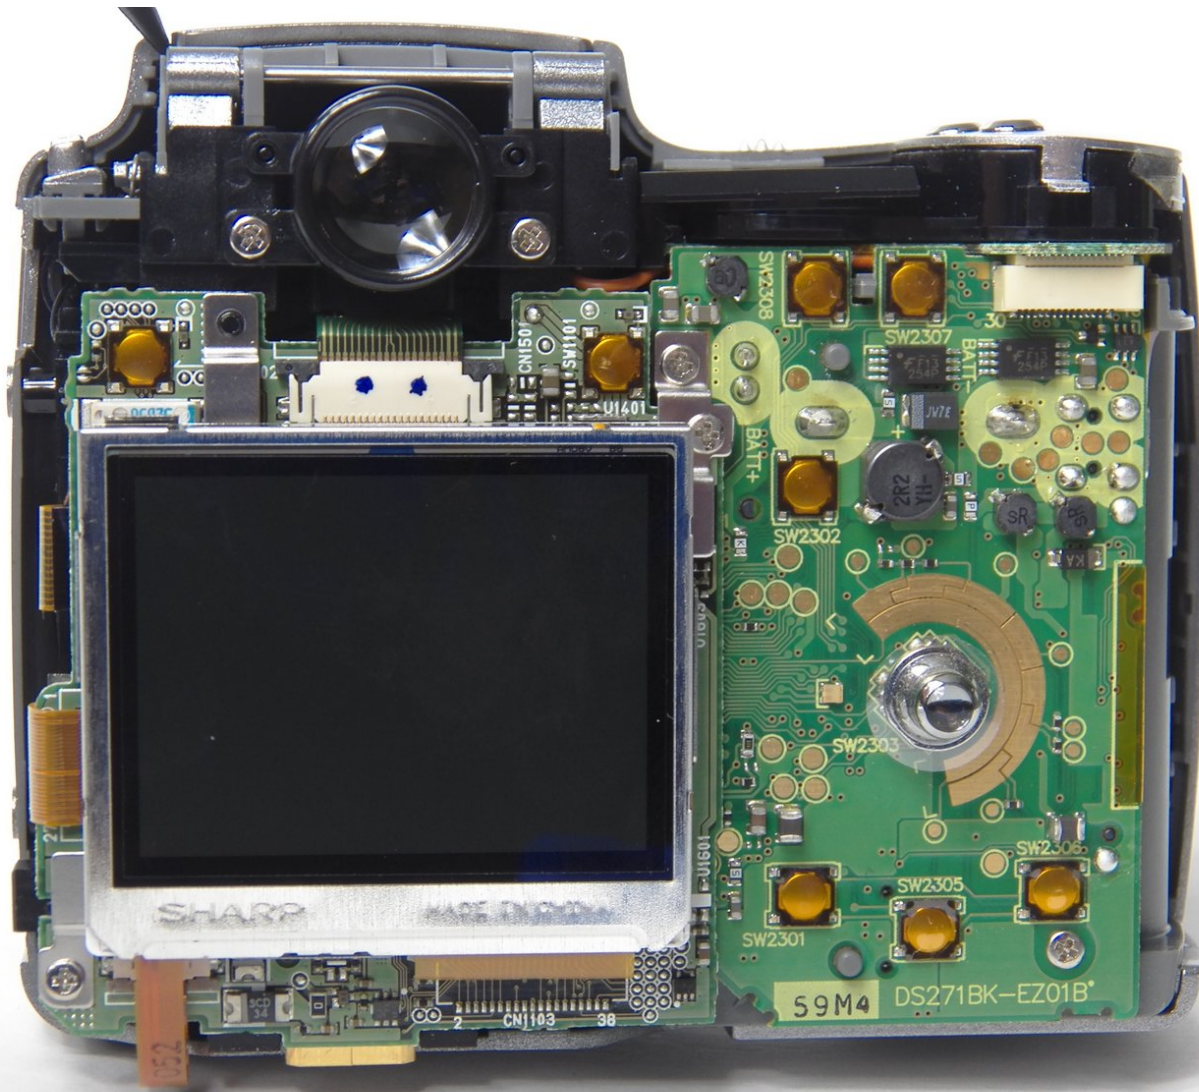

INTRODUCTION

The LCD screen displays the photos on the camera, making it one of the more important parts for functionality. If your screen breaks or gets scratched, follow this guide to replace the LCD screen.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Slide the door on the bottom of the camera in the direction of the open symbol with your finger.
- Release and the door will pop open.

Step 2



- Slide the battery out.

Step 3 — Lens Cover




- Remove lens cover from the camera by squeezing the protruding button on each side of the cover and pulling.

Step 4




- Pull the lens cover string toward the ground so that the loop underneath the metal slab is on top of the cover string.
- Push up so that the string starts to come out of the top of the loop.
- Grab the string from above the loop and pull.

Step 5

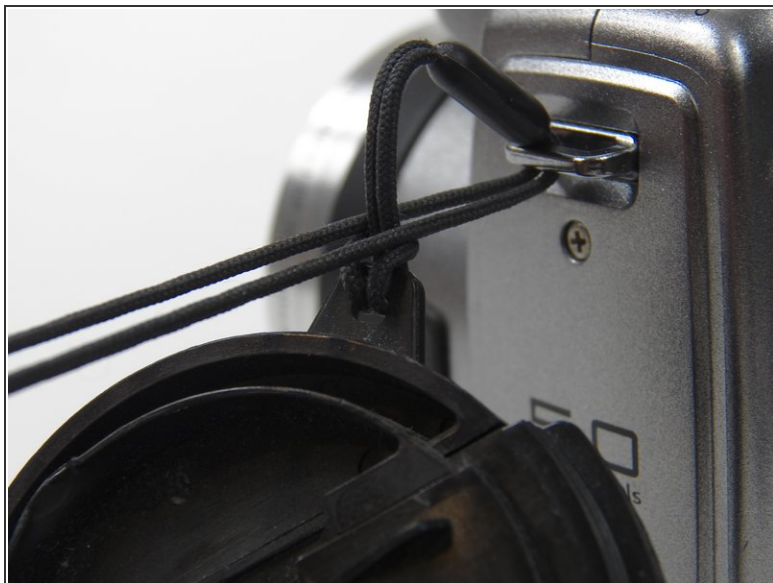

- Feed the string on top into the metal slab while pulling the loop toward you until the plastic piece stops you from pulling any further.

Step 6

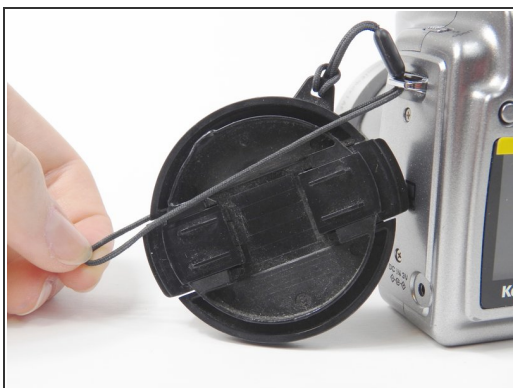

- Separate the two pieces of the loop and pull the lens cover up in between them.

Step 7



- Pull the lens cover and the sting will come out of the metal slab.

Step 8 — Back Cover




- ⓘ Place lens cover back on the lens to prevent scratches or debris but leave string detached.
- Remove a total of six 3.968mm Phillips #00 screws. Two each from the left side, bottom, and right side.

Step 9





- Pull the back cover away from the front cover.
- You may need to use a plastic opening tool as a wedge if it does not come apart by easily.

Step 10

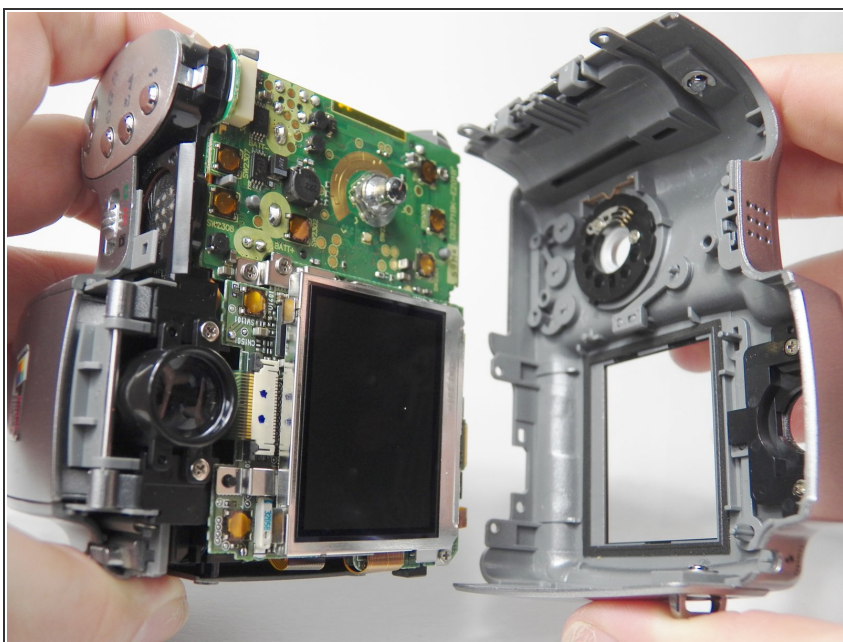



- Separate the back cover from the front cover.

Step 11 — LCD Screen

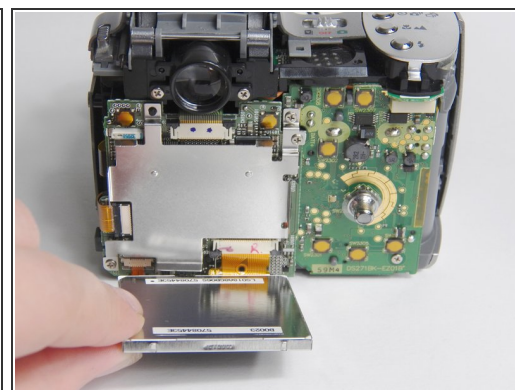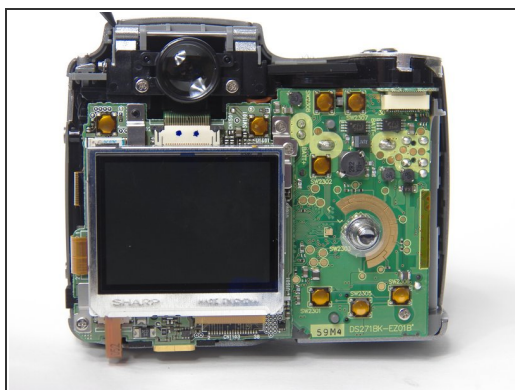


- Flip the LCD screen down.

Step 12

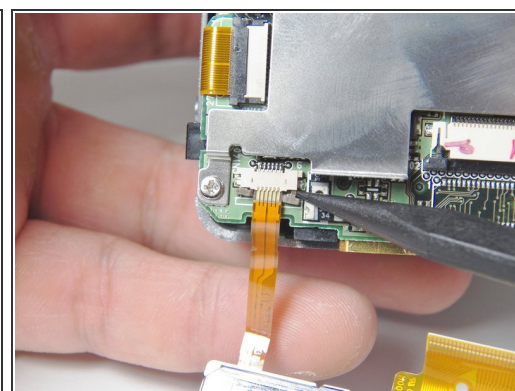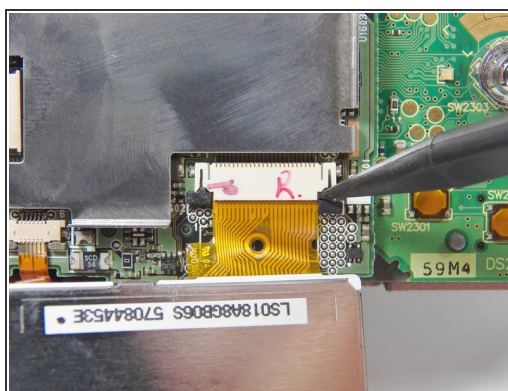

- Locate the two sets of black tabs connecting the flat orange cables to the motherboard.
- Slide the 2 sets of tabs down with a tool or your finger to release the cables.

Step 13

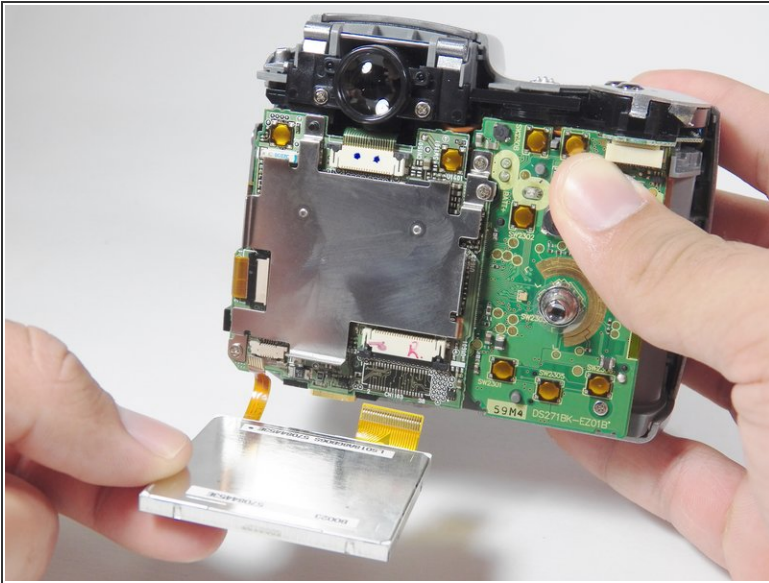

- Gently pull the LCD screen down until the orange cables separate from the motherboard.

To reassemble your device, follow these instructions in reverse order.