




# Uniden EXP 371 Keypad Replacement

If for any reason the buttons on the Uniden EXP 371 are faulty this guide will explain how to replace the keypad.


Written By: Lucas Mohsen

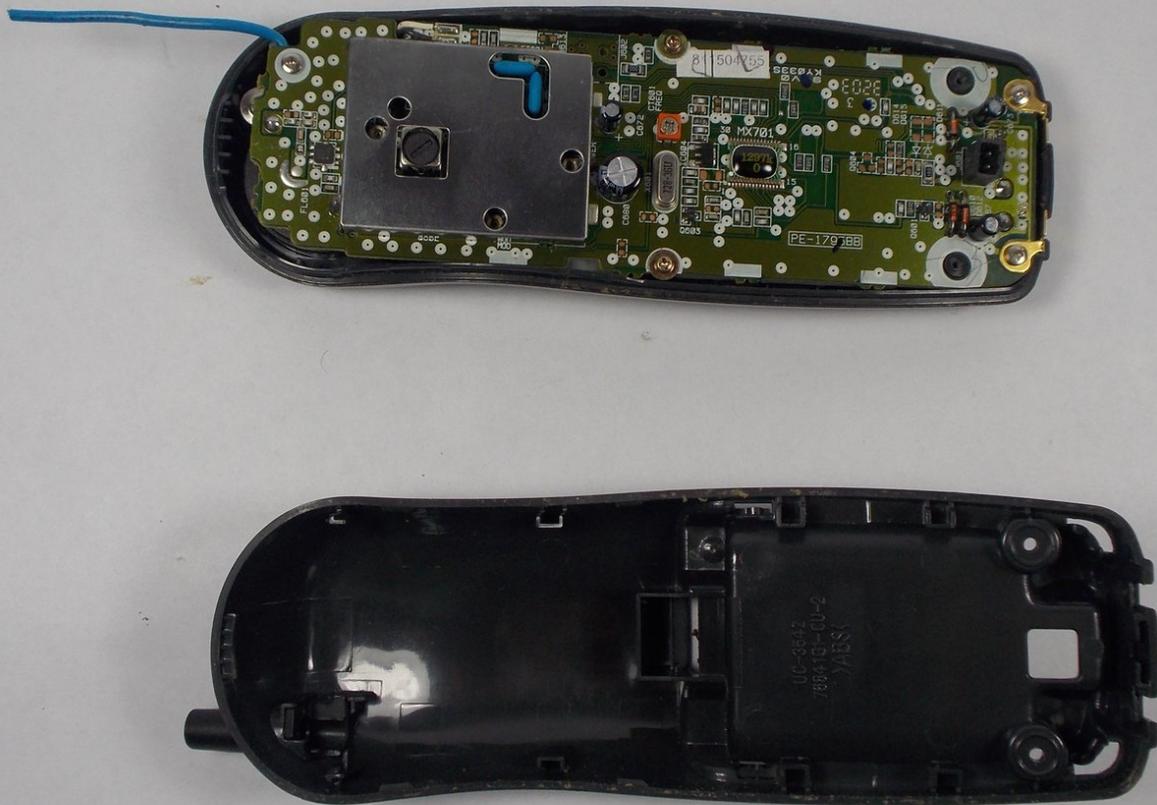

 **TOOLS:**



- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Dissassemble the Uniden EXP 371 phone

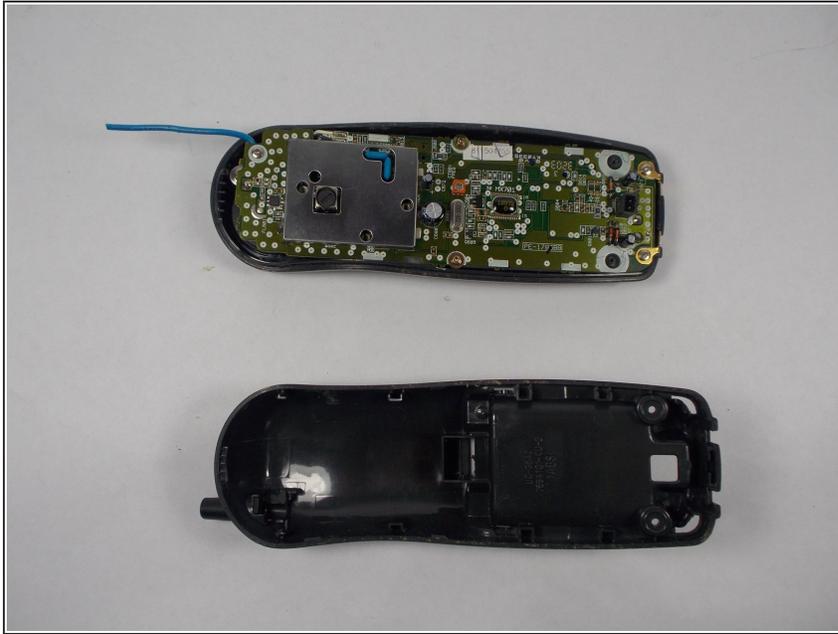



- Refer to the Uniden EXP 371 phone disassembly guide to open the plastic casing.

## Step 2

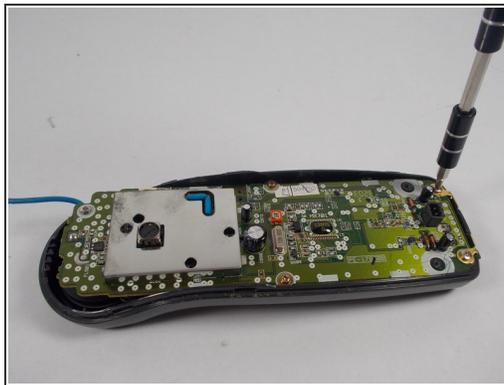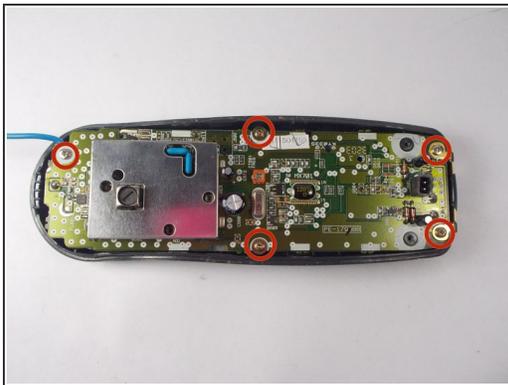


- Use the Phillips #1 screwdriver to unscrew the screws located at the bottom left and right hand corners and top of the phone; as shown in the image.

### Step 3

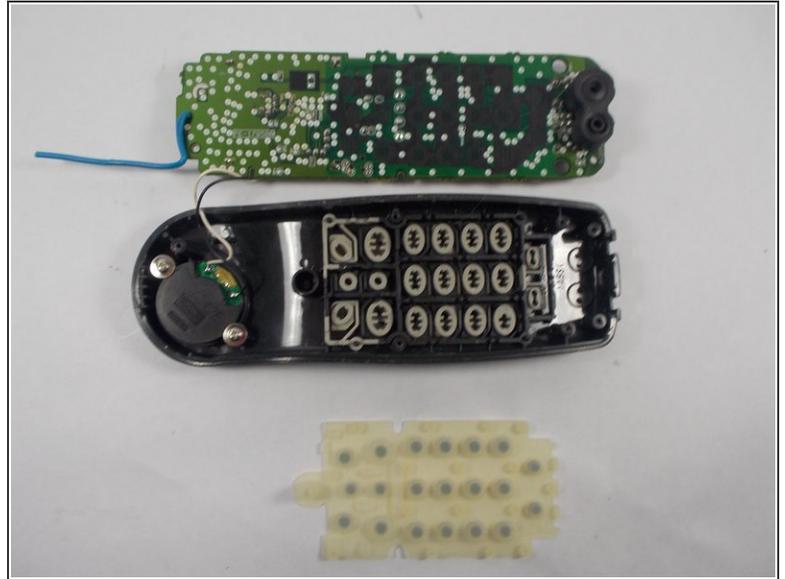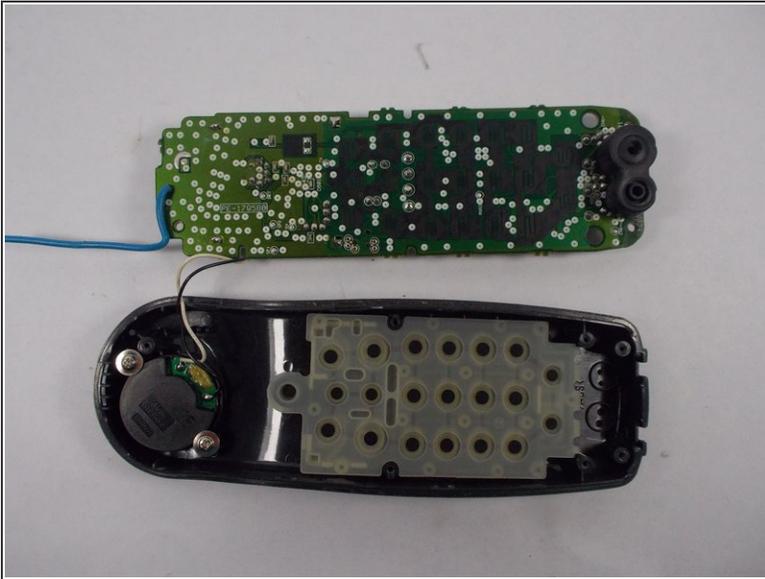


- Remove the motherboard once the screws holding it in place are undone.
- Once the motherboard has been removed, remove the rubber button pad located behind the motherboard and in front of the dial pad.

### Step 4

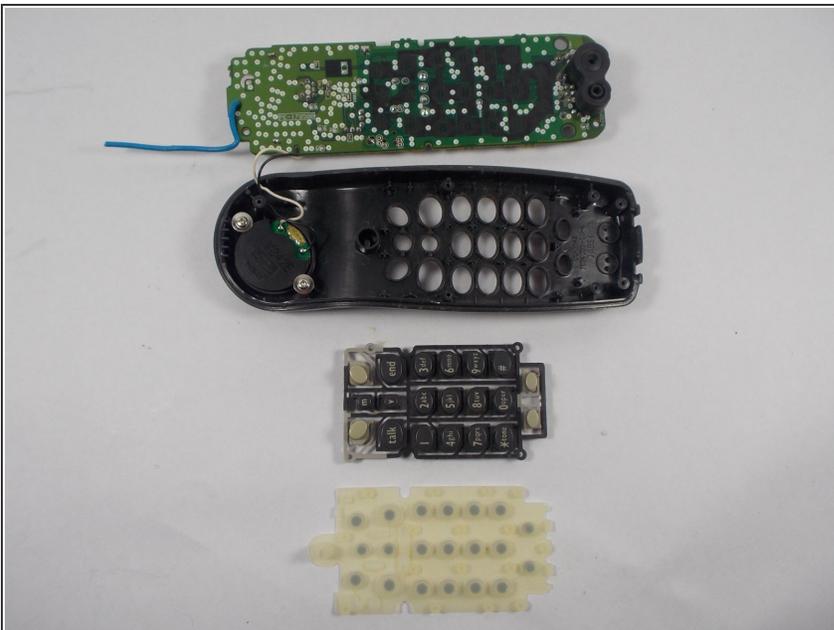

- After the rubber pad is removed remove the dial pad (buttons) from the phone.

## Step 5 — [OPTIONAL ] Soak dial pad in mixture of soap and water

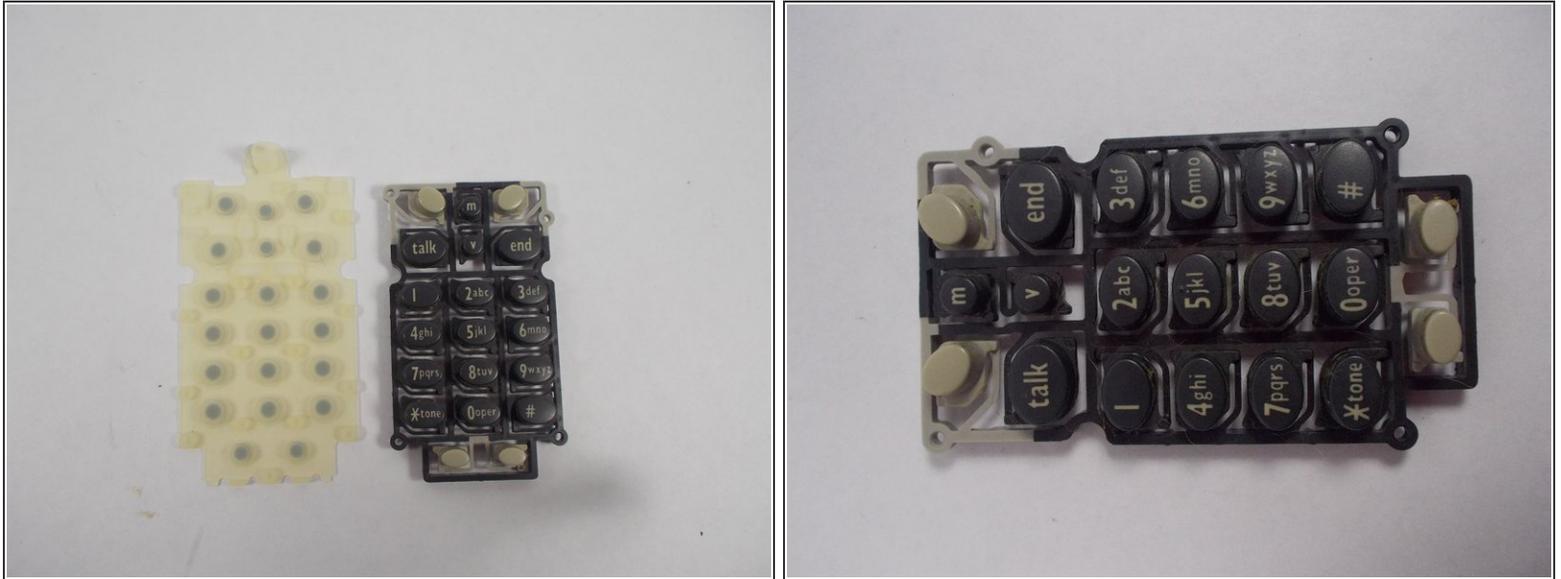

- If the buttons are sticky; leaving the dial pad and/or rubber pad to soak in soap and water for 5-10 minutes will clean off any sticky residue that may be obstructing the buttons.
- Make sure to properly dry the dial pad and rubber pad of any soap/water before reattaching them to the phone to avoid the risk of short circuiting.

## Step 6 — Order a New Dial Pad



- If sticky residue is not the problem the next step is to visit <http://udn.factoryoutletstore.com> and search for the UNIDEN EXP 371 and order a new dial pad.

To reassemble your device, follow these instructions in reverse order.