


# iPhone 6 Plus Speaker Replacement

Prereq only, battery and logic board removed.

Written By: Walter Galan

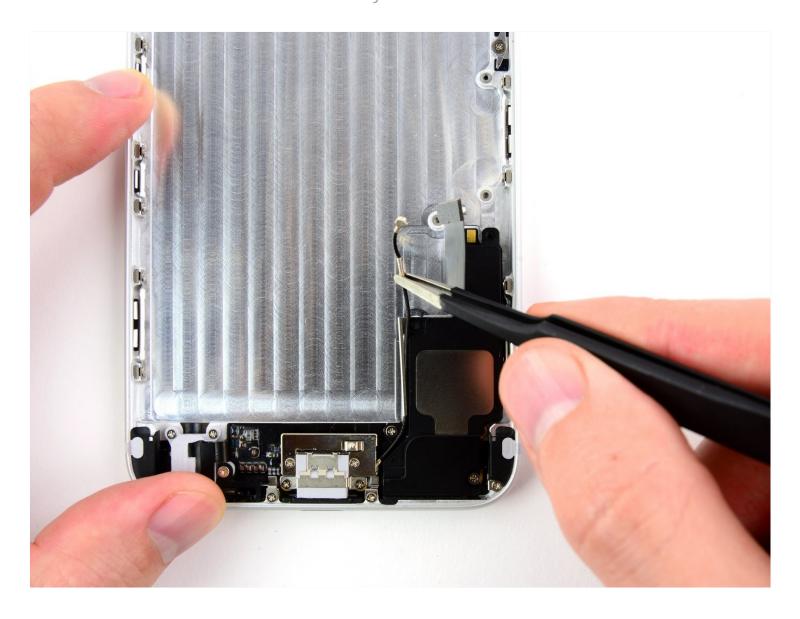


#### **INTRODUCTION**

Prereq only, battery and logic board removed.

#### TOOLS:


Phillips #000 Screwdriver (1) iFixit Opening Tool (1) Tweezers (1)

### Step 1 — Speaker

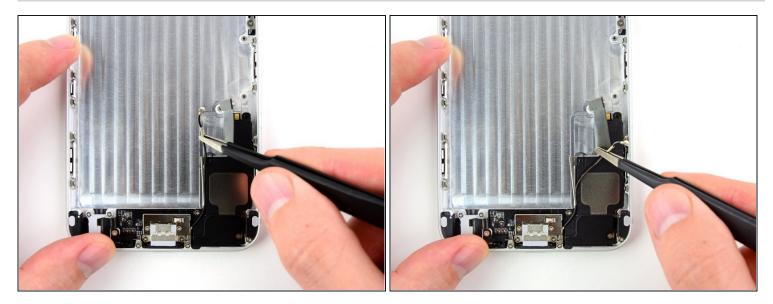


• Grasp the antenna connector with a pair of <u>tweezers</u> and carefully begin de-routing it from its channel on the speaker.

### Step 2

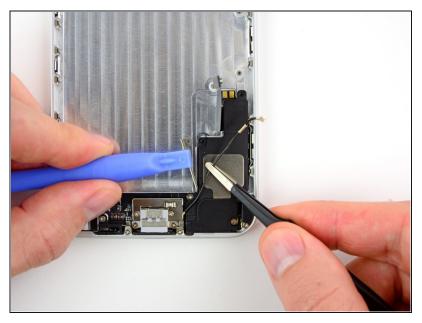


i To fully de-route the antenna connector, you may need to gently pull back the metal clip securing it to the speaker assembly.

### Step 3

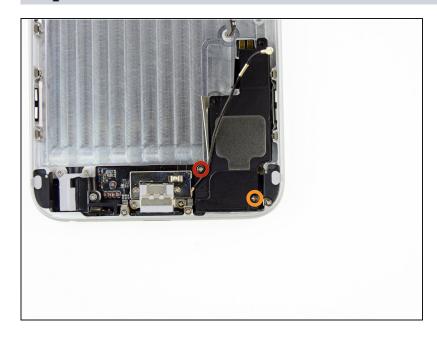

- Remove the following screws securing the speaker to the rear case:
  - One 2.3 mm Phillips #00 screw
  - One 2.8 mm Phillips #00 screw

## Step 4

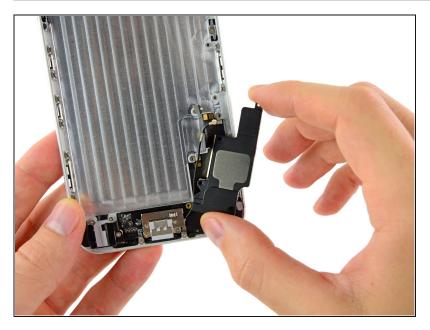

• Lift and remove the speaker out of the iPhone.

To reassemble your device, follow these instructions in reverse order.