




Greist Buttonholer Fork Arm Spring Replacement

A guide to replace the spring in the fork arm.

Written By: Michael Sykes

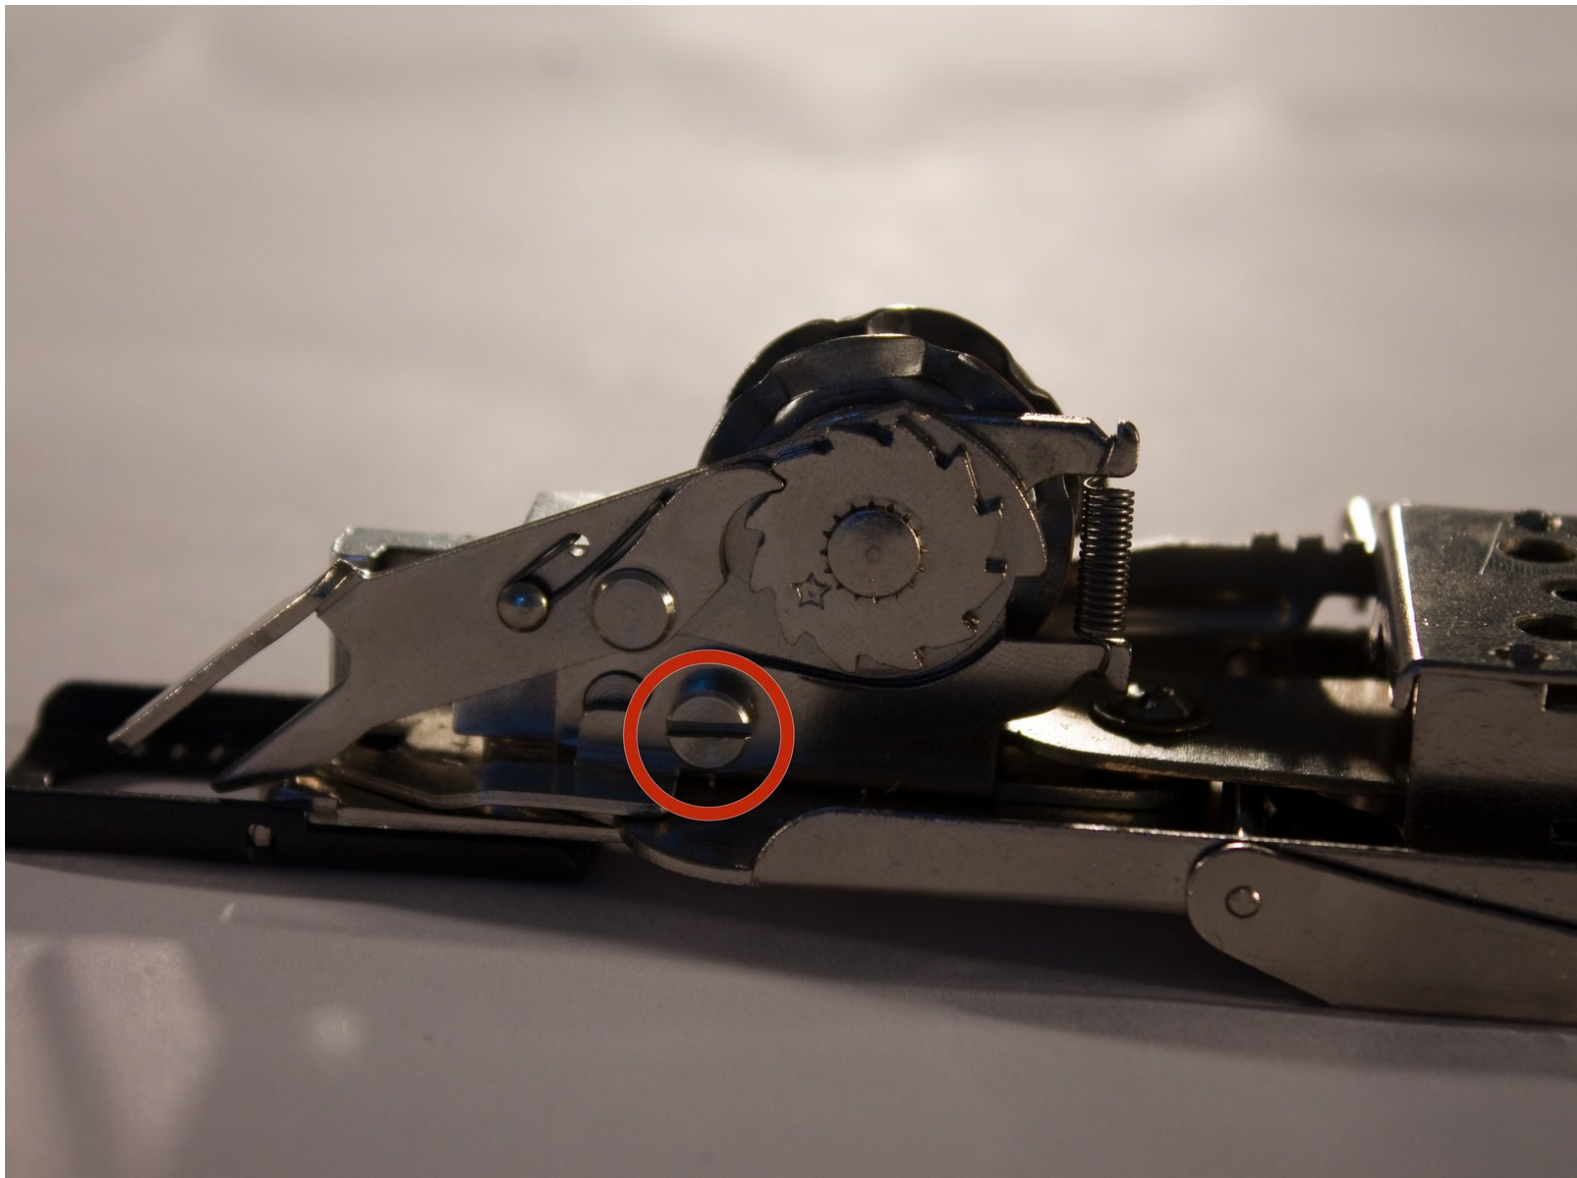

INTRODUCTION



If the fork arm in The Buttonholer is not moving properly while being operated, chance are you need to replace the spring holding the arm.



TOOLS:



- [Flathead Screwdriver](#) (1)
-

Step 1 — Unscrew the Lower Hook Holding the Spring

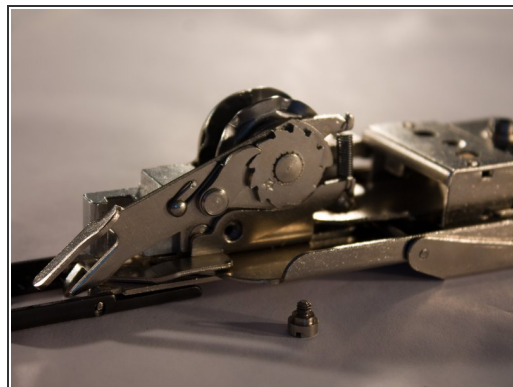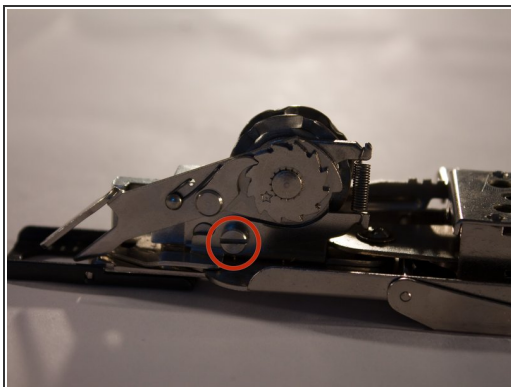

- Unscrew the screw located underneath fork arm using a Flathead screwdriver.

Step 2 — Remove the Lower Hook

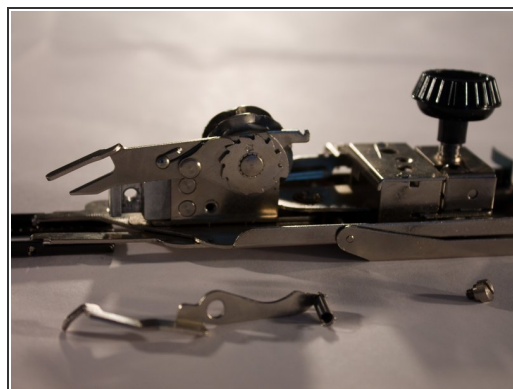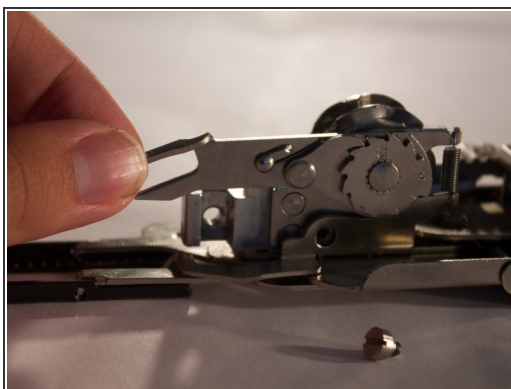

- Raise the fork arm so that it is parallel with the upper hook.
- Turn the lower hook towards you from the bottom, and remove.

Step 3 — Replace the Spring



- Remove the old spring from the hook.
- Add the new spring to the hook.

To reassemble your device, follow these instructions in reverse order.