



Acer Iconia B1-711 Camera Replacement

Acer Iconia B1-711 Camera Replacement

Written By: ZFix



INTRODUCTION

This guide will show you how to open the tablet and remove / replace the camera.

[Please SUBSCRIBE to my channel ツ](#)

[video: <http://youtu.be/8-djJ2aXa60>]

TOOLS:

- [Spudger](#) (1)
 - [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Back Cover




- Switch-off the tablet.
 - Remove any SIM and/or Memory Card.
 - Start opening near to the Volume Up/Down buttons. It's more well to use a plastic opening tool to avoid damaging the cover.
- ⚠ When lifting the cover, be careful not to tear the Loudspeaker cable at the bottom right side.
- Disconnect the Loudspeaker cable from the Logic board.

Step 2




- Before doing anything, disconnect the battery.

Step 3 — Camera

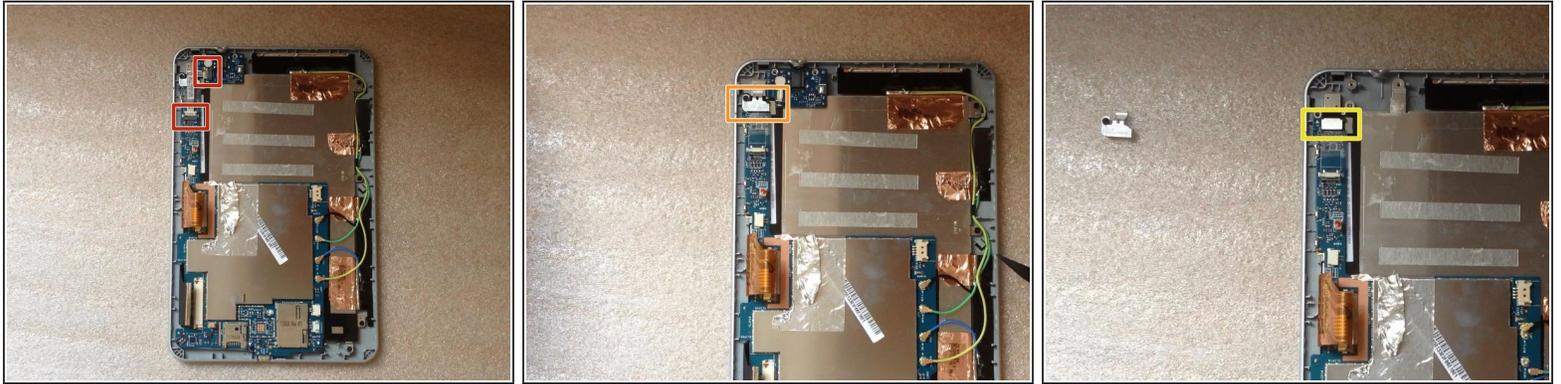

- Remove the Audio jack flex cable.
- Remove the metal plate which is placed on the camera connector.
- Disconnect the camera flex cable.

Step 4

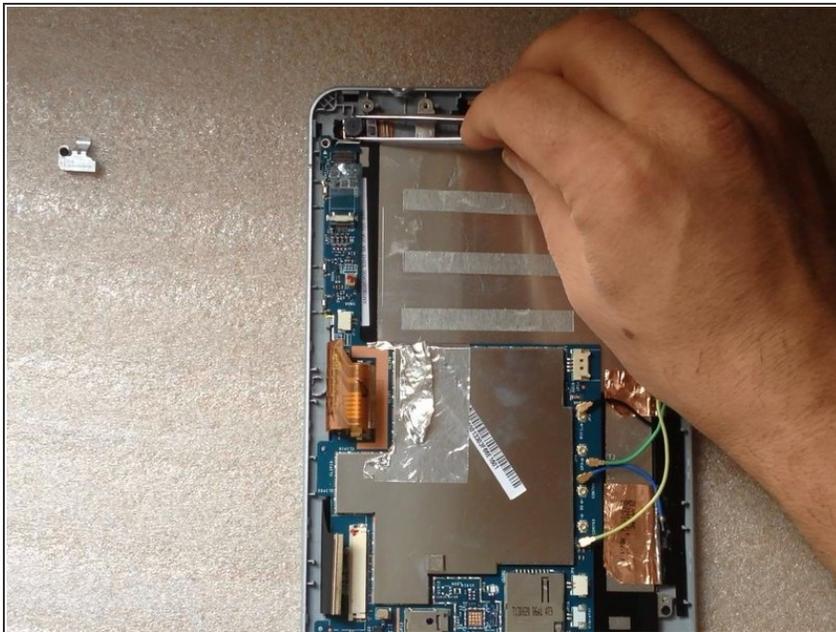

- Remove the camera.

To reassemble your device, follow these instructions in reverse order.