




# Sony Ericsson xPeria Active Screen Replacement

This guide will show how to replace the screen in a Sony Ericsson Xperia Active.

Written By: Alex Tobin

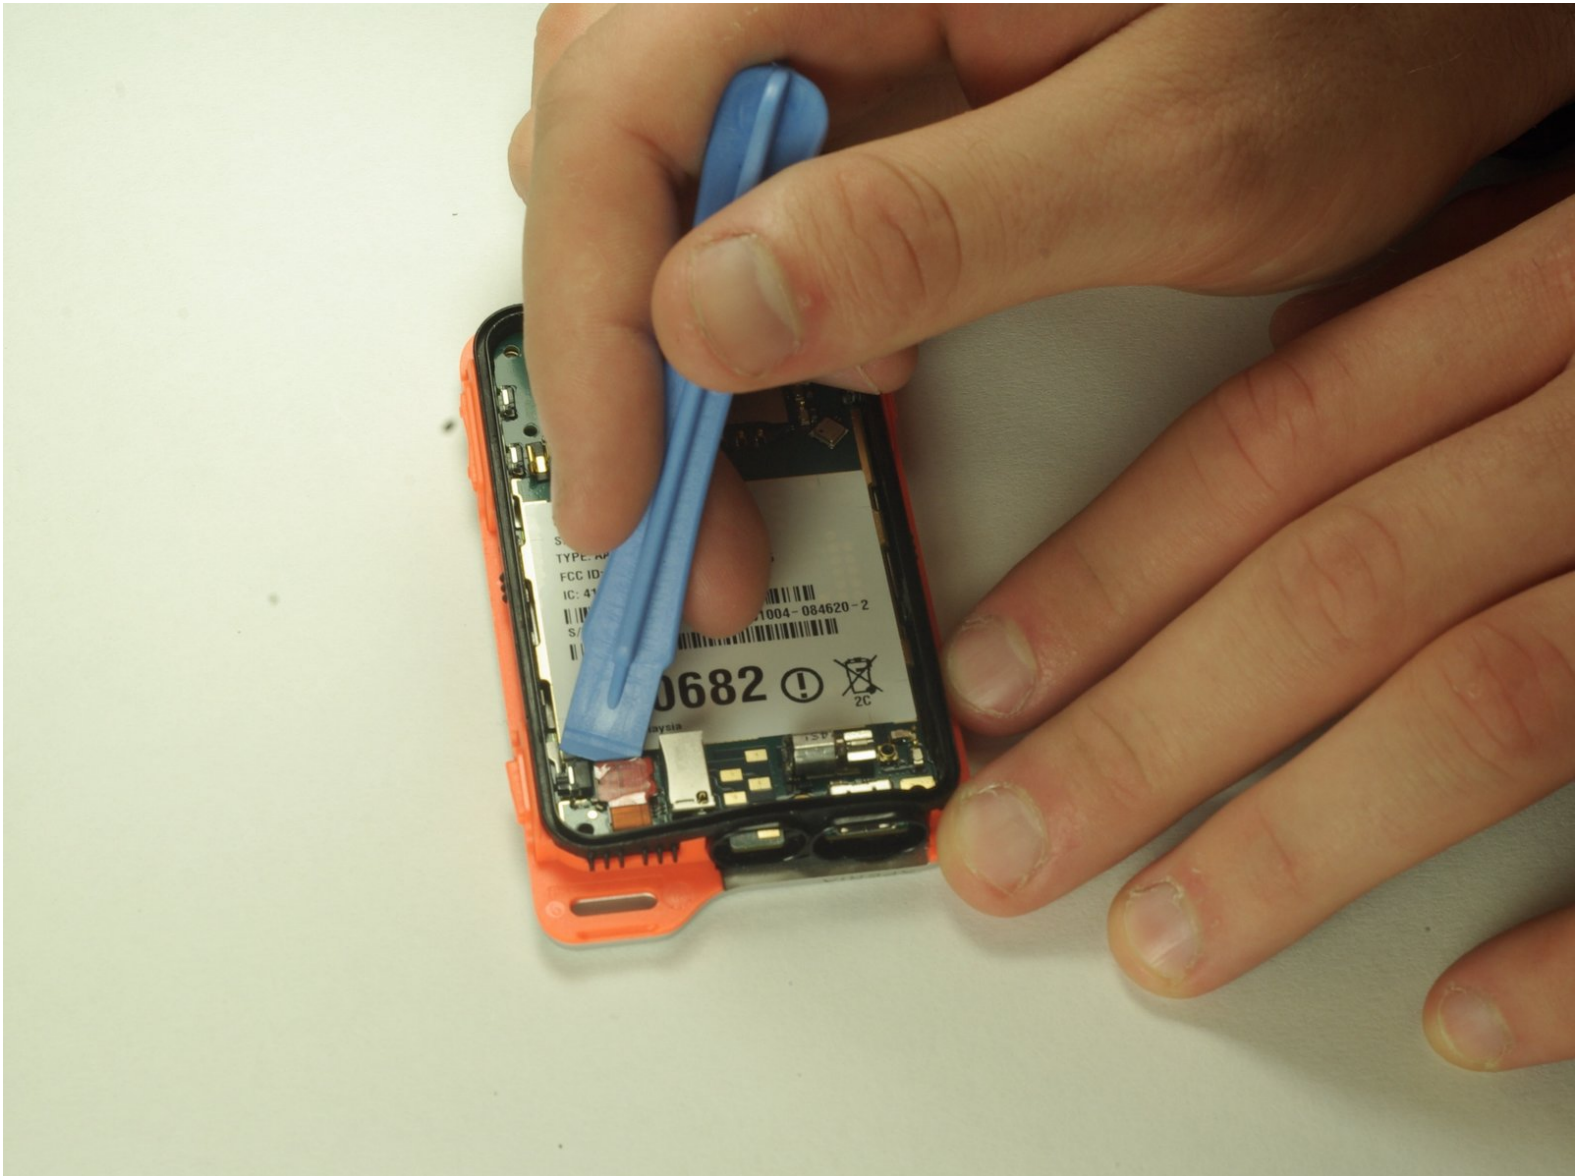

# INTRODUCTION

Sometimes, the screen can become cracked, damaged, or just simply not work. This can be frustrating, but never fear, as this replacement guide will make everything easier.

---

## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [T5 Torx Screwdriver](#) (1)
  - [T6 Torx Screwdriver](#) (1)
-

## Step 1 — Remove the back cover.



- Open the flaps and remove the back cover using the plastic opening device.

## Step 2 — Remove inside plastic battery cover.



- Remove the battery shield with the plastic opening device.



## Step 3 — Remove the battery



- Remove the battery.

## Step 4 — Unfastening The Motherboard Cover





- Unscrew the 5mm screws with the T5 head.
- Unscrew the 6mm screw with the T6 head.

## Step 5 — Removing The Motherboard Cover



- Remove the black cover with the plastic opening tool.
- Remove the headphone jack from its slot.


## Step 6 — Screen

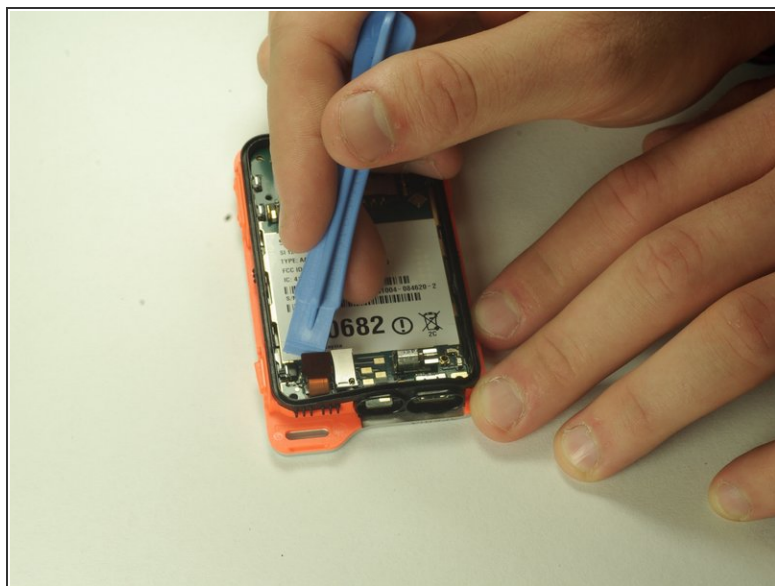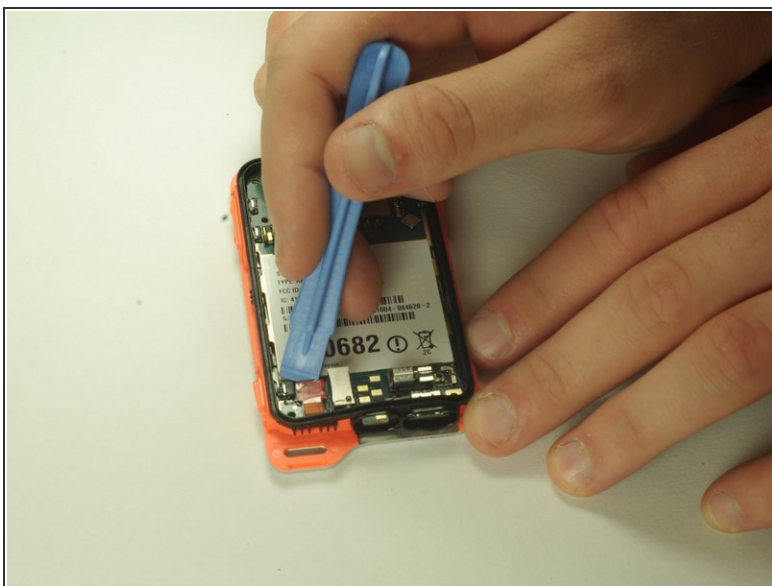

- Unplug the power cable by carefully prying it away from the motherboard.





## Step 7

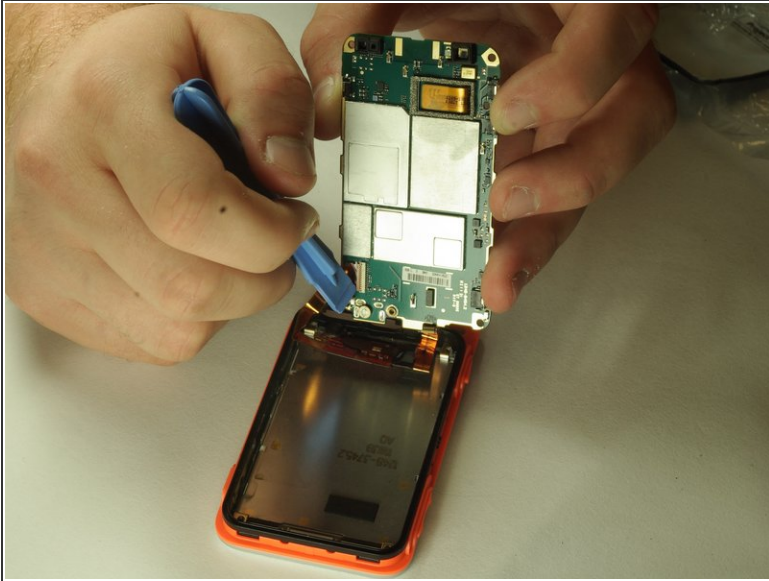


- Remove the power strip on the back side of the motherboard.

## Step 8 — Remove back screen shield

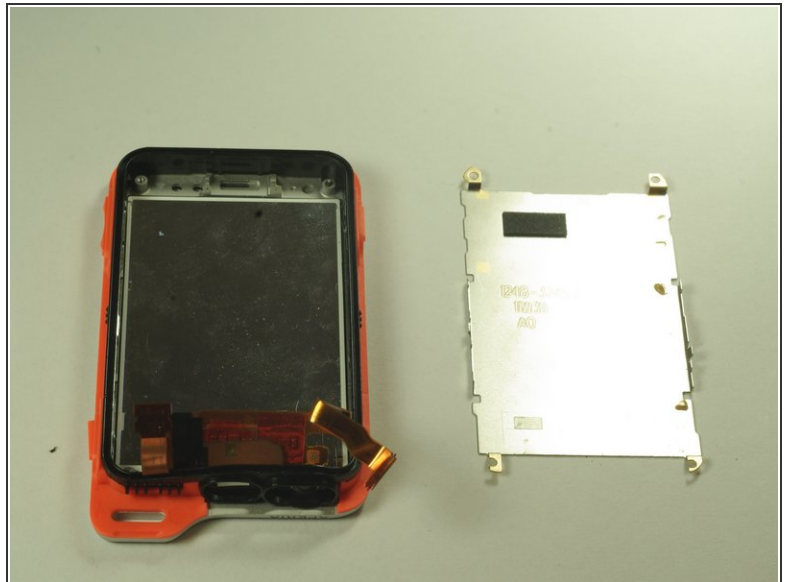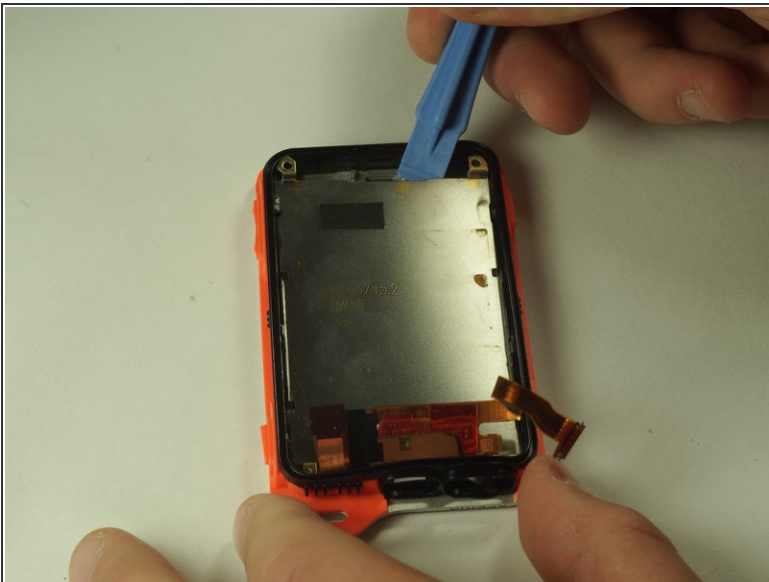

- Remove the shield.

## Step 9 — Remove the screen module

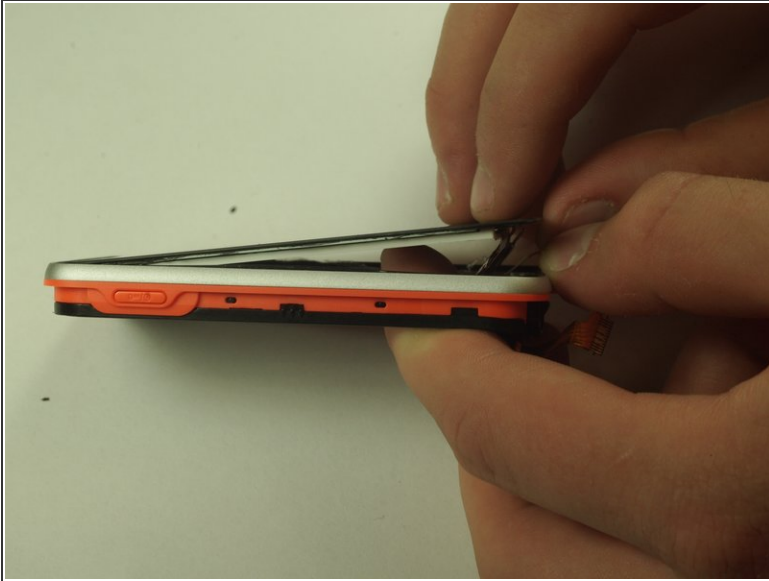

- Push the screen through the front of the case, gently.
- It may be a little tough, just work your way around the edges of the screen until it separates from the main case.

To reassemble your device, follow these instructions in reverse order.