



# Sony Cyber-Shot DSC-W120 Back Case Replacement

This guide shows how to remove the camera's back case.

Written By: Dana Sanchez





## TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Front Case



- Unscrew the screws on the right side of the camera.

## Step 2

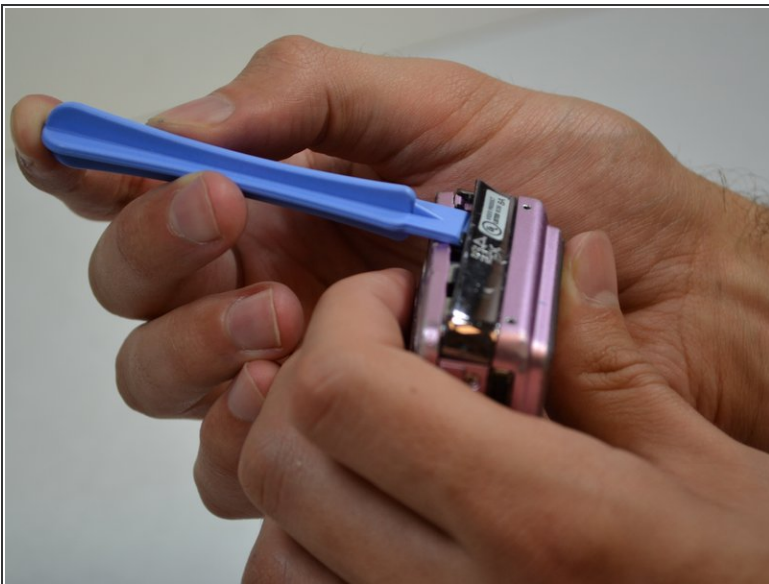

- Using a plastic opening tool, lift and remove the silver piece on the right side of the camera.

### Step 3



- Use a plastic opening tool to push the tabs on each side of the front case forward.
- Remove the front case.


### Step 4 — Back Case



- Lift and remove the silver piece on the left side of the camera with a plastic opening tool.
- Unscrew the two screws on the left side of the camera.



## Step 5

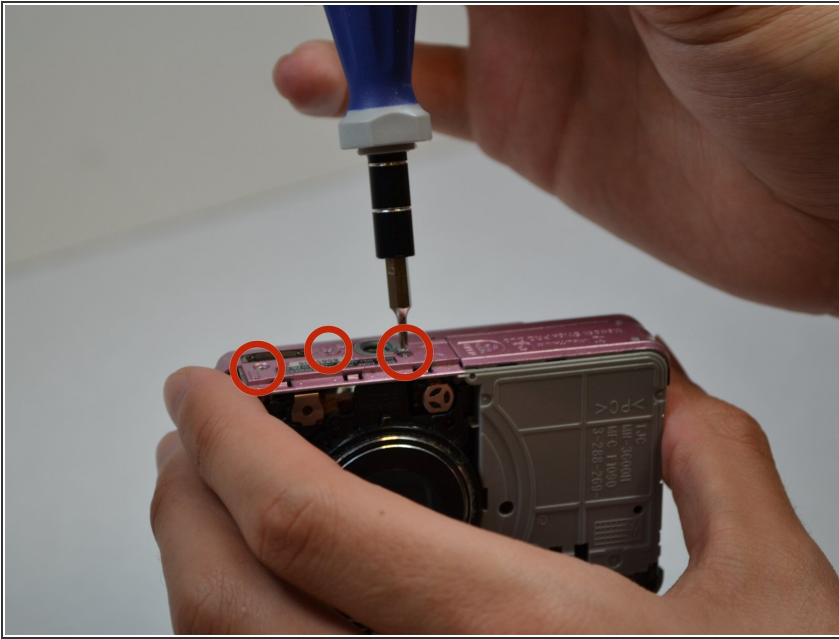

- Unscrew the three screws at the bottom of the camera.

## Step 6



- Using a plastic opening tool, carefully separate and remove the back case.

To reassemble your device, follow these instructions in reverse order.