




# Disassembling Panasonic GU87 LCD Main Board

Written By: Van

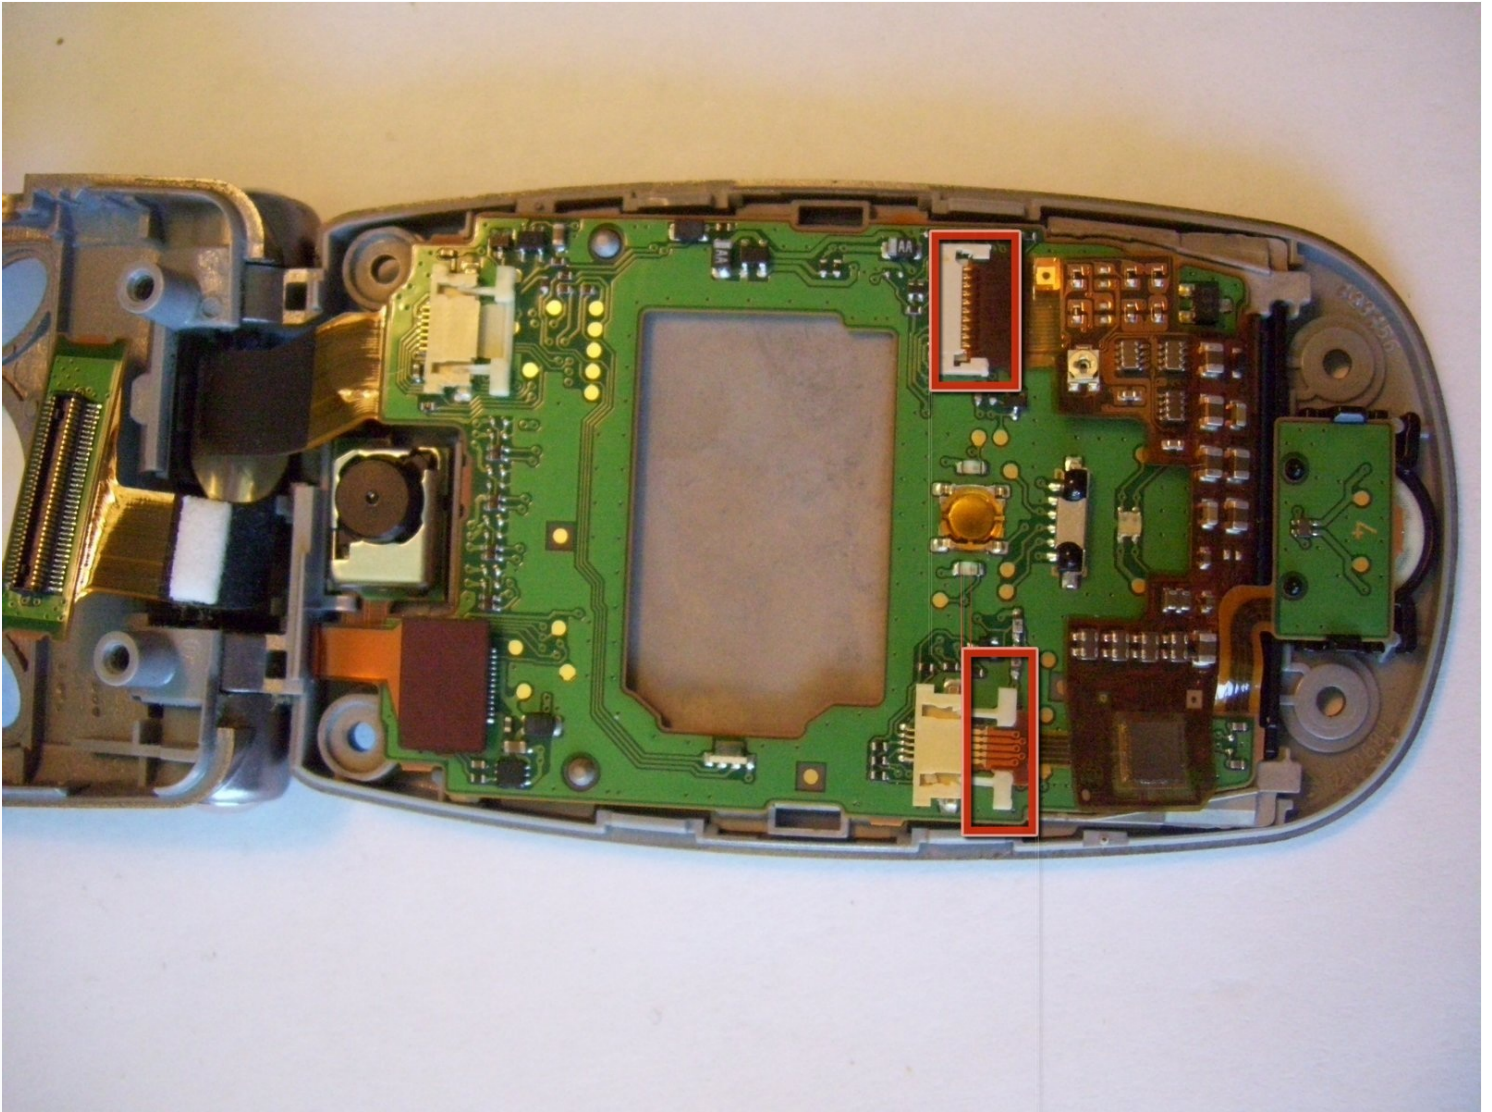

---

## **TOOLS:**

Tri-point Y1 Screwdriver (1)

Tweezers (1)

Tri-point Y0 Screwdriver (1)

iFixit Opening Tool (1)


---

### Step 1 — LCD Cover removal




- Remove the four rubber screw covers from encircled locations.
- Using a #0 tri wing screwdriver, remove the screws previously hidden below the rubber covers.
- If you have difficulties finding this screwdriver, it is commonly sold as a Nintendo Gameboy/Wii screwdriver.

## Step 2

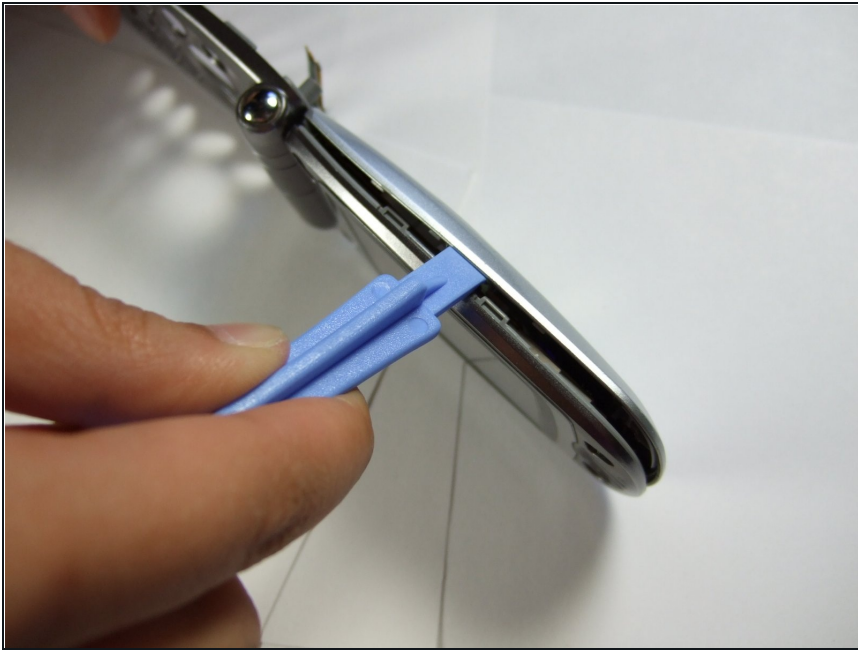

- Pry the case open using iPhone tool (as shown), fingernails, small flathead screwdriver, etc.
- Be mindful of location and magnitude of applied force, so as not to damage the case.


## Step 3 — LCD

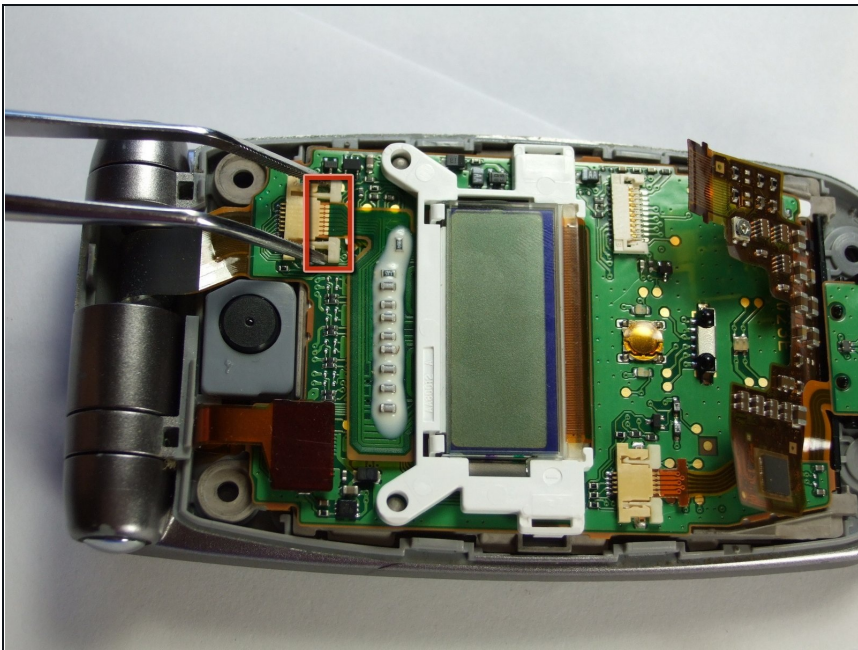

- Unlock the minor LCD connector by applying bilateral pressure with [tweezers](#), as shown.




## Step 4

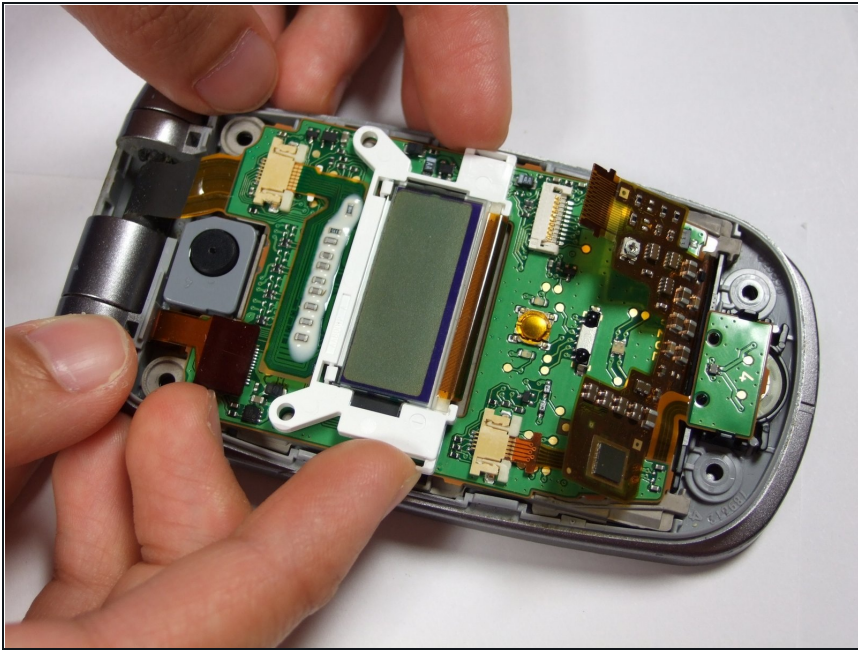


- Use fingernails to pry off minor LCD mount, as shown.
- Remove the minor LCD

## Step 5 — Main Board

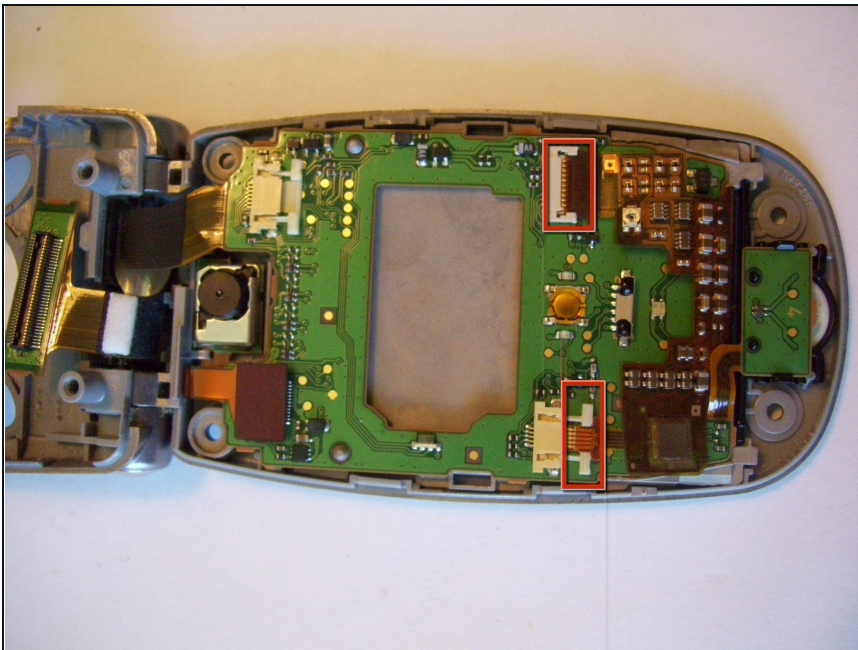


- Unlock the LCD connectors shown in red boxes on the picture .
- Use [tweezers](#) as necessary.

## Step 6

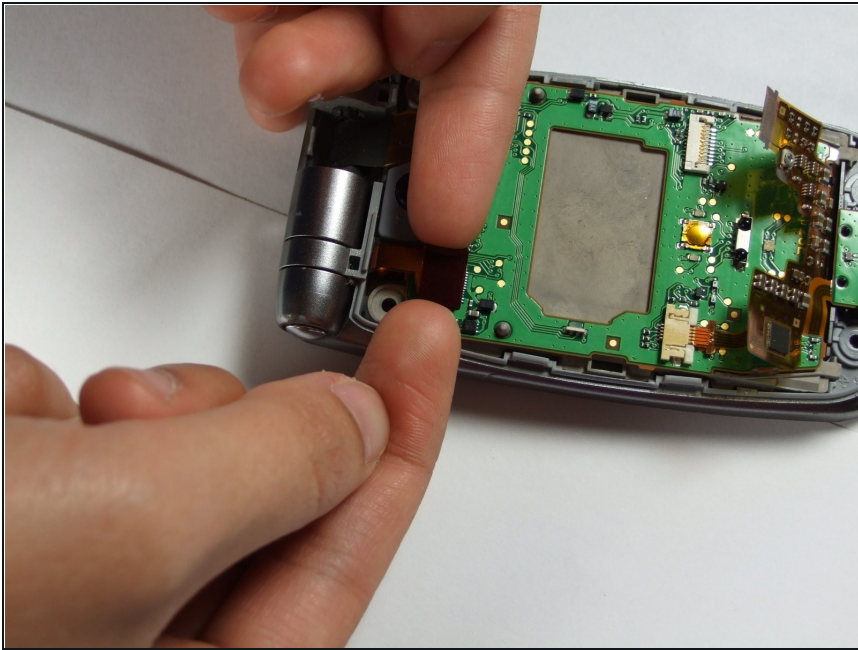

- Place finger nails on the connector tab as shown.
- Lift the connector tab up.

## Step 7

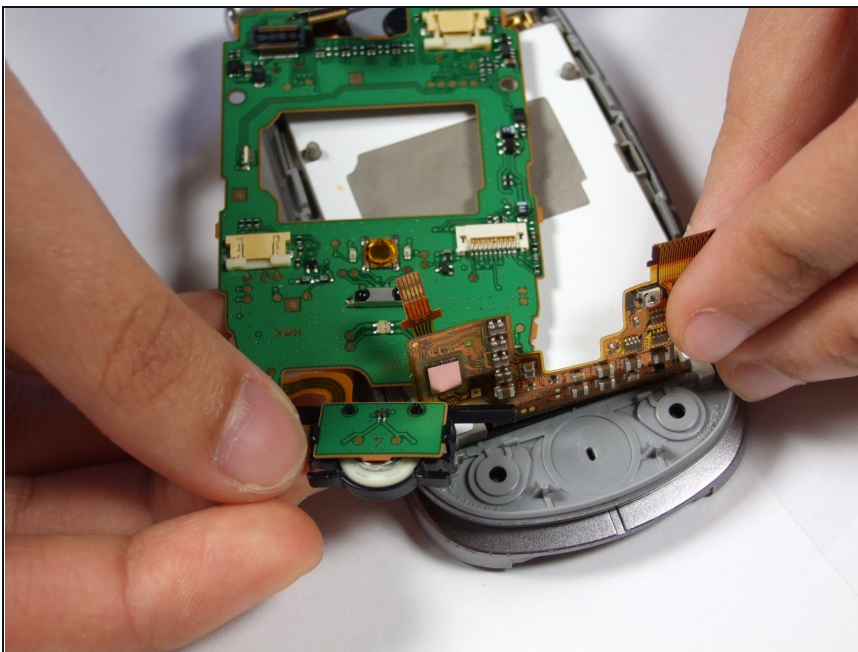

- Pull/pivot the LCD main board as shown in order to remove.

---

To reassemble your device, follow these instructions in reverse order.

