



Sony Action Cam HDR-AS15 Battery Replacement

If your camera will not turn on, consider replacing the battery. Here, you will learn how to replace the battery for the Sony HDR-AS15.

Written By: Justin Colean



INTRODUCTION

Sometimes batteries die. In this guide, we will show you how to replace the battery in the Sony Action Cam HDR-AS15. This is a relatively simple guide, not requiring the removal of any screws.

TOOLS:

- [Tweezers](#) (1)
-

Step 1 — Battery



- To access the battery, gently pry open the rear cover of the action cam.

Step 2



- Using a pair of tweezers, firmly grip the protrusion where the PULL signifies and remove the tray and battery.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2022-08-21 06:11:36 AM (MST).

