



# Magic Bullet NutriBullet Base Replacement

Replace the bottom section of the NutriBullet base

Written By: Angela Wong



---

## INTRODUCTION

If you notice any sharp, moving components outside of your NutriBullet base, then use this replacement guide to learn how to remove and replace the base.

---

### **TOOLS:**

- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Base



- Unplug the device from the wall and turn the powerbase upside down.

## Step 2




- Unscrew the four 10mm screws located on the bottom of the powerbase using the Phillips Head #2 Screwdriver.

### Step 3



- Once the screws are removed, use slight tension to pull the plastic base up.

 Make sure the cord does not get caught or frayed by the fan, which is located in the center of the power base.

To reassemble your device, follow these instructions in reverse order.