



Circo Monkey Alarm Clock Battery Replacement

Replacing the batteries is the simplest option for fixing the device, but it can be a little tricky.

Written By: Aaron Farnsworth



INTRODUCTION

We will be opening the battery compartment and replacing the two AAA batteries.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Use the Phillips #00 screwdriver to loosen the 6.8 mm screw.

Step 2

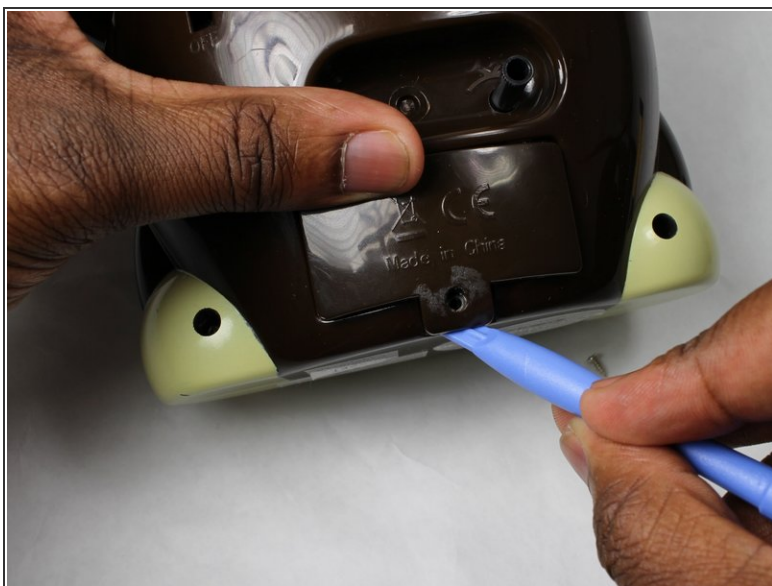

- Use the plastic opening tool to pry up the battery compartment cover.

Step 3



- Once compartment is open, remove the two AAA batteries.

To reassemble your device, follow these instructions in reverse order.