



Asus X200MA Fan Replacement

Written By: Vanessa Garcia



 **TOOLS:**

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Back Panel



- Remove the following six screws:
 - Six 4 mm screws using a Phillips #0 screwdriver.
 - Remove the following one screw:
 - One 14 mm screw using a Phillips #0 screwdriver.
- The 14mm screw goes in the center.

Step 2



- Use a plastic or metal spudger to separate the keyboard from the back panel and lift the keyboard out of place.

Step 3 — Battery




- Take two rubber caps off the back side of the laptop.

Step 4



- Remove the following two screws under the rubber caps.
- Two 14 mm screws using the Phillips #0 screw driver.

Step 5

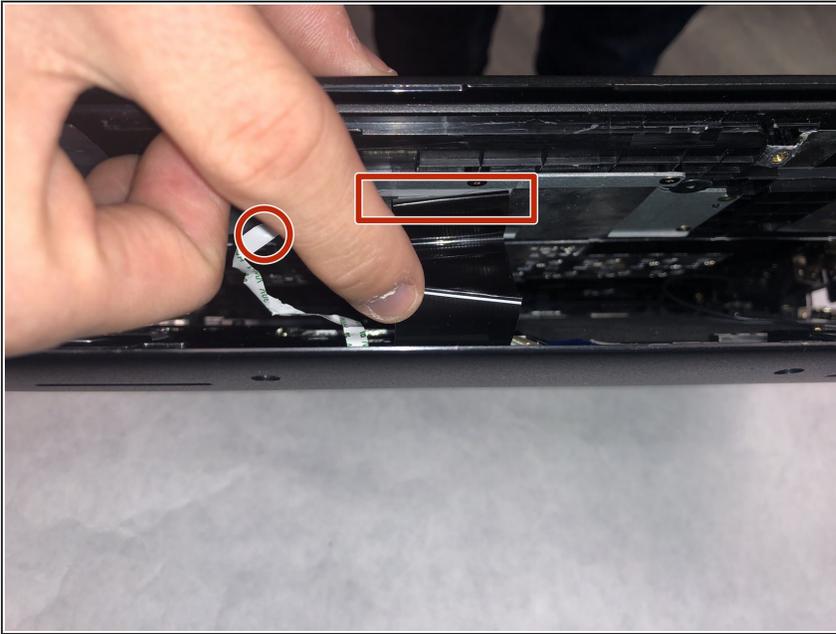


- Flip up the following:
 - The two latches holding the two cables shown(white and black)
- Pull the cables free from the latches
- Lift the keyboard from the computer

Step 6




- Remove the following screws from the inside of the laptop:
 - Two 4 mm screws using the Phillips #0 phillips screwdriver.
 - One 5 mm screw using the Phillips #0 Phillips screwdriver located in the center a little below the battery.

Step 7

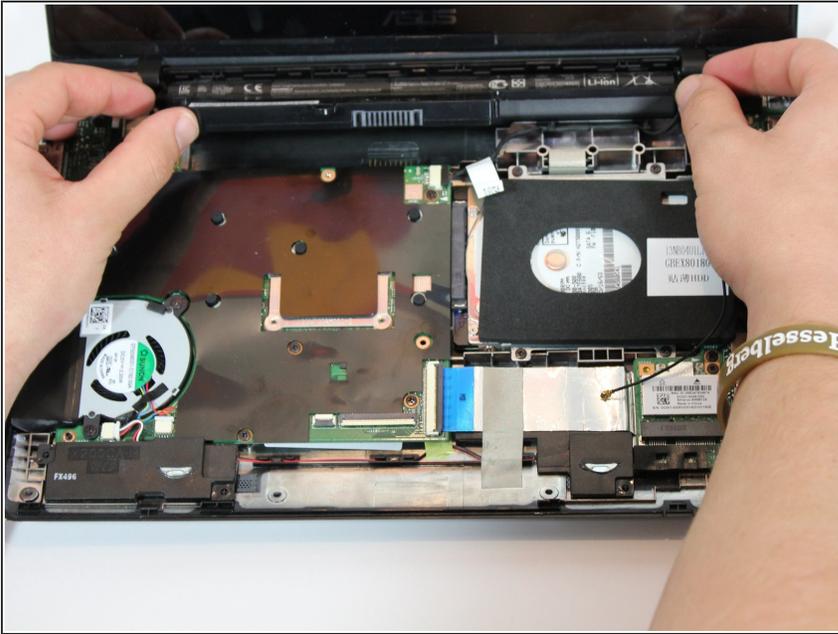

- Slide the battery up and out.

Step 8 — Fan

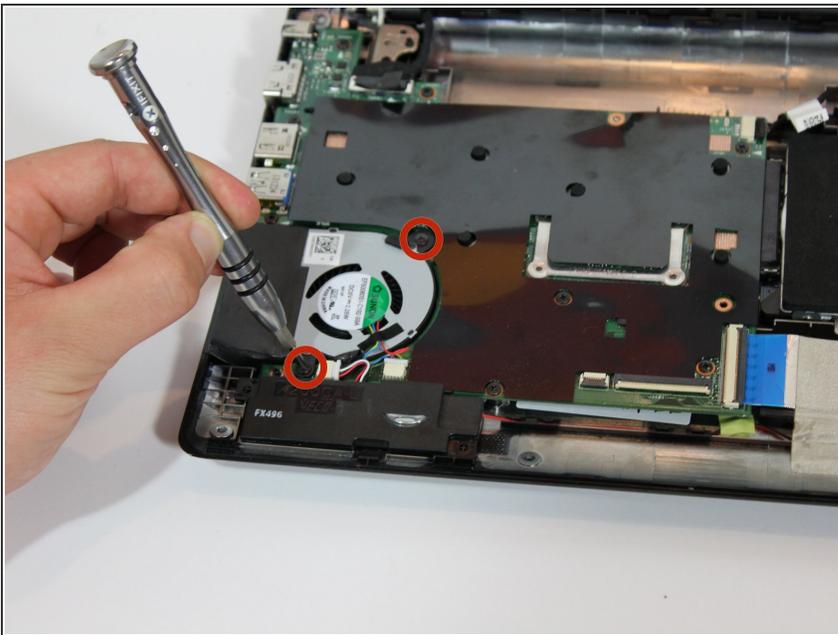


- Remove the Two 4 mm screws using Phillips #0 phillips screwdriver.

Step 9



- Unplug the set of wires located at bottom corner on fan.

Step 10

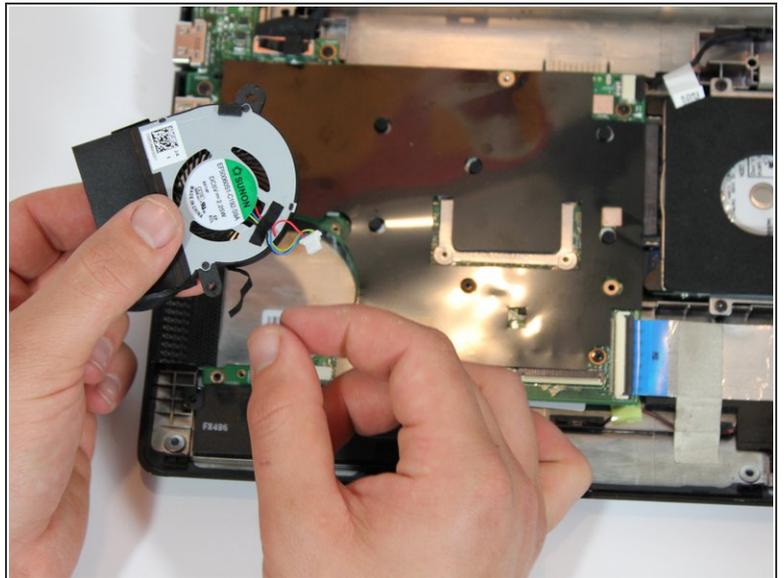

- Lift up and out to completely the remove fan component.

To reassemble your device, follow these instructions in reverse order.