




HTC MyTouch 4G Speakers Replacement

Without speakers, most uses for a phone are negated. This guide will teach you how to replace this very important piece to the HTC MyTouch 4G.

Written By: leo

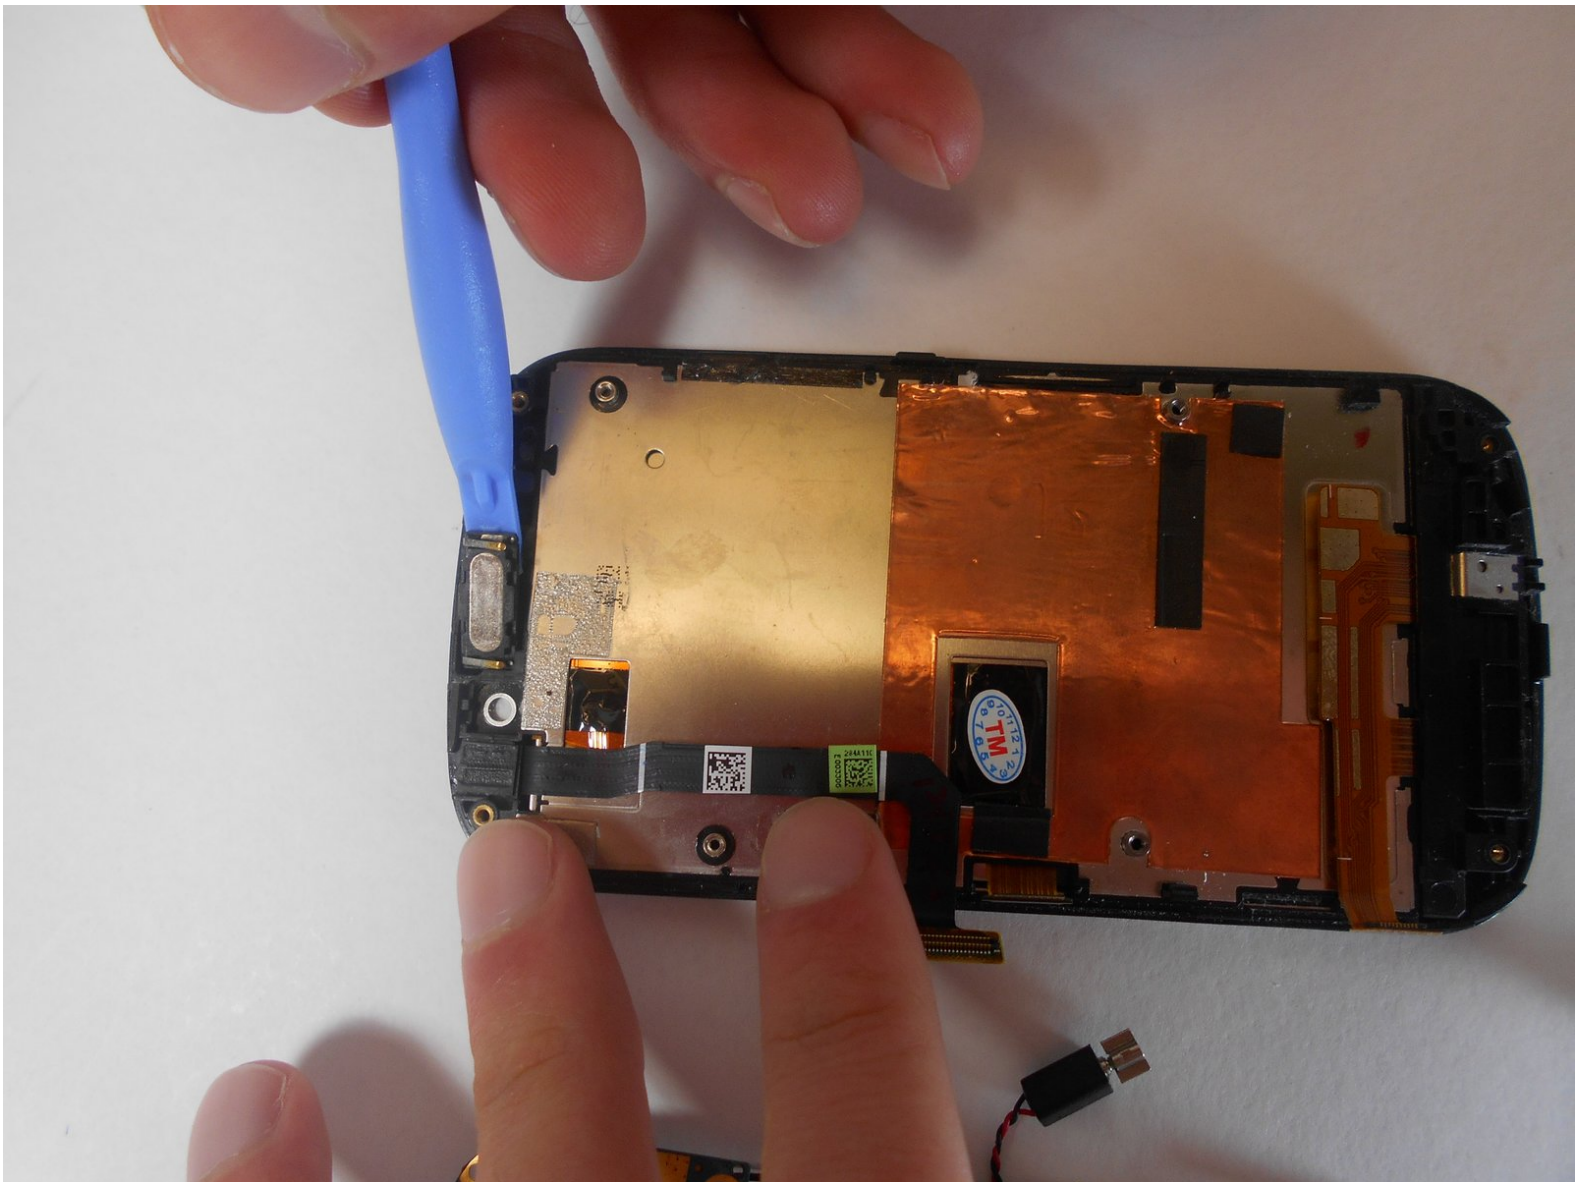

INTRODUCTION

To replace the speakers of the HTC MyTouch 4G, the Motherboard must be removed in order to get to the speakers. This guide will show how to remove the Motherboard and replace the speakers.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)



PARTS:

- [HTC MyTouch 4G Speaker](#) (1)

Step 1 — Flip Phone Over



- Flip your phone over and hold the phone with the back facing you.

Step 2 — Remove the back case.



- Place the prying tool into the notch at the bottom of the case and pull up to remove.

Step 3 — Remove the battery



- Use the plastic prying tool in the upper left-hand corner notch of the battery to remove.

Step 4 — Removing Screws




- Remove the two T5x5mm Screws with the T5 Torx Screw driver.
- Remove the one Phillips screw with the Phillips #00 Screwdriver.

Step 5 — Removing back case.



- Use the plastic opening tools to remove the back case.
- There are four T5x5mm screws. Use the T5 Torx Screwdriver to remove them.
- Using the plastic opening tools, remove the Wifi antenna.

Step 6 — Removing four T5 Screws

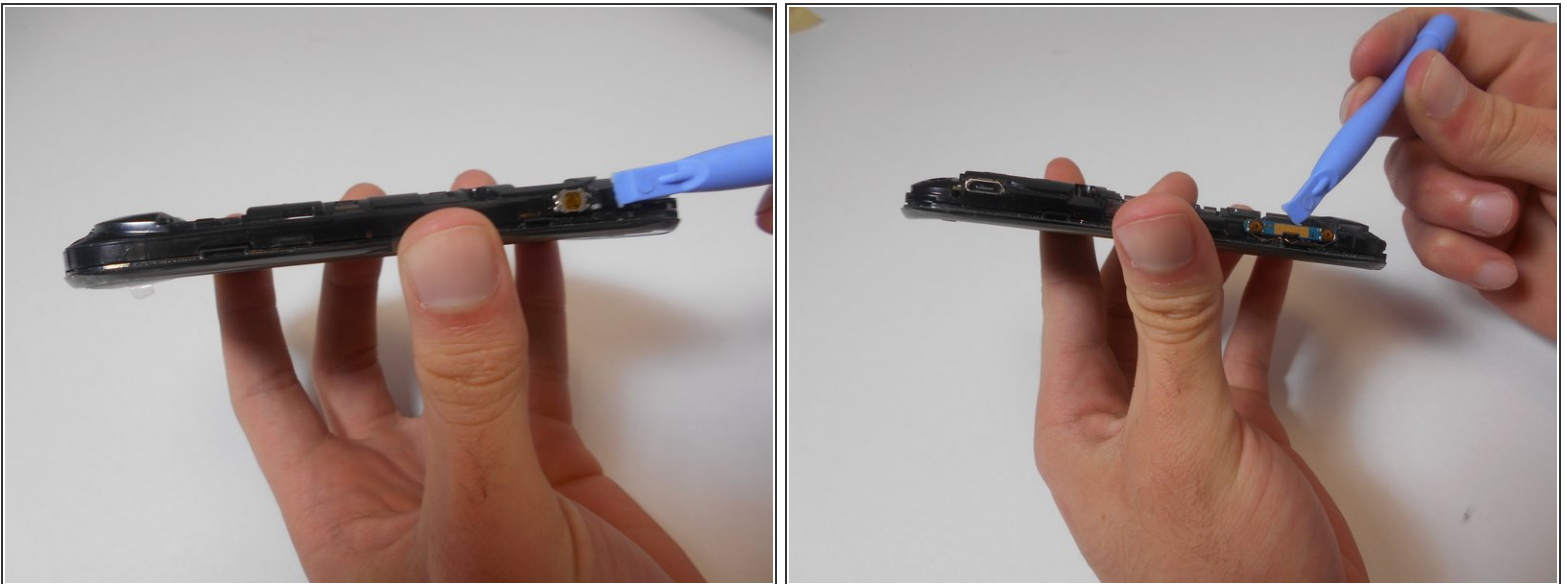


- There are three button ribbons on the phone that need to be pulled down off of the case.
- With the plastic opening tools, pull the button ribbons down away from the frame without completely removing them.

Step 7




- After making sure the button ribbons are away from the frame, insert the plastic opening tool into the frame and remove it.
- Remove two Philips screws holding the Motherboard in place.

Step 8

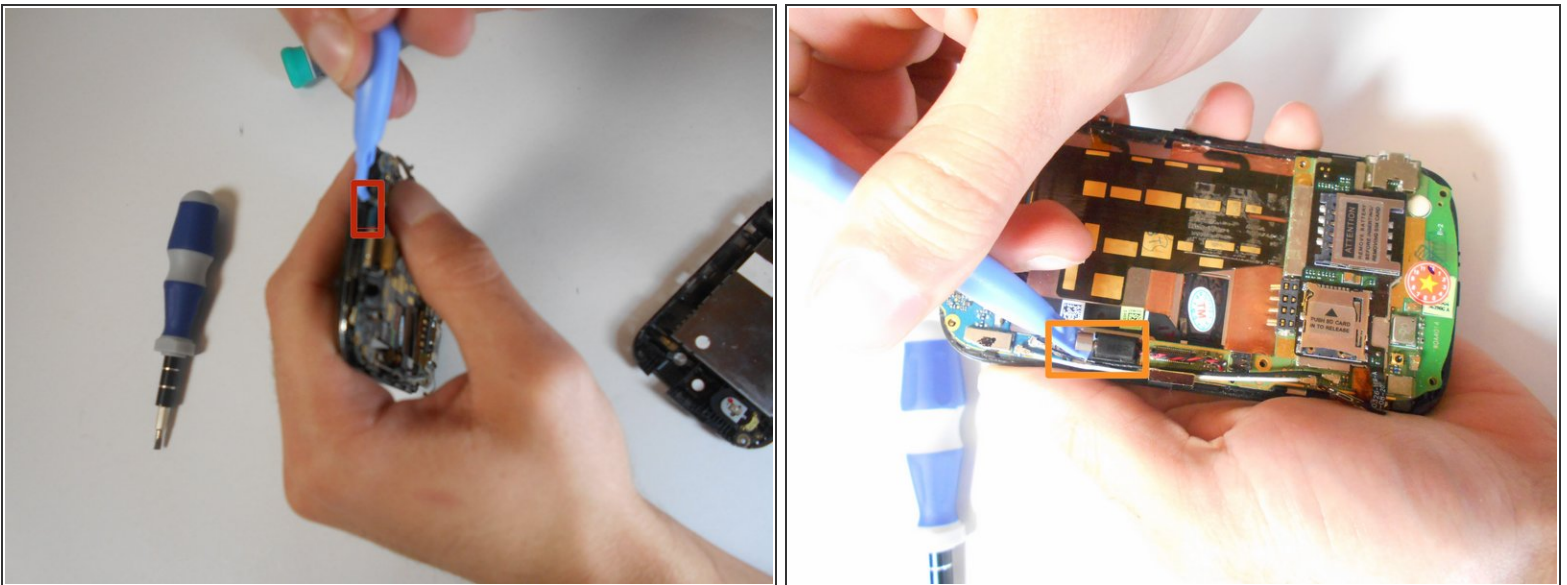


- Three ribbon cables and the vibration motor need to be disconnected from the Motherboard.
- Using the plastic opening tools, pull up on the power button ribbon to gently detach it.
- Remove the vibration motor by gently pulling it off of the Motherboard.

Step 9

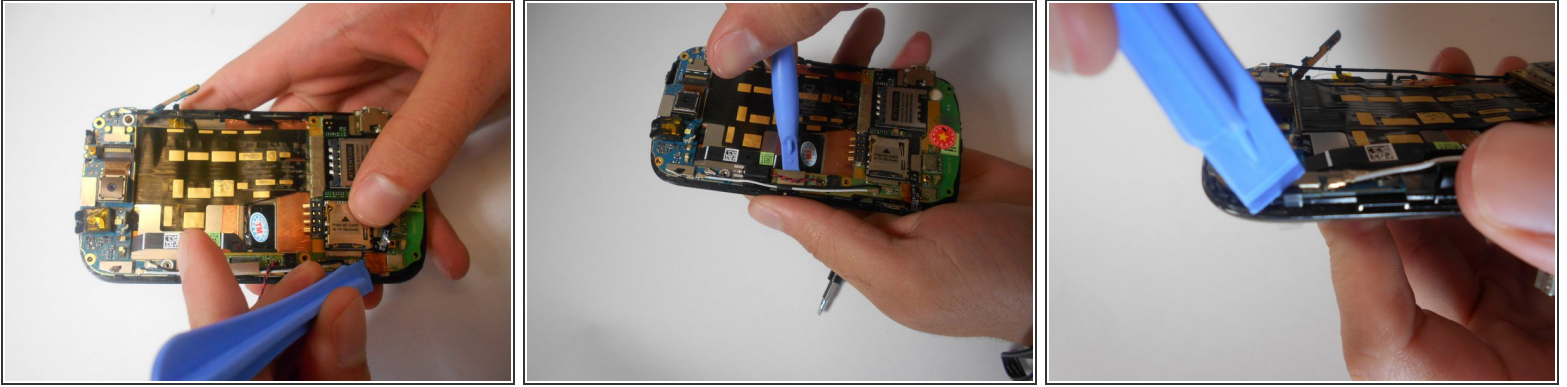


- Remove the digitizer ribbon cable with the plastic opening tools.
- Remove the LCD ribbon cable from its connector.
- It is now safe to release the Motherboard from the clips holding it in place. Start at the top clip of the phone and move your way around gently releasing each clip.

Step 10

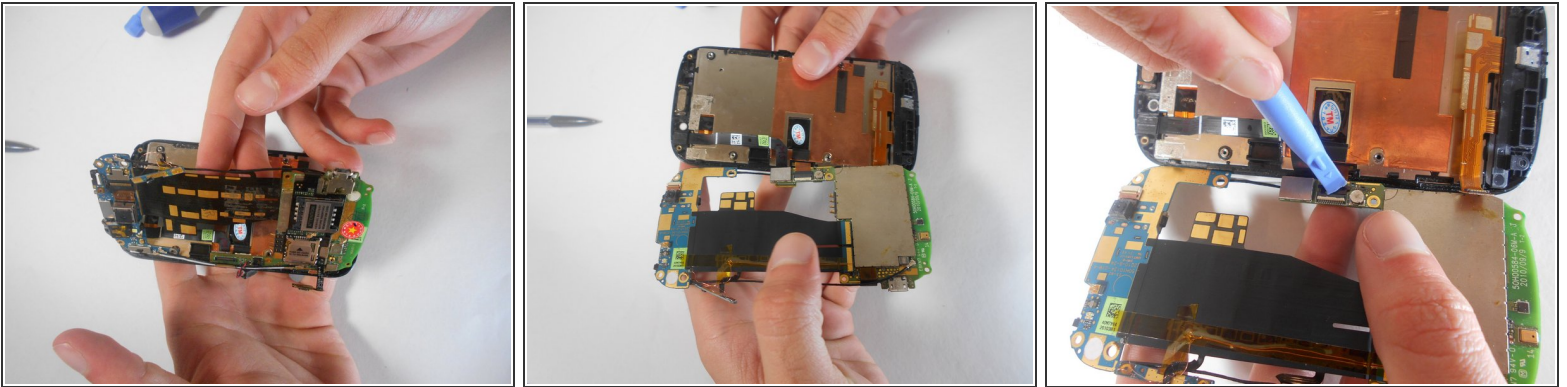


- Do not lift the Motherboard off the phone. The LCD Ribbon is still connected to it.
- Lift the Motherboard towards the left to expose the LCD clamp connector.
- Open the clamp connector of the LCD ribbon by carefully pulling it up with the plastic opening tools.

Step 11

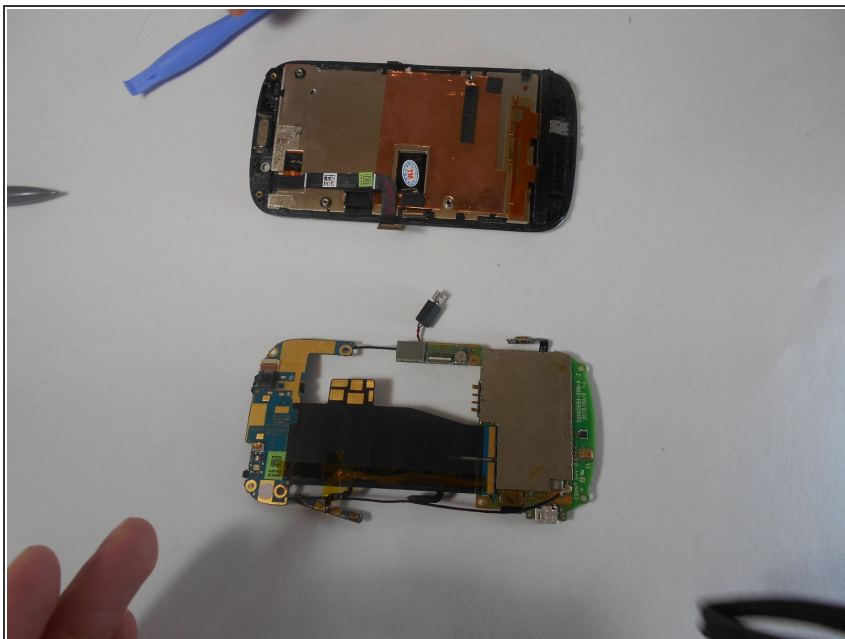

- The Motherboard is now removed.

Step 12 — Speakers

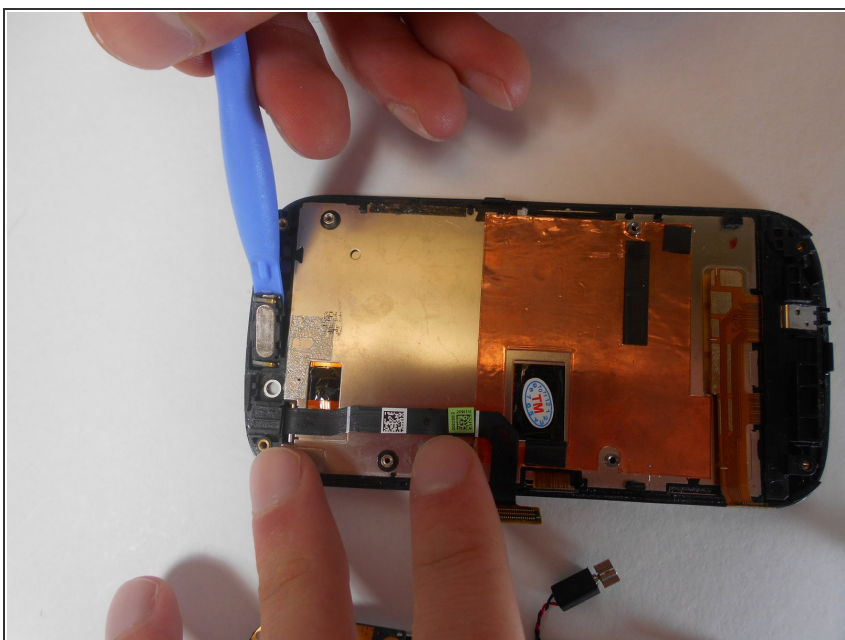

- After the motherboard is removed, the speaker is now able to be replaced.
- Use the plastic opening tools to pull out the old speaker and replace it with the new one.

To reassemble your device, follow these instructions in reverse order.