




Kindle Touch Speaker Replacement

Use this guide to properly replace your speakers.

Written By: Adam Yerly

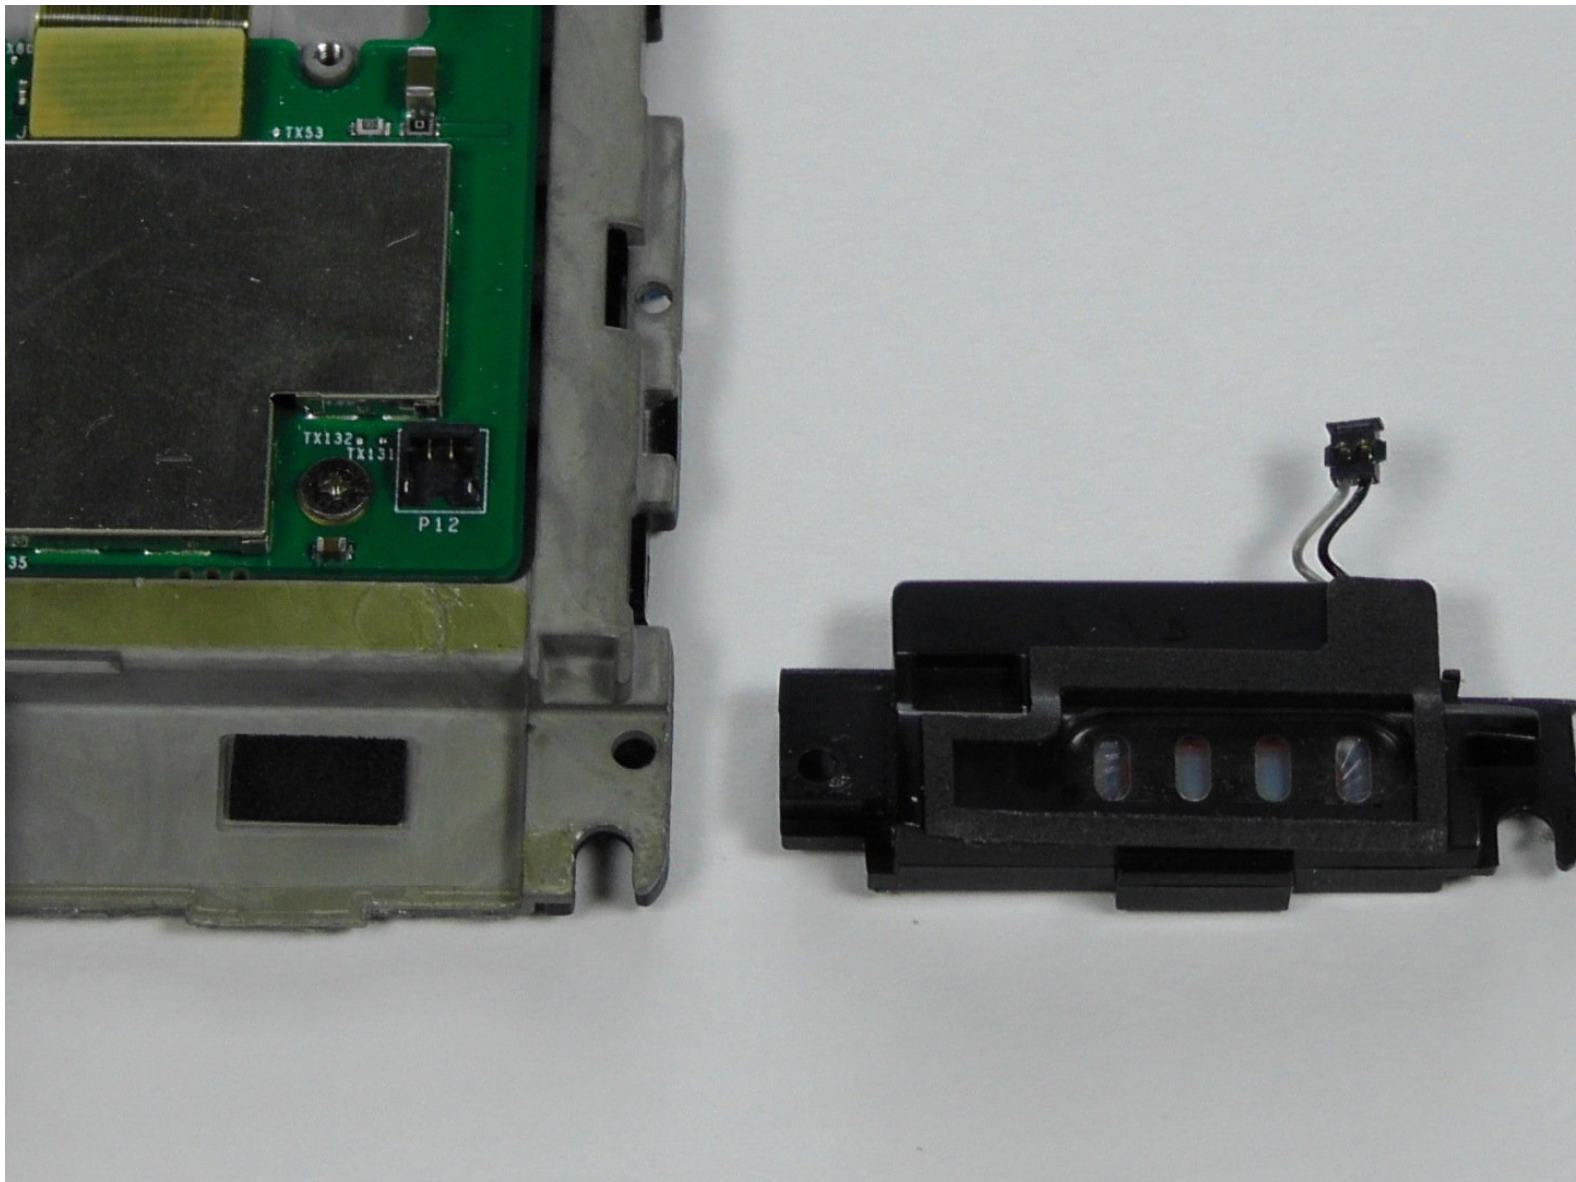

INTRODUCTION


Use this guide to properly replace your speakers.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Cover

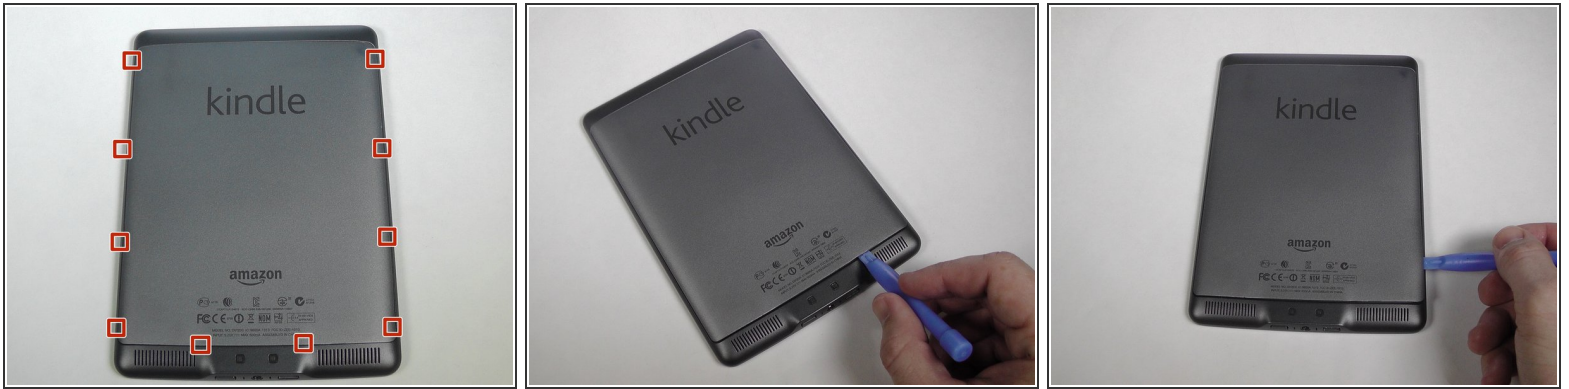

- Use the plastic opening tool to undo the ten plastic clips around the back panel of the Kindle.

Step 2





- Gently lift the bottom and slide the panel off.

Step 3 — Battery




- Use a Phillips #00 screwdriver to remove the five screws.

Step 4

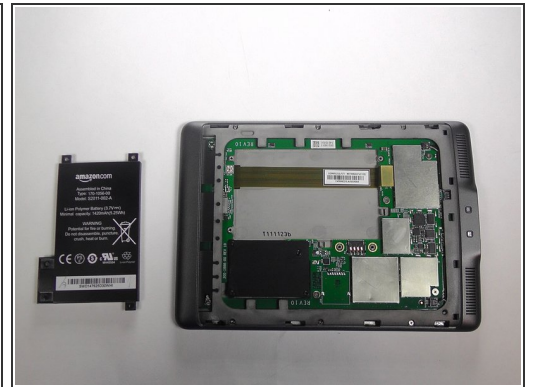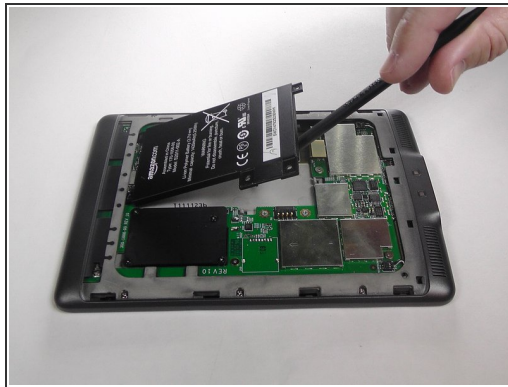


- Using the flat end of your spudger, gently pry the battery up and remove it.

Step 5 — Bezel

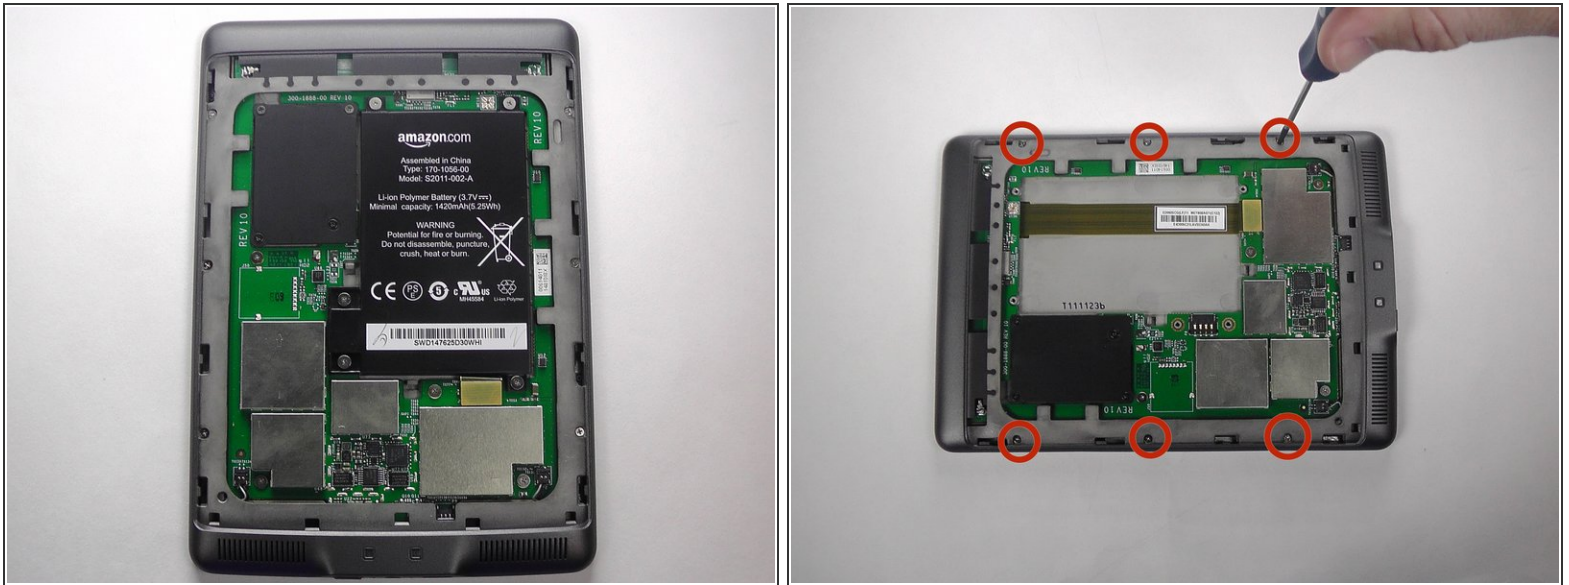

- Using a Phillips #00 screwdriver, remove the six 4 mm screws to access the front plate.

Step 6

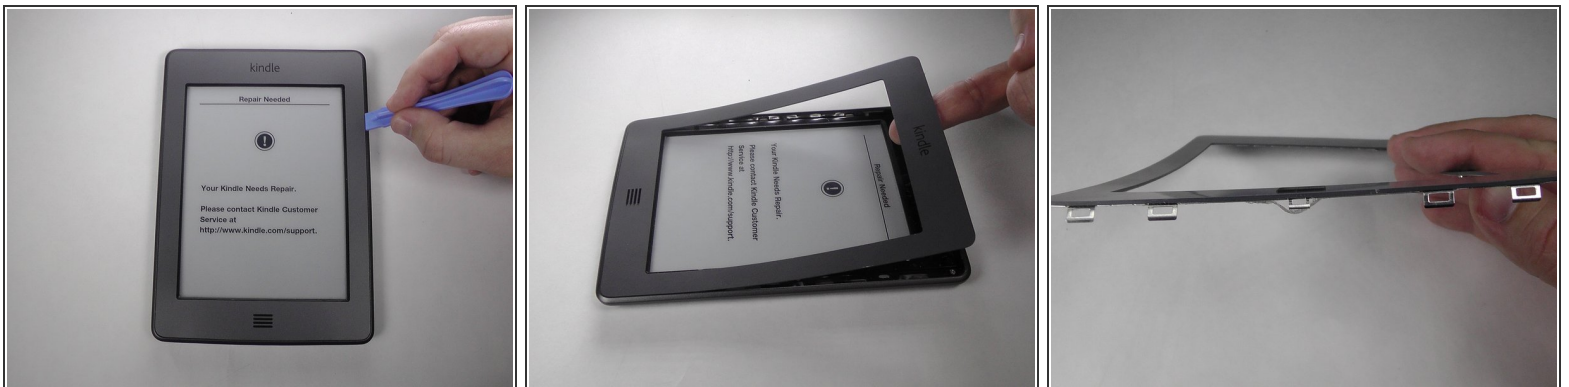

- Use the plastic opening tool to pry the bezel from the top and sides

i The bottom of the bezel will be glued, so be careful when sliding the clips out.


⚠ The clips can be easily bent, so do not try to force them out. If you do bend some, they can be bent back.

Step 7 — Rear Casing




- Use your Phillips #00 screwdriver to remove the indicated screws.
- ★ There are three pairs of screws that are each different. The screws on the top corners are 4 mm #00 Phillips screws, the screws on the bottom corners are 2 mm #00 Phillips screws, and the black bottom center screws are 6 mm #00 Phillips screws.

Step 8

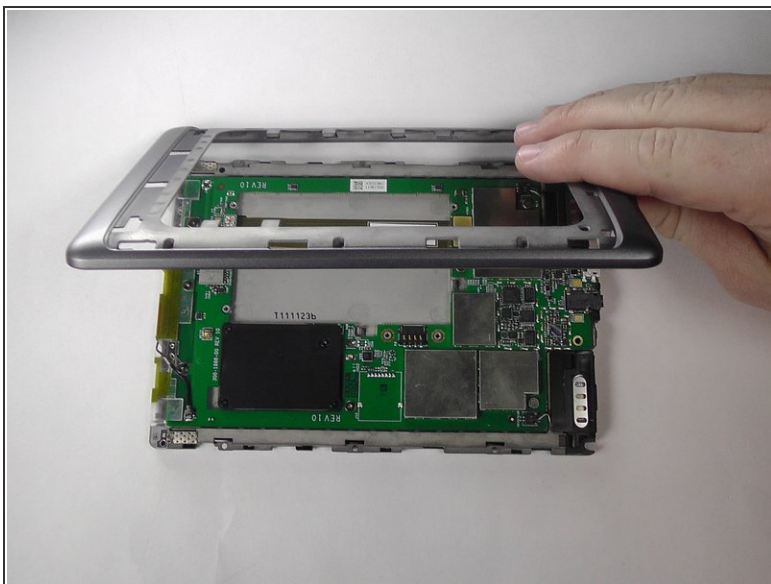


- With the screws removed, gently remove the case from the internals.

Step 9 — Speaker

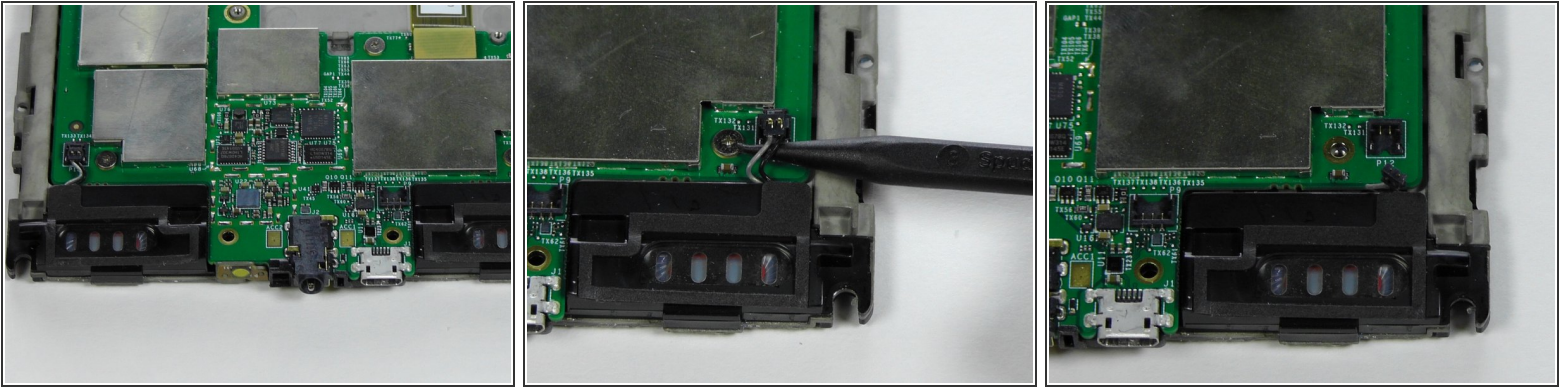

- Use the pointy end of your Spudger to separate the Speaker's connector from the motherboard on both sides.

Step 10

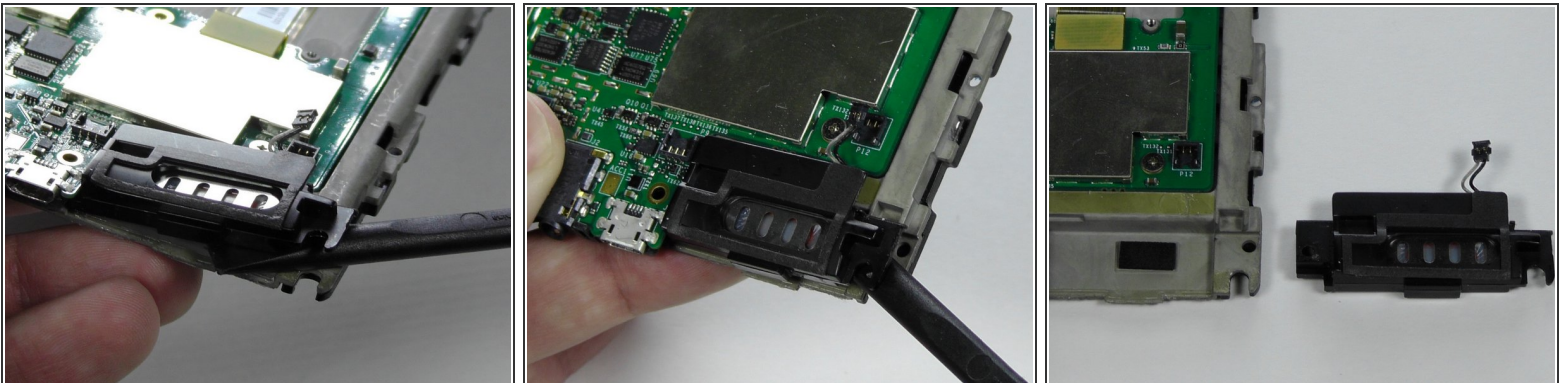

- The speakers are held down solely with contact adhesive, so use your Spudger to pry them from the support board.

To reassemble your device, follow these instructions in reverse order.