



# Nook Color Speaker Replacement

This guide will provide in depth steps in the...

Written By: John Goly



# INTRODUCTION

This guide will provide in depth steps in the replacement of a damaged or faulty speaker. When removing the speaker from your device some force will be necessary in their separation.

---

## TOOLS:

[T5 Torx Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)


---

## Step 1 — Back Cover



- Remove the two 3.8 mm screws located in the back right corner of the device using the T5 Torx screwdriver.

## Step 2

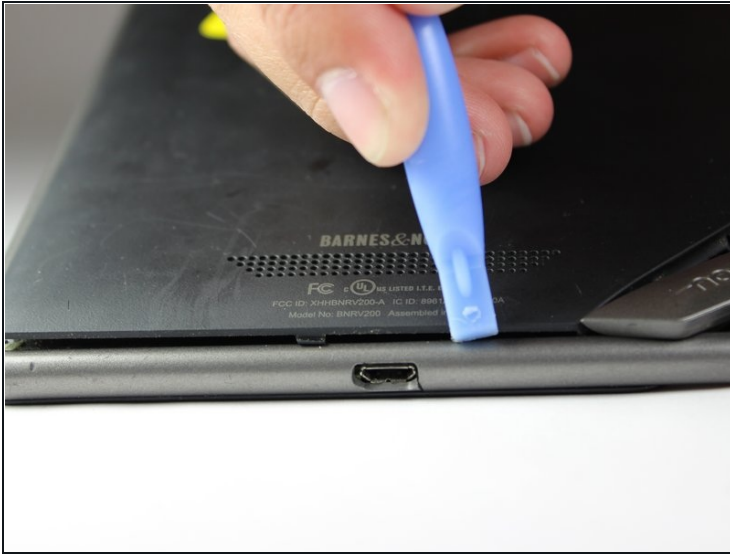

- Pry off the back cover with the plastic opening tool. Go around the device with the tool to ensure complete detachment.



## Step 3 — Front Cover



- Remove the ten 4.0 mm screws from the device's perimeter using the T5 Torx screwdriver.




## Step 4

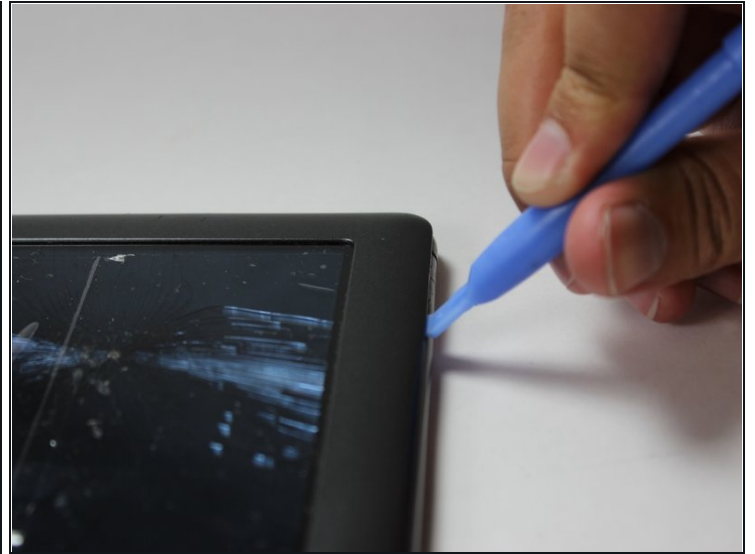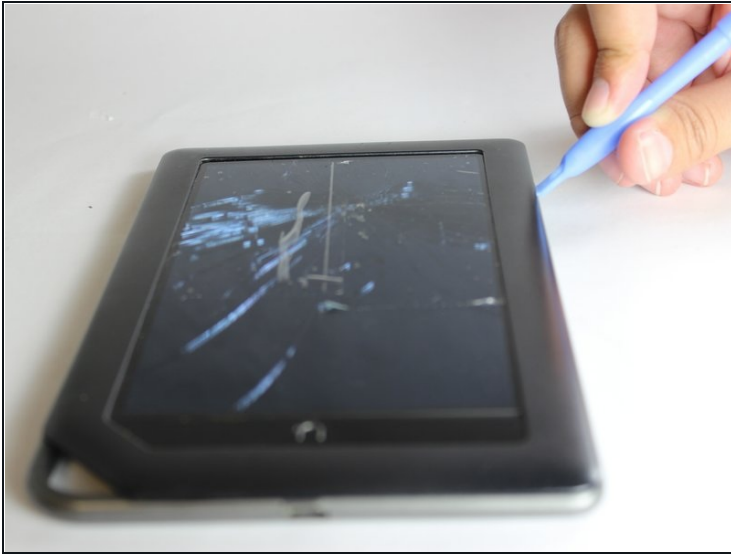


- Pry off the front panel using the plastic opening tool.

## Step 5

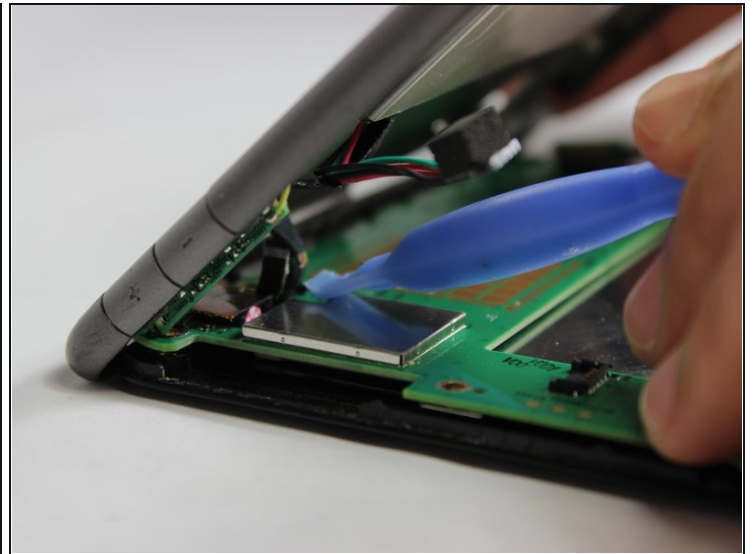


- Lift up on the connectors to disconnect them using the plastic opening tool.

## Step 6 — Speaker

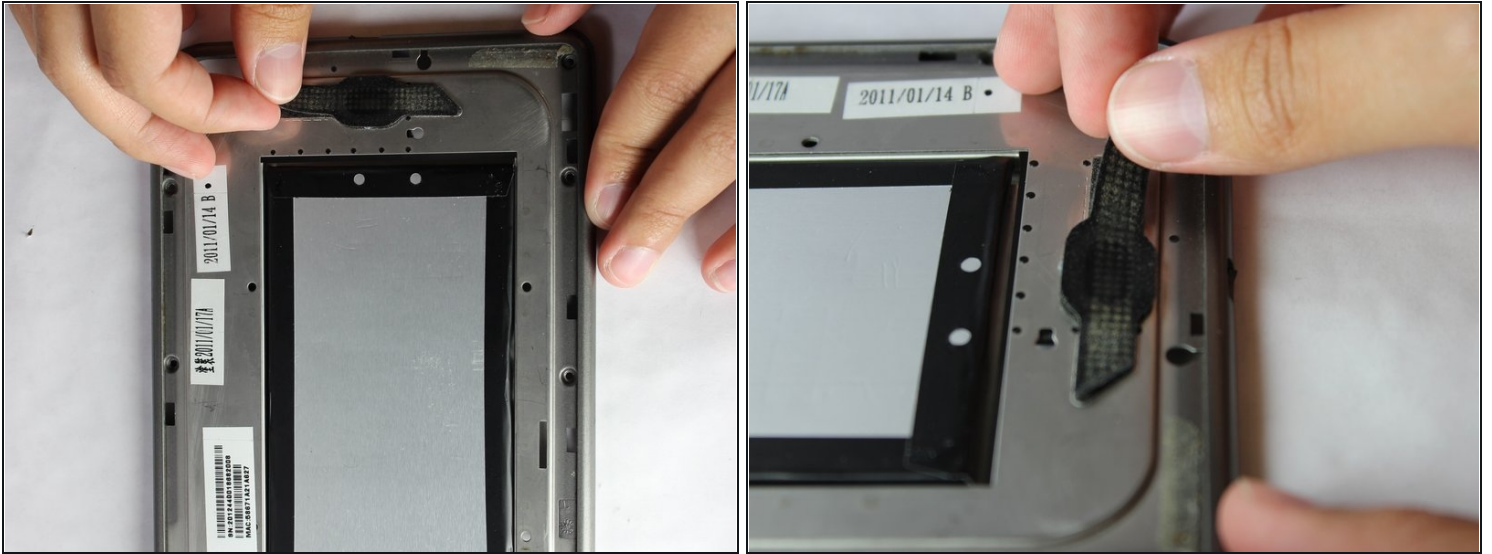

- Remove the protective lining located above the speaker.

## Step 7

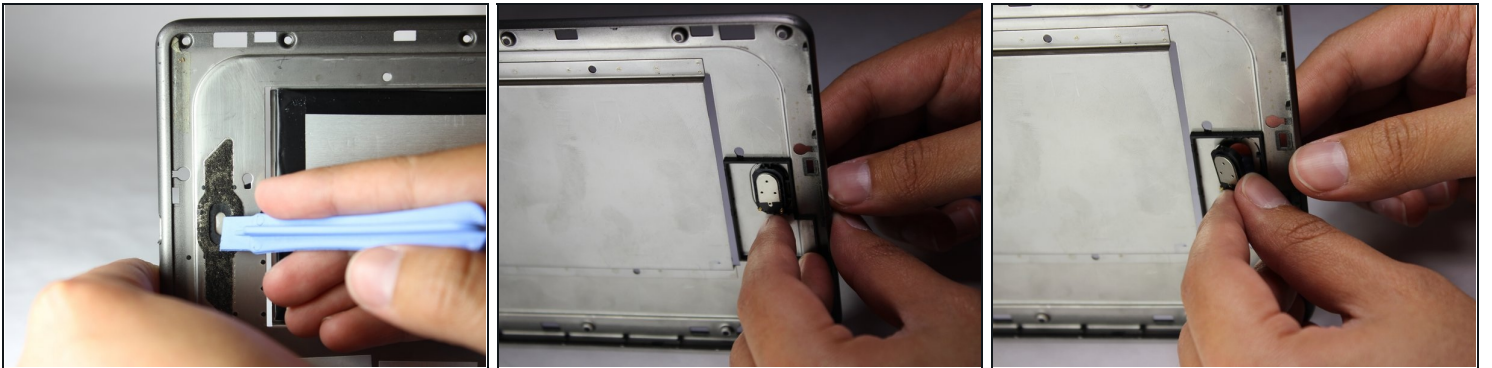

- Using a plastic opening tool, push on the speaker from the front of the panel to loosen the speaker. Some force will be required. Once loose, use your index finger to push it through.

## Step 8



- Once pressed all the way through, the speaker will be loose and free to replace.

---

To reassemble your device, follow these instructions in reverse order.