




HP 7 1800 Power and Volume Buttons Replacement

Replace the stuck or unresponsive buttons on your HP 7 1800.

Written By: Todd Dobrozdravic

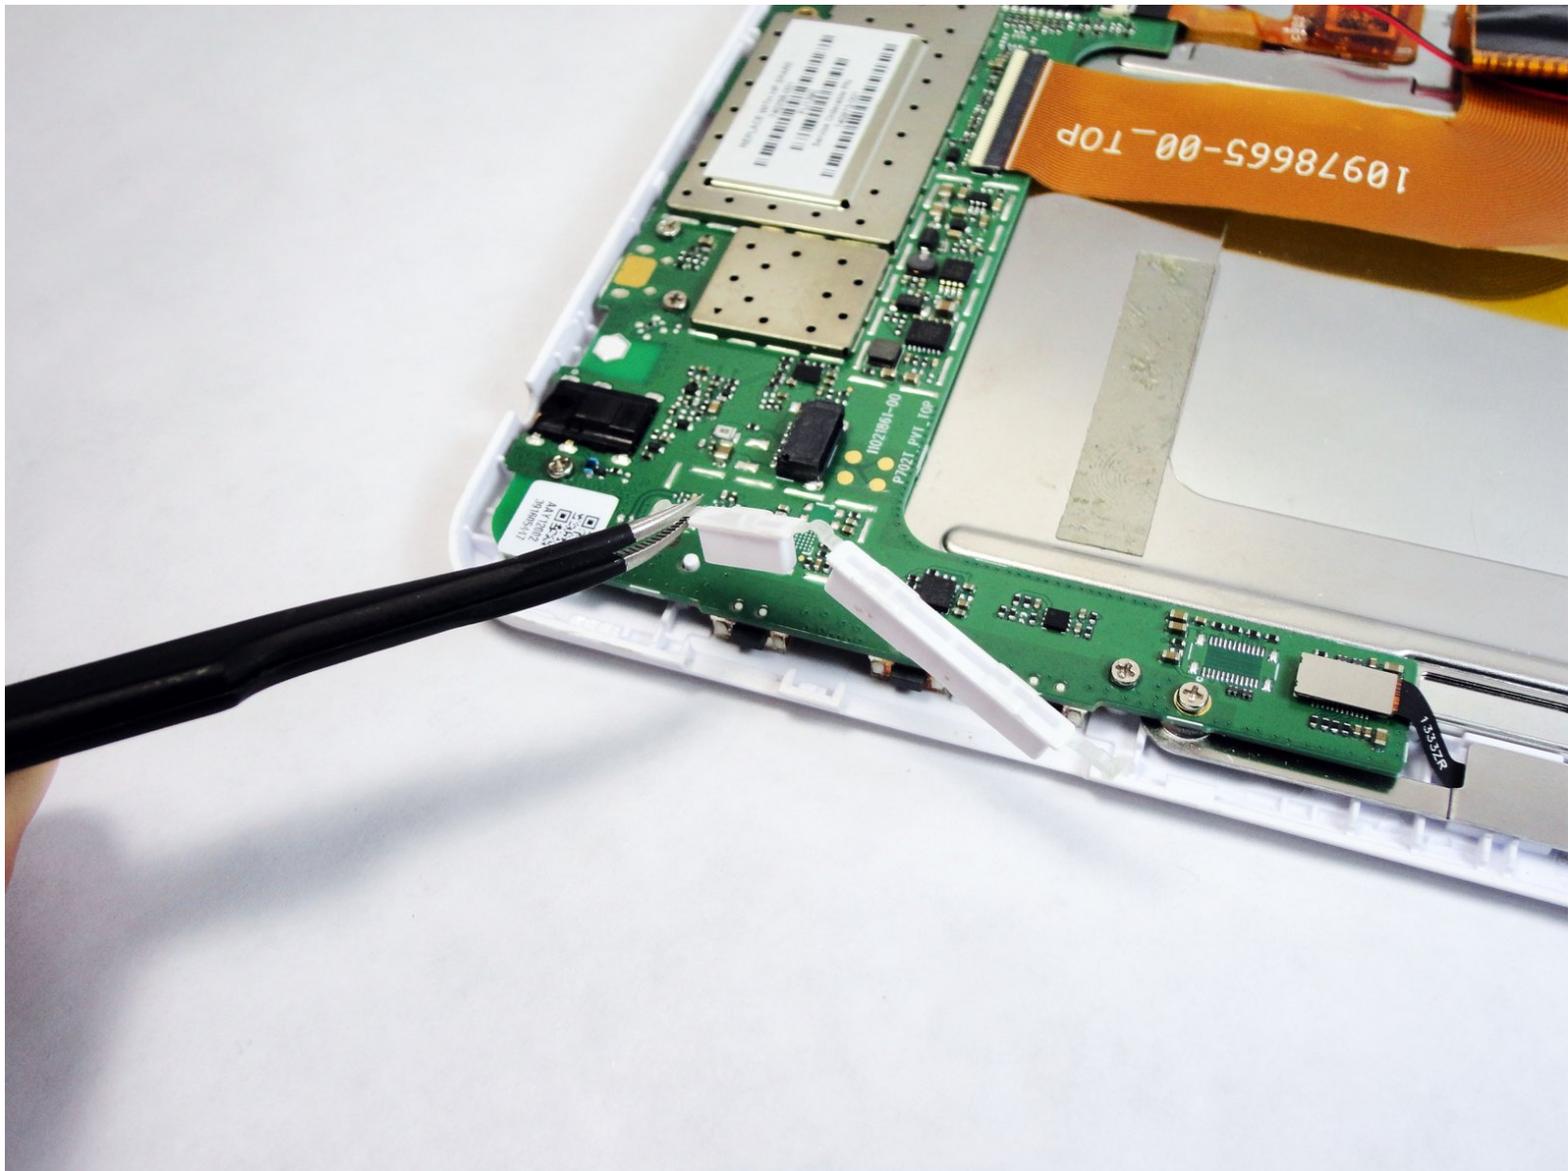



INTRODUCTION

This guide will help you replace the power and volume buttons on your HP 7 1800.

TOOLS:


- [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Remove the back panel

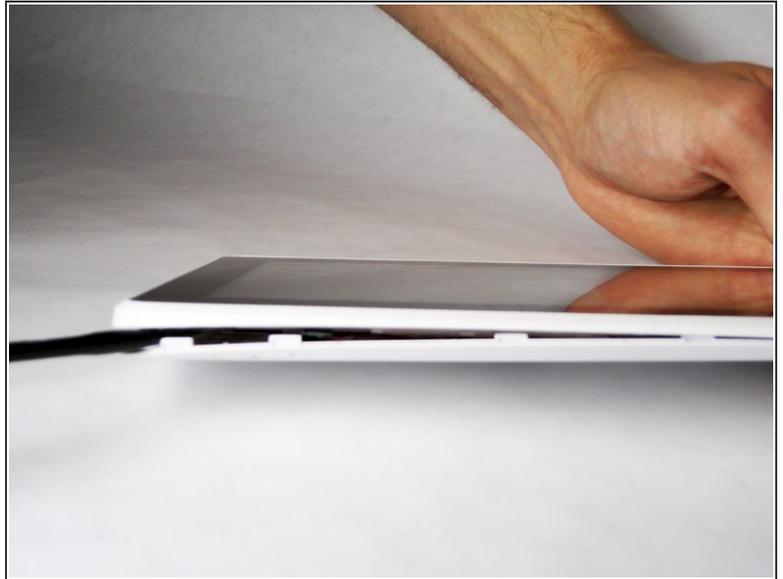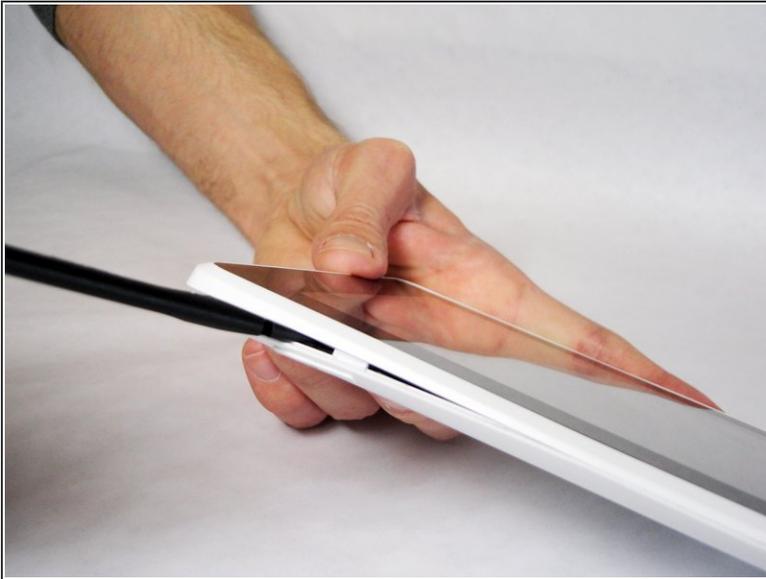

- Use a Spudger to open the back panel. Be careful not to break the tabs.

Step 2 — Remove the power and volume buttons

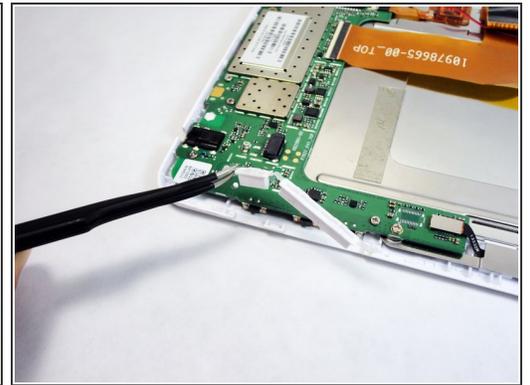

- The power button and volume buttons are together as a single piece. Gently pull up on one side and then pull up on the other side to remove the buttons from the casing.

To reassemble your device, follow these instructions in reverse order.