



How to clean/replace buttons on the Skytex SP728

This guide will demonstrate how to clean or replace buttons for volume or power.

Written By: Chris Nelson



INTRODUCTION

This guide will show how to remove the back cover of the Skytex SP728 and identify the buttons on the side of the device. These buttons are used to raise or lower the volume and to power the device on or off.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Case



- Make sure the device is powered off
- Rotate the device so the ports and screws face you

Step 2



- Using a small phillips screwdriver, unscrew both end screws

Step 3



- Using a plastic opening tool, work your way around the edge of the device, separating the case from the rest of the device

Step 4




- Once the case has been loosened, pry the backing off gently with your hands.
- ⚠ Make sure to remove the case gently as extra force can break the clasps or the case itself.

Step 5 — How to clean/replace buttons on the Skytex SP728



- Remove the black buttons (they should not be directly attached to the device and may fall out).

Step 6

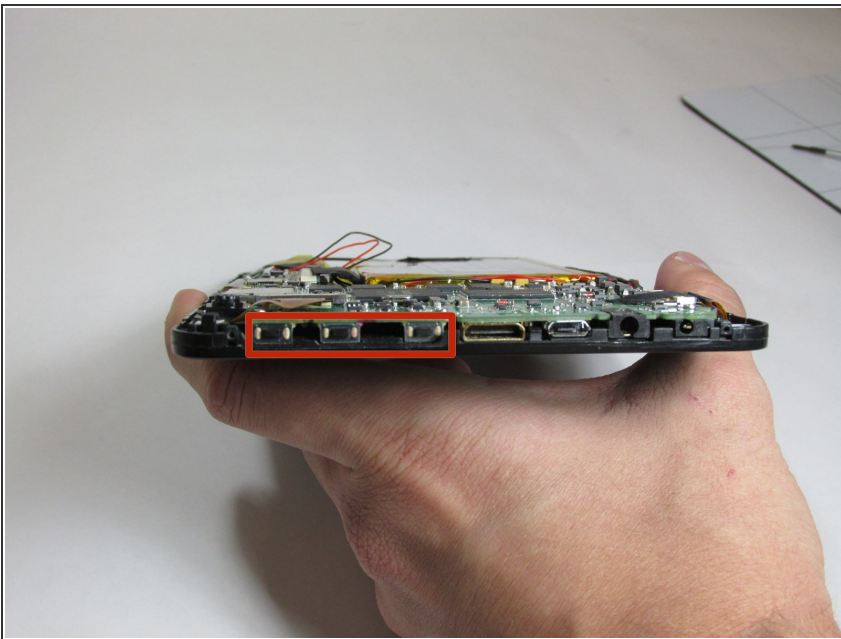

- On side the circuit board there will be three buttons. One is the power button, and the other two are volume buttons.

To reassemble your device, follow these instructions in reverse order.