




Munchkinz Battery Replacement

Here is a guide if your battery doesn't work or doesn't charge.

Written By: Hee Jin Cho

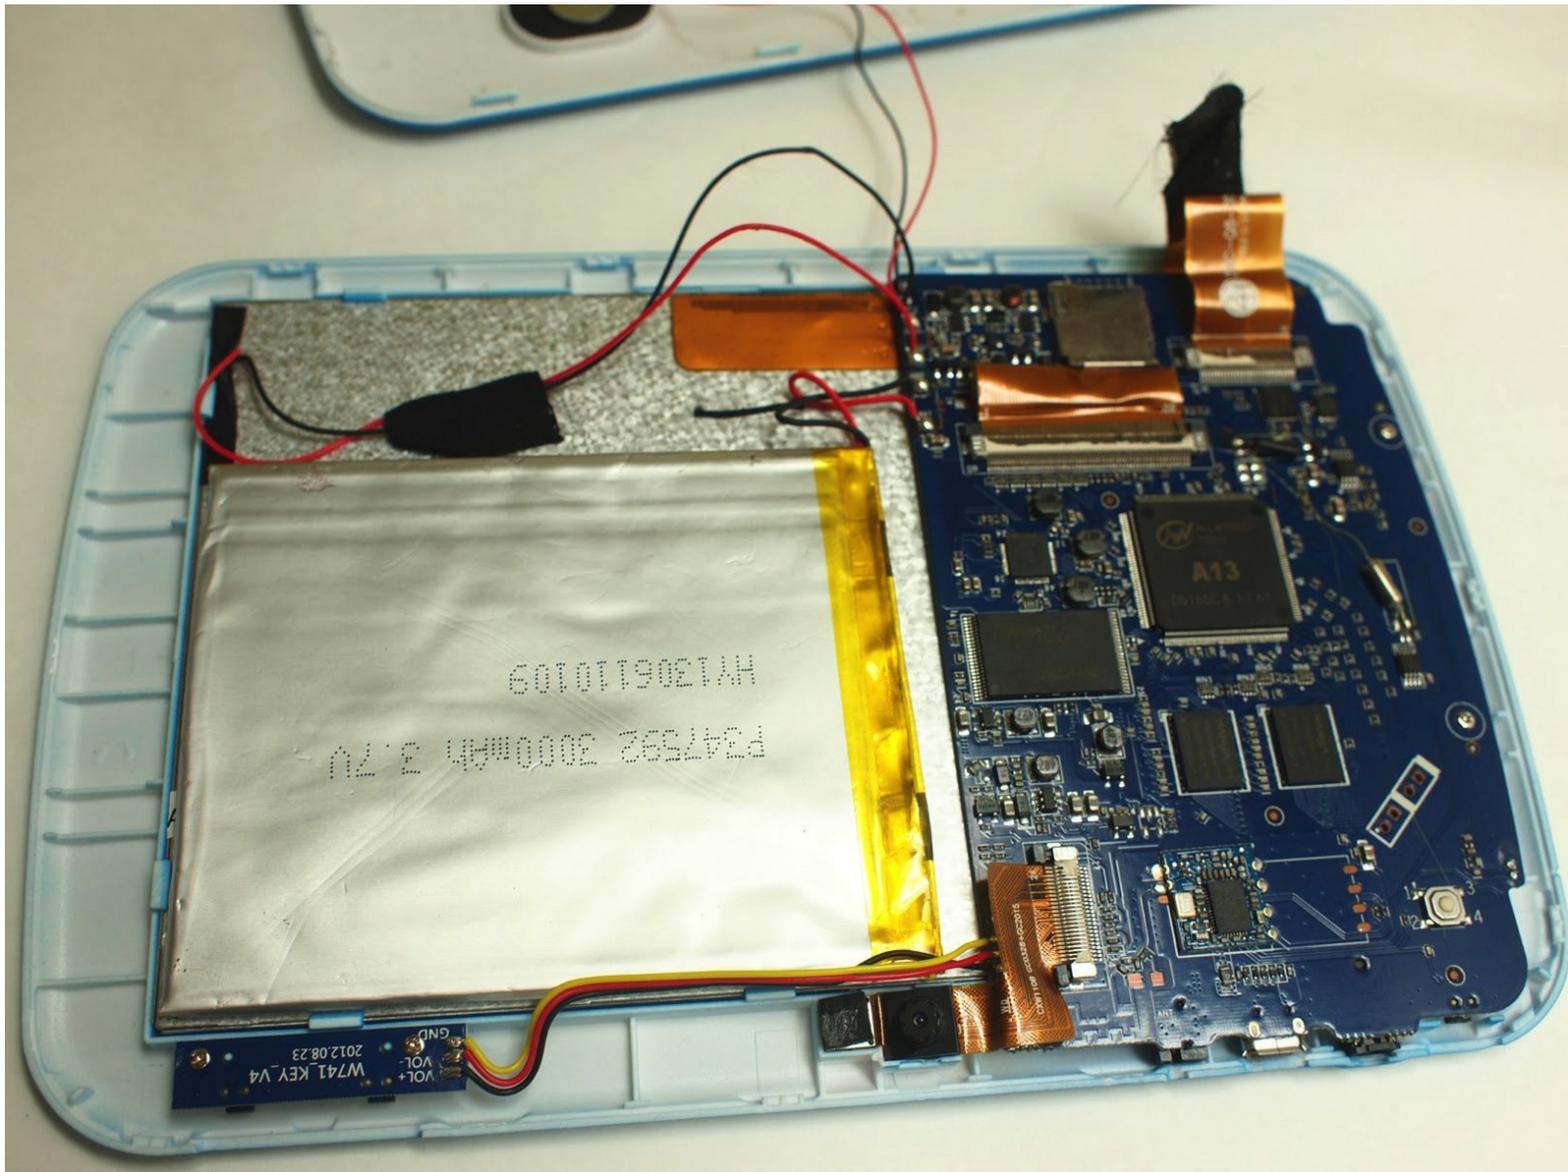


INTRODUCTION

Display how to remove the battery.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Portable Soldering Iron](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [Spudger](#) (1)
-


Step 1 — Opening Device

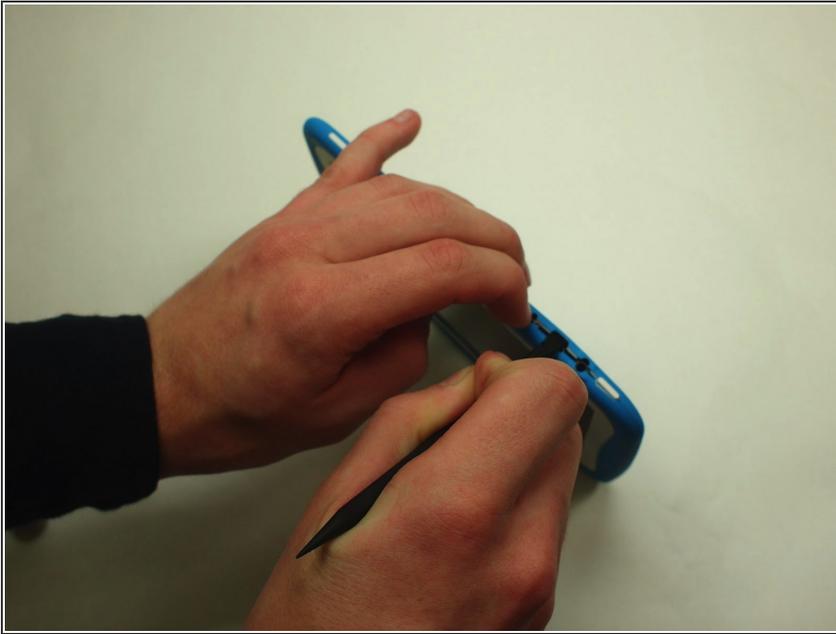

- Insert spudger into the USB Micro slot and pry the case apart.

 Be careful not to go too deep and bend the prong inside the Micro USB port.

Step 2 — Pry Device Apart

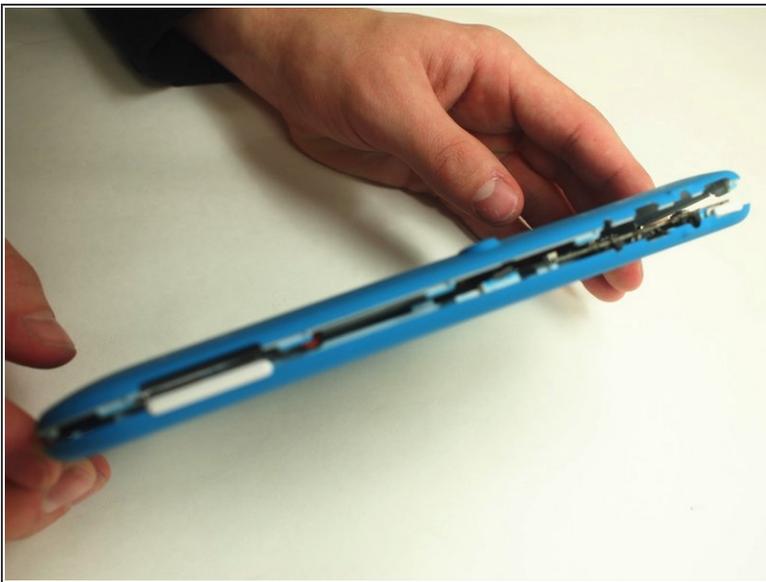

- Slide the wide plastic opening tool across the seam, separating it if you can't pry the device open using just the spudger.

 Gently separate the case so none of the cords inside are disconnected

Step 3 — Separated Device



- After prying the device apart, it should look like this.


Step 4 — Removing battery



- Use the wide plastic opening tool to slowly pry each side of the battery up.

 Be careful not to bend the battery too much.

Step 5 — Remove battery completely

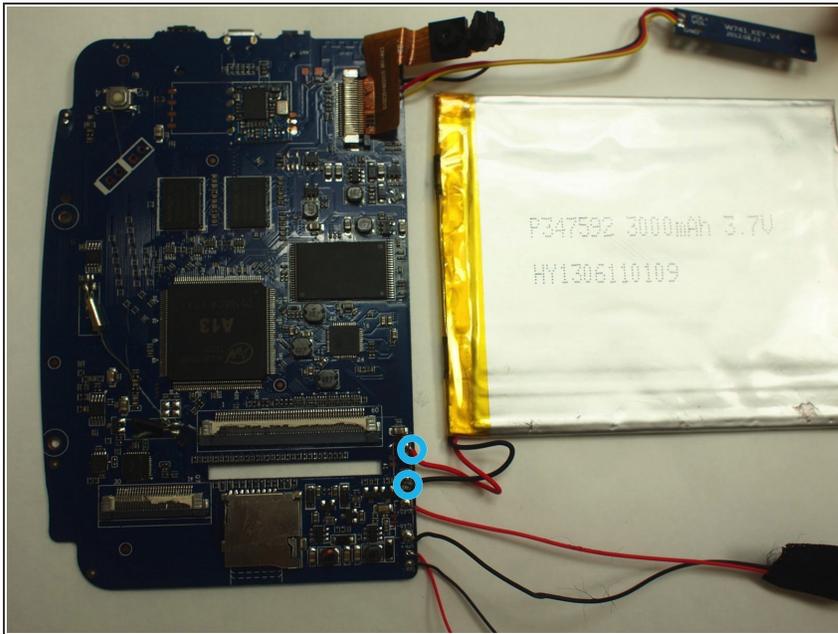

- Use the Soldering Iron to disconnect the each cable.

To reassemble your device, follow these instructions in reverse order.