



# TomTom GO Live 1535M Reset Button Activation

This guide will help you reactivate the power...

Written By: Mathias Sagide



## INTRODUCTION

This guide will help you reactivate the power button on your TomTom GO Live 1535M device.

This device is a great tool for traveling and navigational needs. If your device is not working at an effective speed or the applications are not functioning properly, resetting your device could help. You can also visit [here](#) to see the additional troubleshooting problems and part replacement information.

For resetting the activation button on your TomTomGO Live 1535M device, follow the steps bellow.



### TOOLS:

- [Paper Clip](#) (1)
-

## Step 1 — Reset Button



- The reset button is located at the top of the device, close to the charging port. It is a small hole that is .78 mm wide.

## Step 2



- Insert one end of the paper clip into the small power button hole and press down gently until you hear a "click" sound.
- Hold paper clip in power button hole for 15 seconds.

## Step 3



- The device should power on by itself with its factory default settings in place once done. If you do not see the screen power on, go back to step 1 and try repowering again.

To reassemble your device, follow these instructions in reverse order.