




# Vivitar XO 7 Speaker Replacement

This guide will show how to remove speaker.

Written By: Barron Dillman

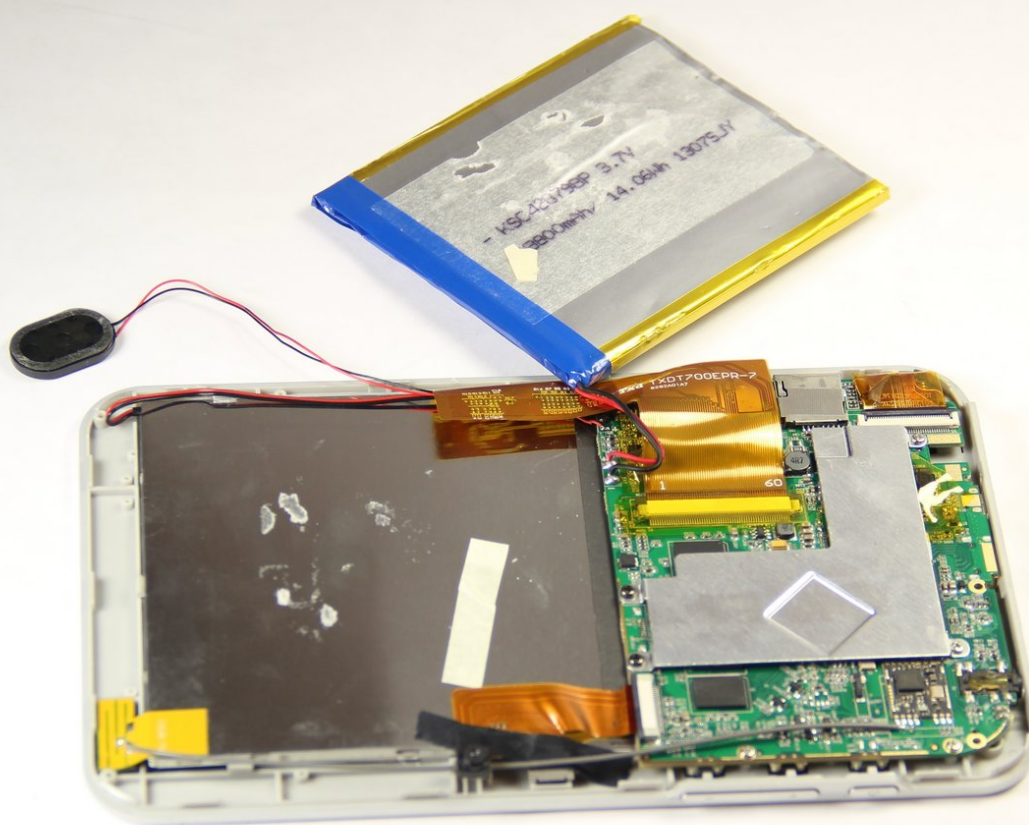



## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

## Step 1 — Back Cover



- Remove the two 3mm Phillips #00 screws on the bottom of the tablet.

## Step 2





- With the plastic opening tools, pry open the back cover.

### Step 3



- Remove the back cover from the tablet.



### Step 4 — Battery

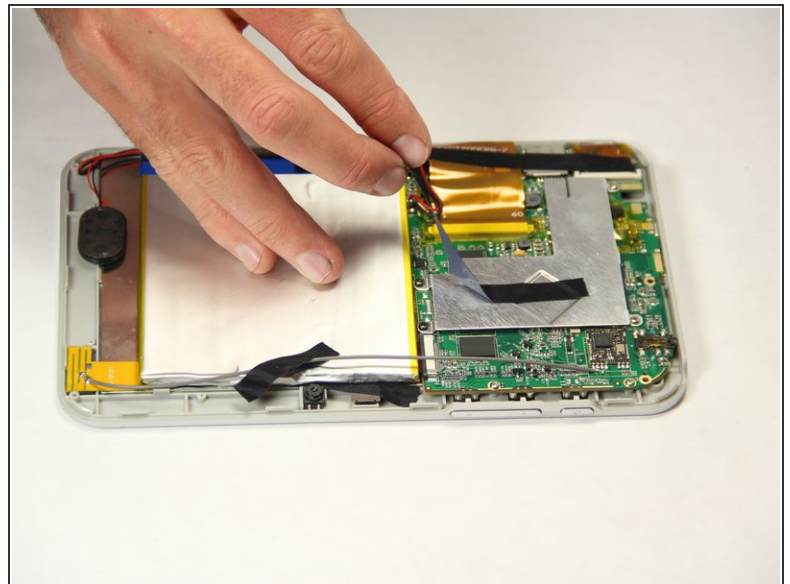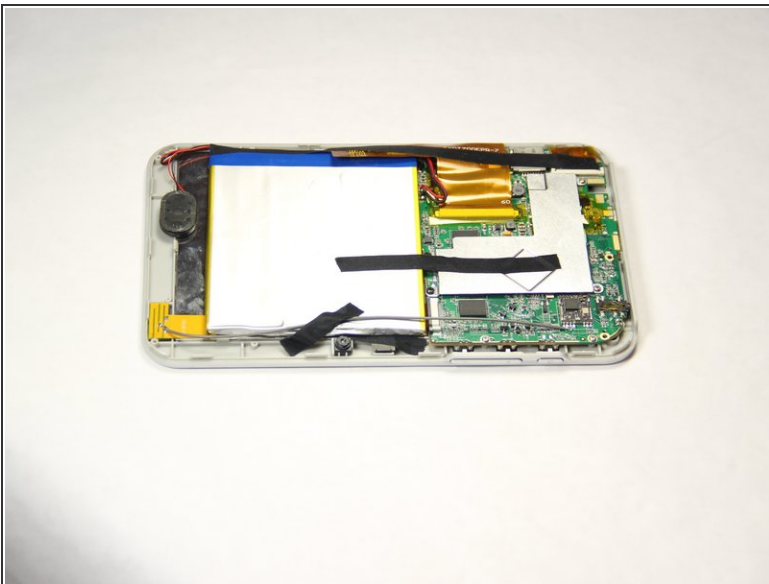

- Peel off the black pieces of tape from the internal components.





## Step 5

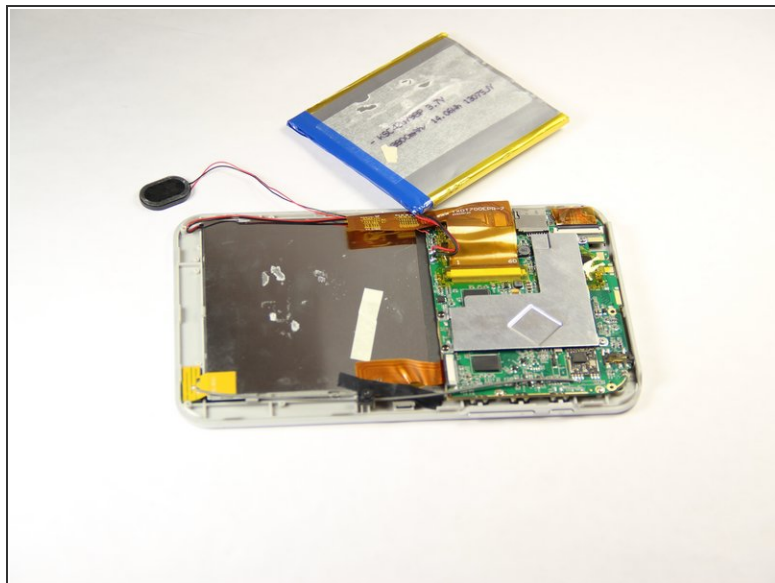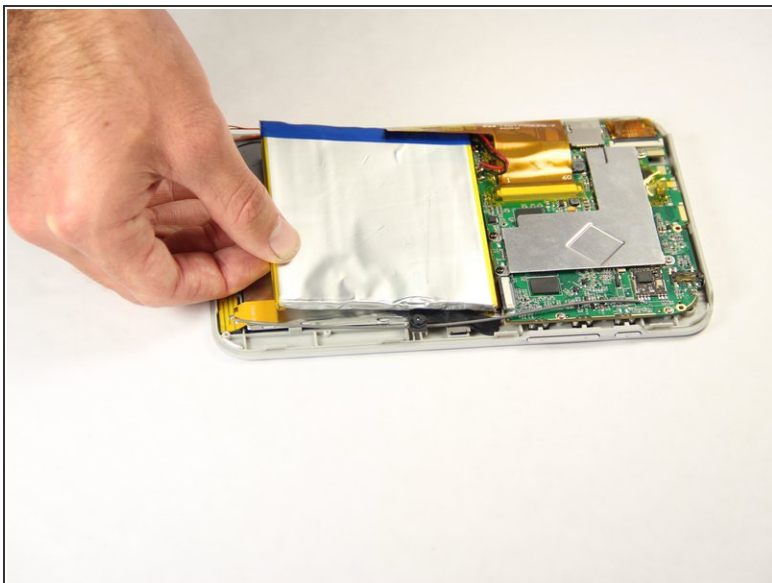

- Carefully remove the battery from the tablet.

## Step 6

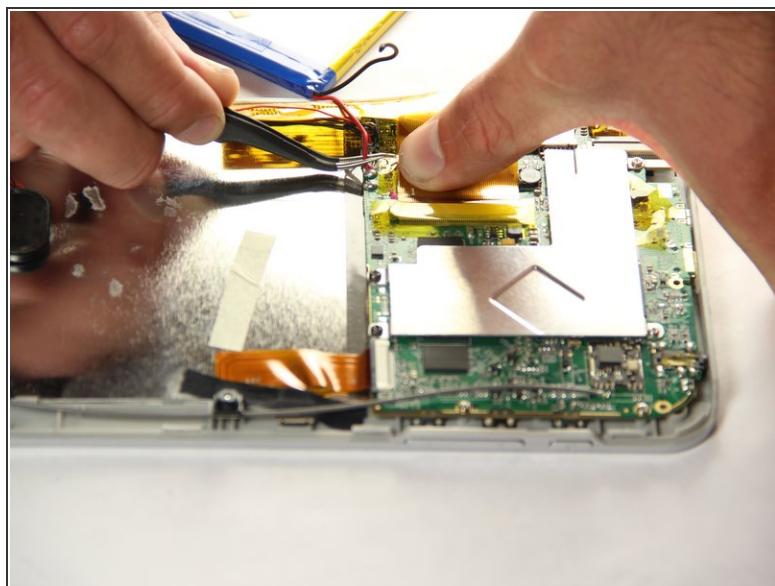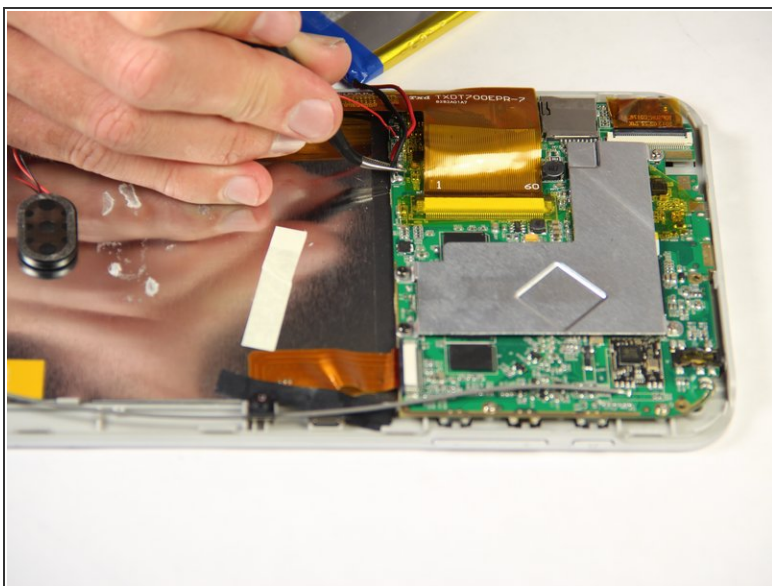



- With the tweezers, firmly grab the wire at the base and pull to disconnect the battery from the motherboard.

## Step 7 — Speaker



- Carefully remove the speaker from the metal plate with your hands.

## Step 8

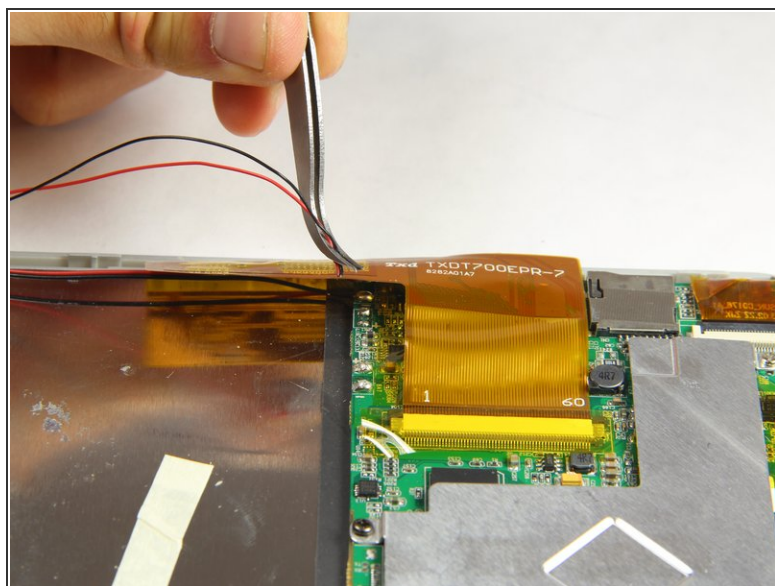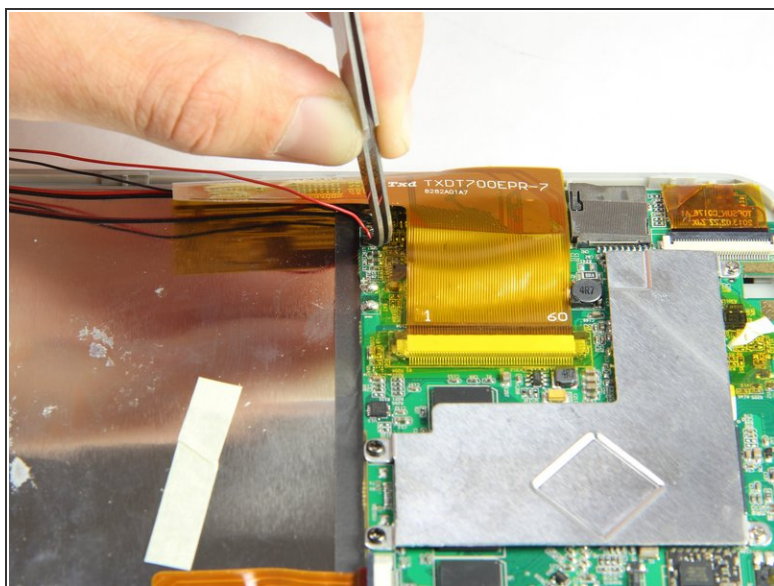

- With tweezers, firmly grab the wire at the base and pull to disconnect the speaker from the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-26 09:56:29 AM (MST).

