


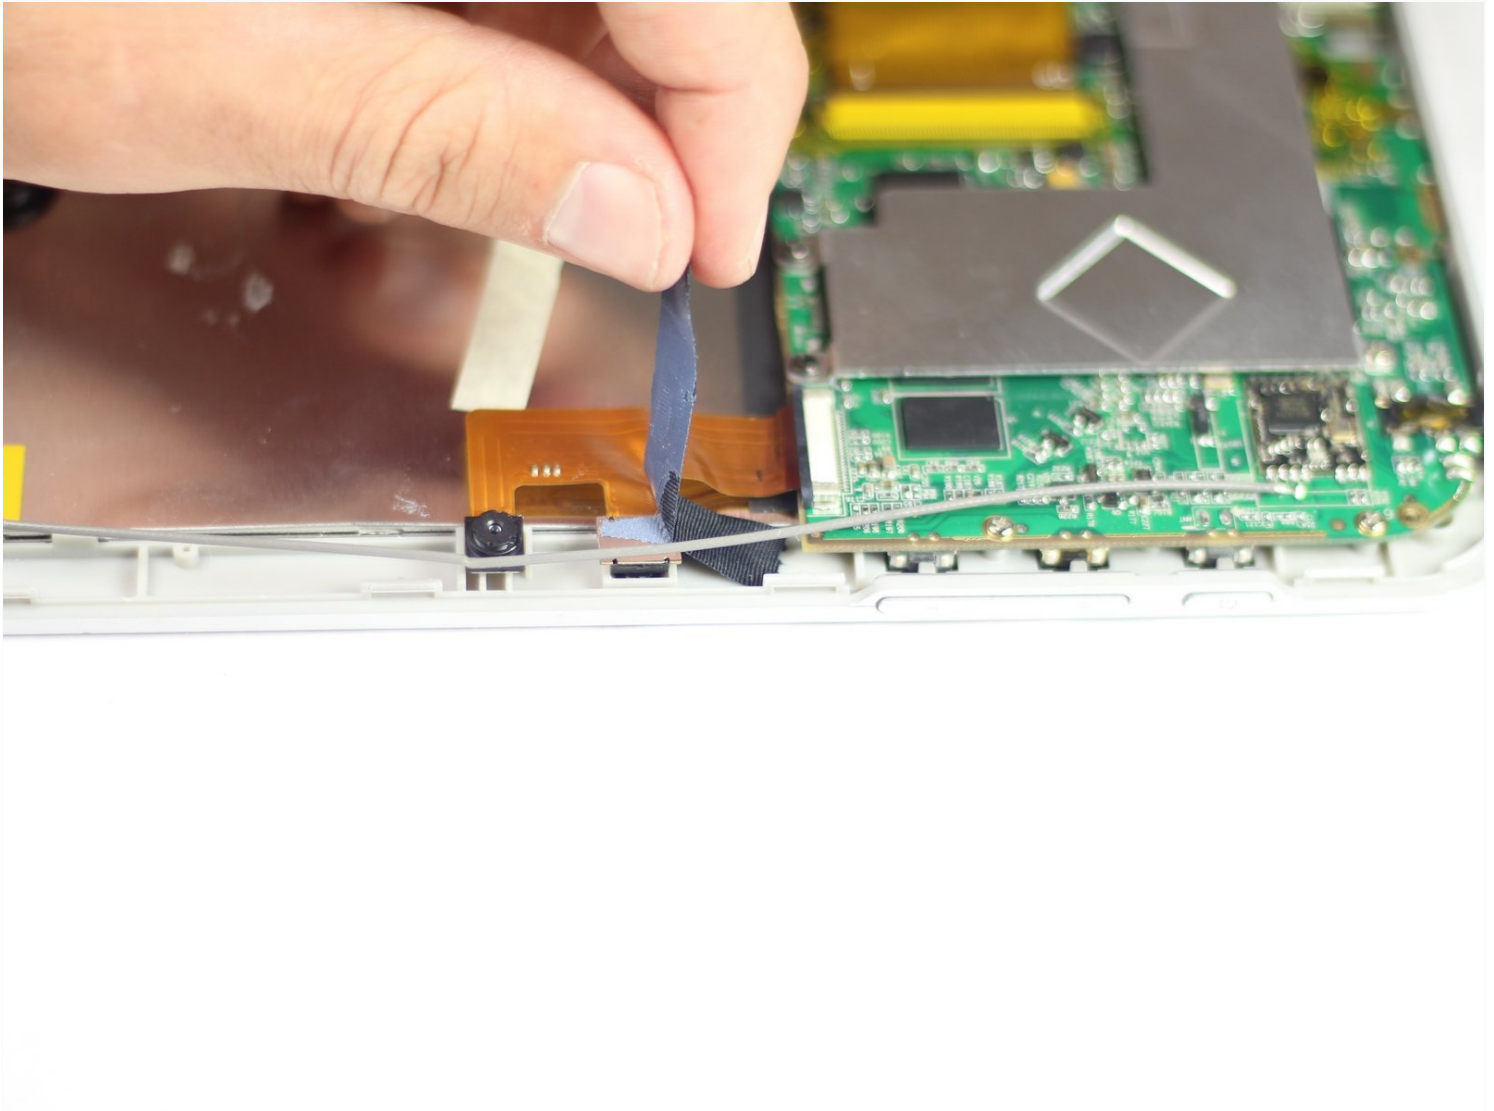

Vivitar XO 7 Camera Replacement

If you are experiencing problems with your...

Written By: Braanah Craig



INTRODUCTION

If you are experiencing problems with your device's front or rear camera, this guide will help you to remove and replace the faulty part. Both cameras are connected and are removed simultaneously.

TOOLS:

[Tweezers](#) (1)

[Phillips #00 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

Step 1 — Back Cover



- Remove the two 3mm Phillips #00 screws on the bottom of the tablet.

Step 2




- With the plastic opening tools, pry open the back cover.

Step 3





- Remove the back cover from the tablet.

Step 4 — Battery

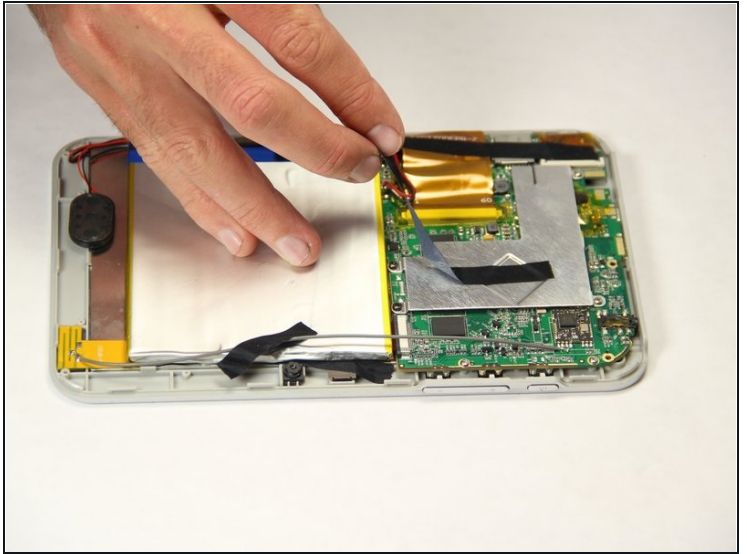



- Peel off the black pieces of tape from the internal components.

Step 5

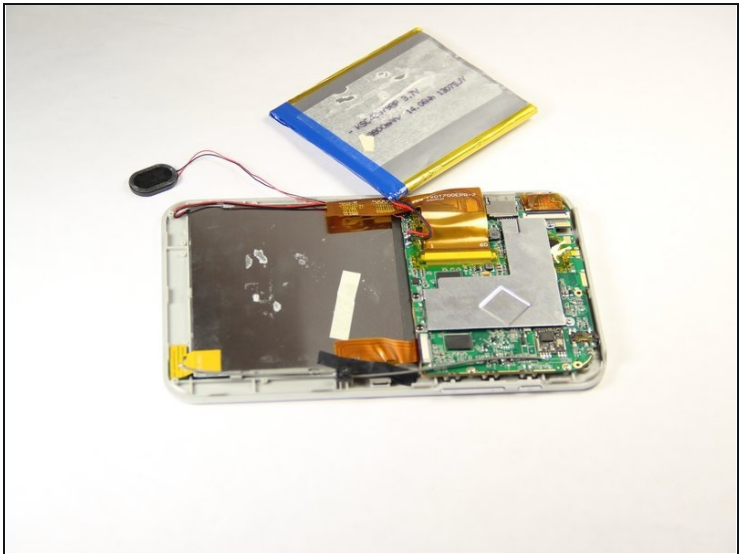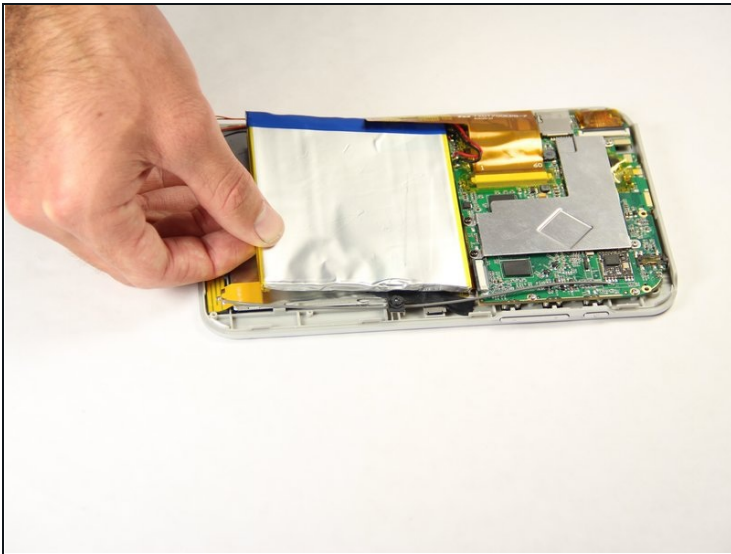


- Carefully remove the battery from the tablet.

Step 6

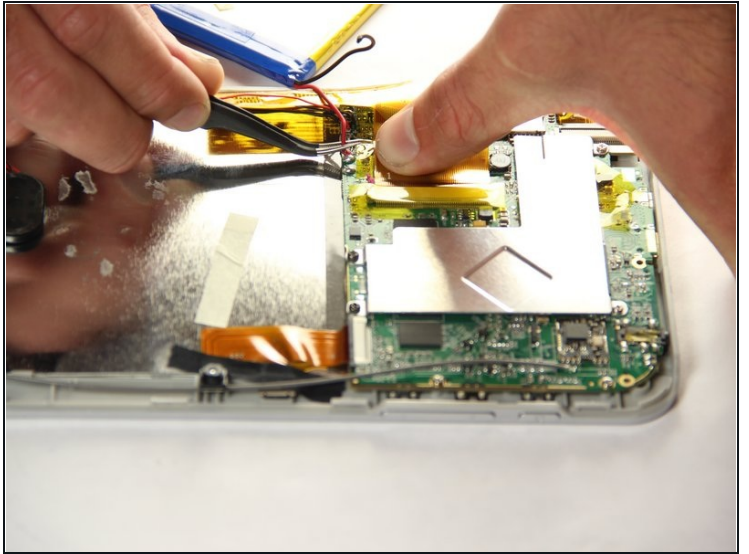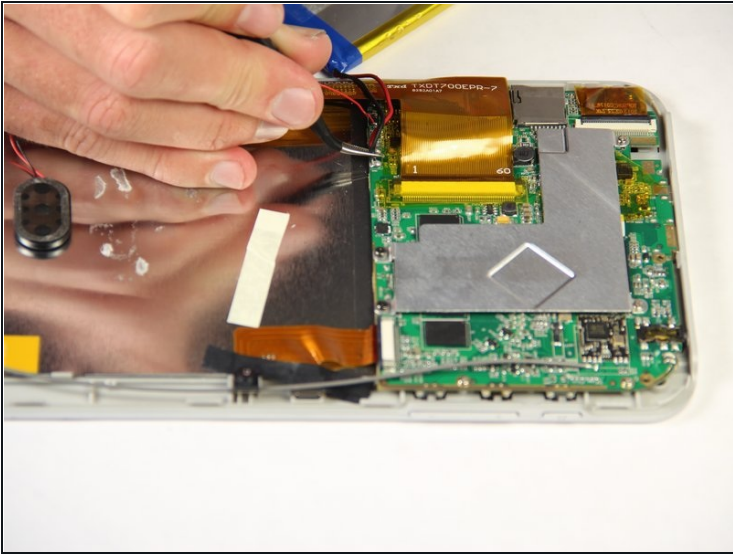


- With the [tweezers](#), firmly grab the wire at the base and pull to disconnect the battery from the motherboard.

Step 7 — Camera

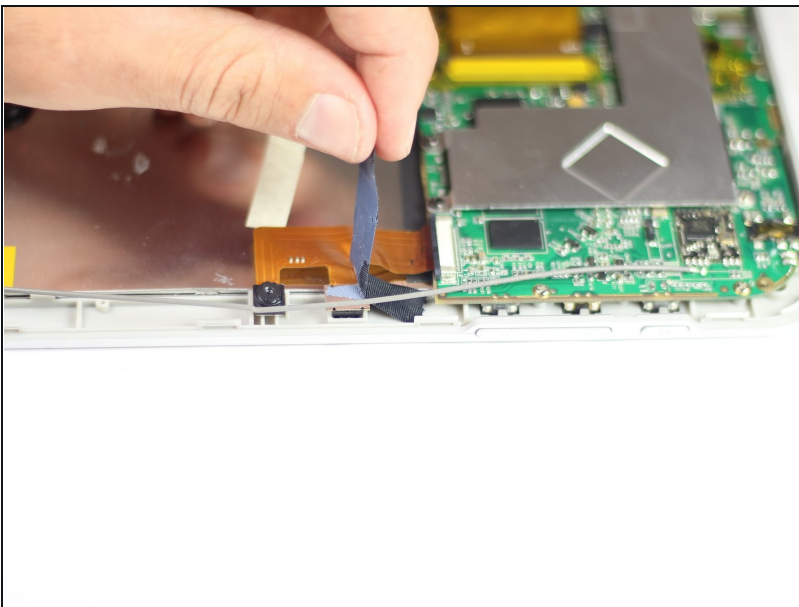



- Peel off black tape that is holding the camera in place.

Step 8

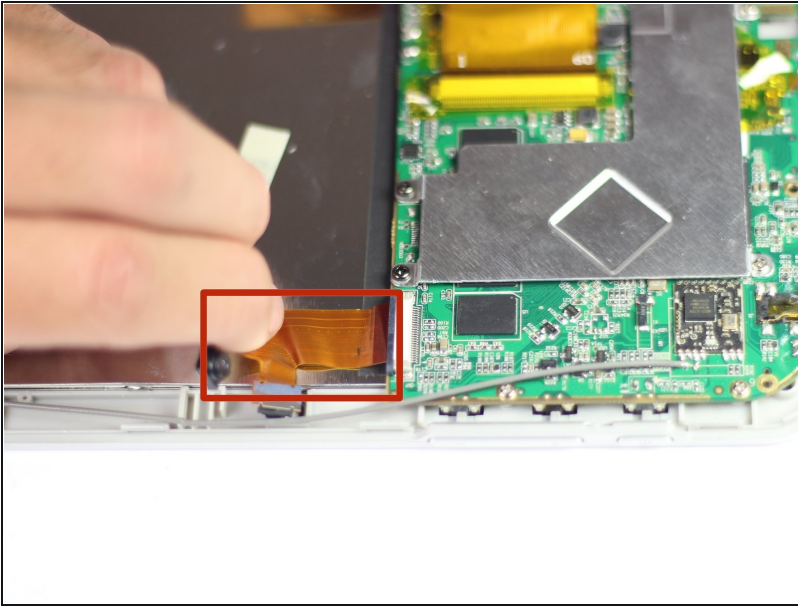

- Carefully disconnect the ribbon cables from the motherboard.

Step 9

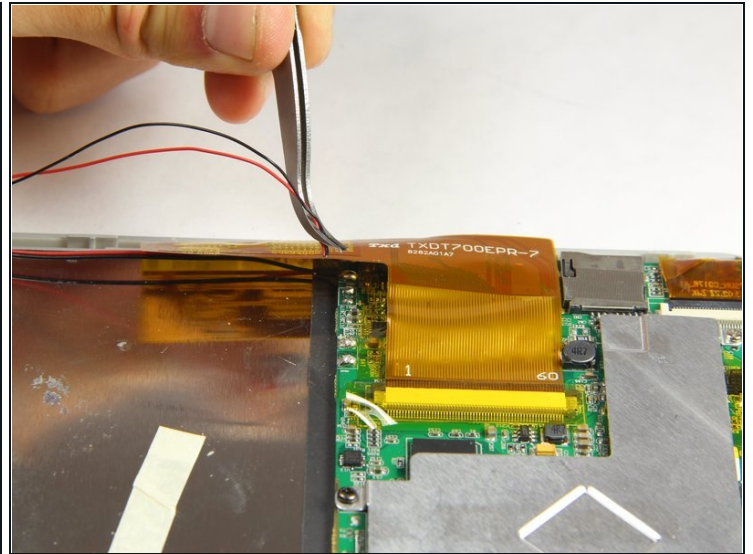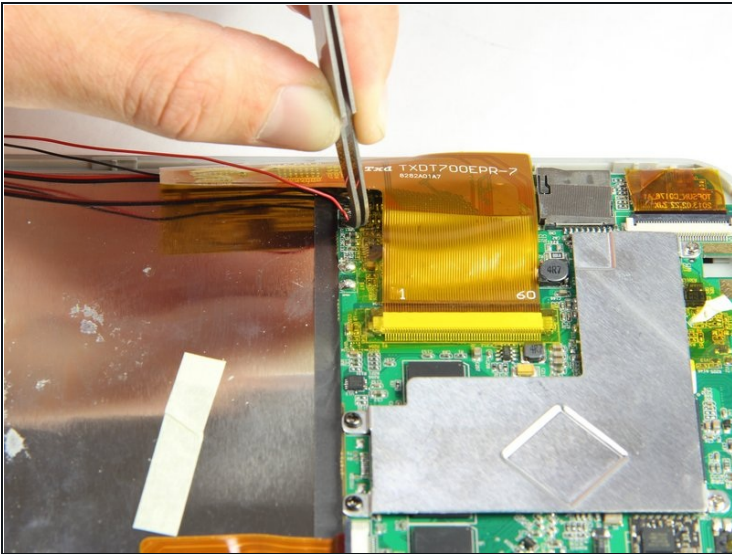

- Using the [tweezers](#), firmly grab wires and pull to disconnect them from the motherboard.

To reassemble your device, follow these instructions in reverse order.