




# Kindle Voyage Screen Replacement

Everyone has dropped an electronic device and...

Written By: Sean Yap

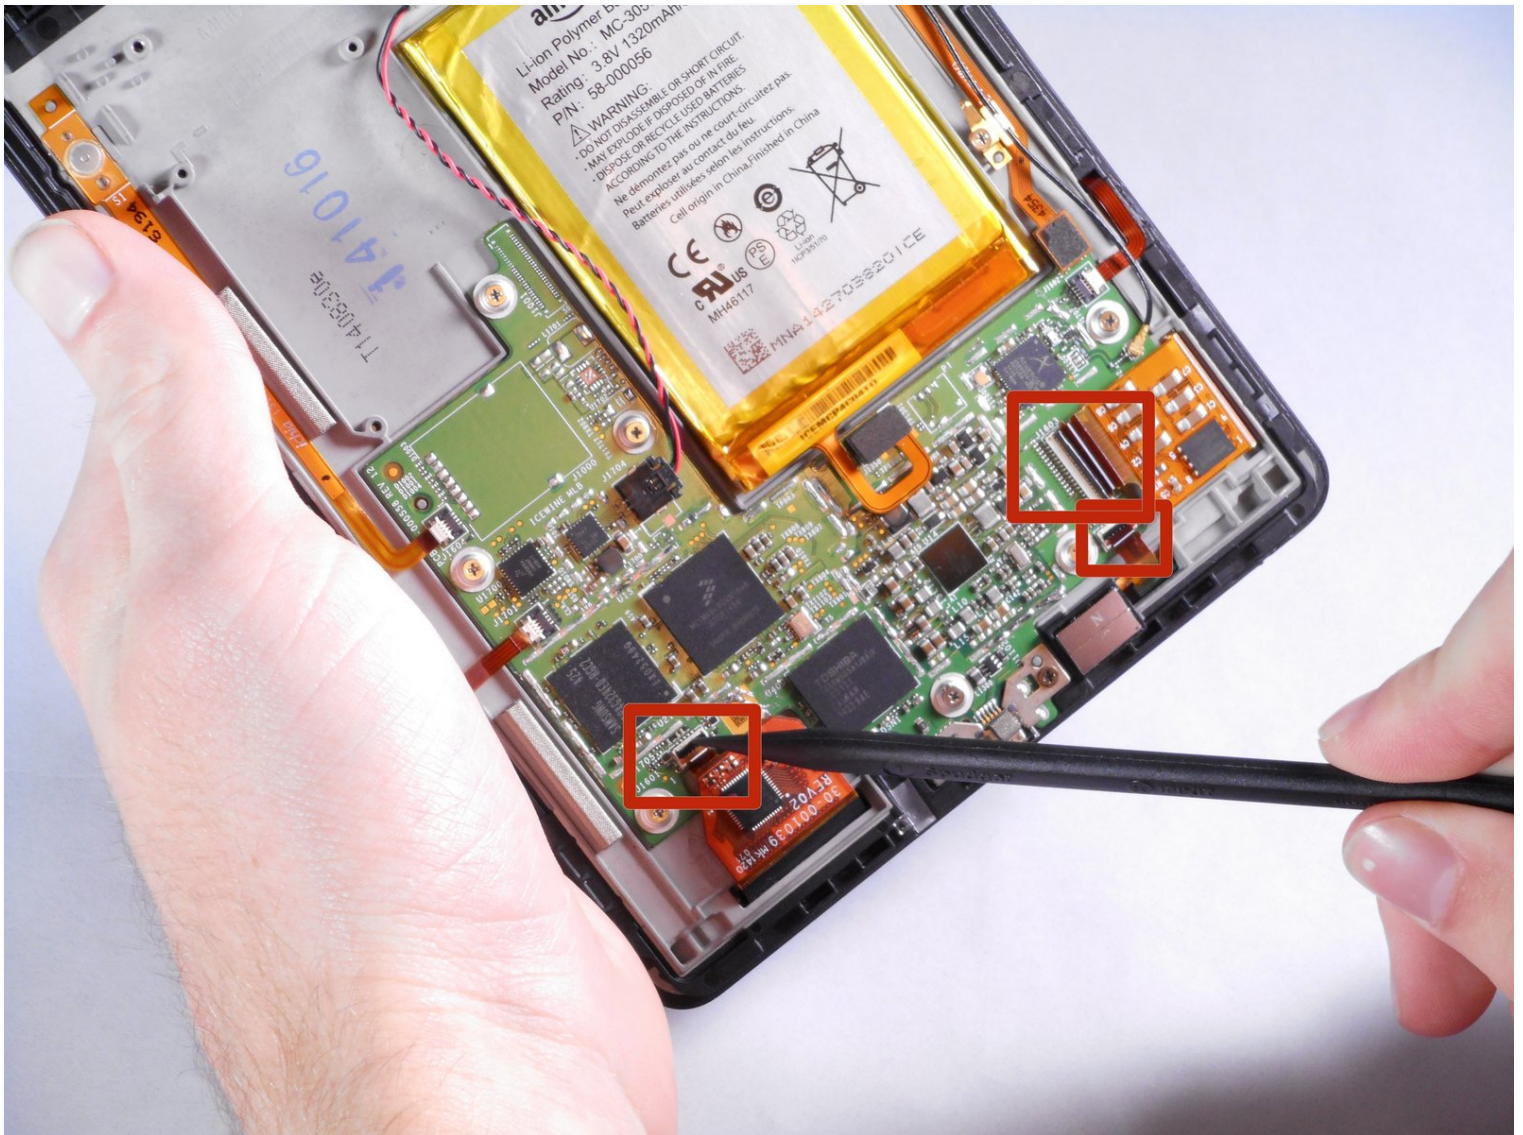

# INTRODUCTION

Everyone has dropped an electronic device and felt the sinking feeling of picking it up only to find a shattered screen. This guide shows you how to replace the screen on your Kindle Voyage should that ever happen.

## TOOLS:

[Phillips #00 Screwdriver](#) (1)  
[iFixit Opening Tool](#) (1)  
[Spudger](#) (1)  
[Mako Driver Kit - 64 Precision Bits](#) (1)  
[Hairdryer or Heat tool](#) (1)

## PARTS:

[Kindle Voyage Screen](#) (1)

### Step 1 — Back Panel



- Insert a plastic opening tool between the plastic panel shown on the device.
- Use the tool to pry the plastic away from the device.
- ⓘ There will be adhesive holding this piece of plastic to the device. You may have to pull pretty hard to get it separated.



## Step 2




- Use an aluminum driver attached with a Phillips head size #00 to remove the four 3mm screws shown in the picture. For reassembly, note that the top two and bottom two screws are different sizes.

## Step 3




- Once the screws are removed, the back panel can slide off the device.

## Step 4

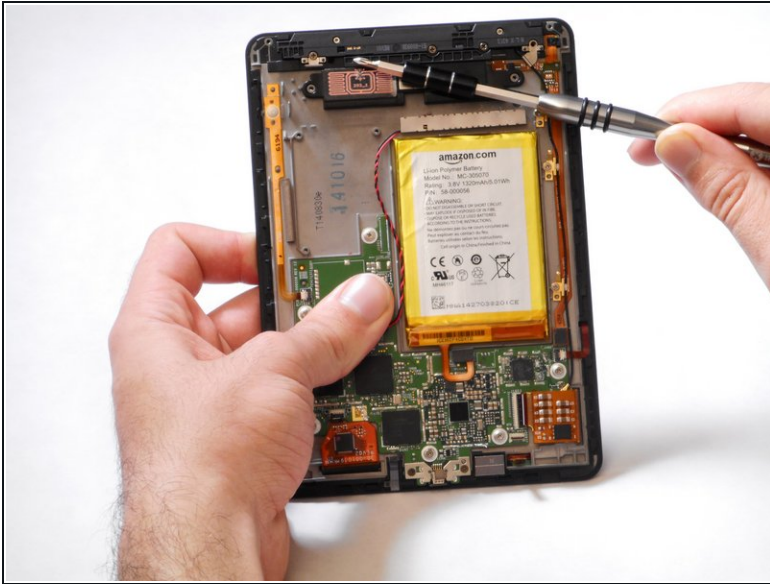

- Remove the magnetic component with the magnetic head of the aluminum driver.

## Step 5 — Screen

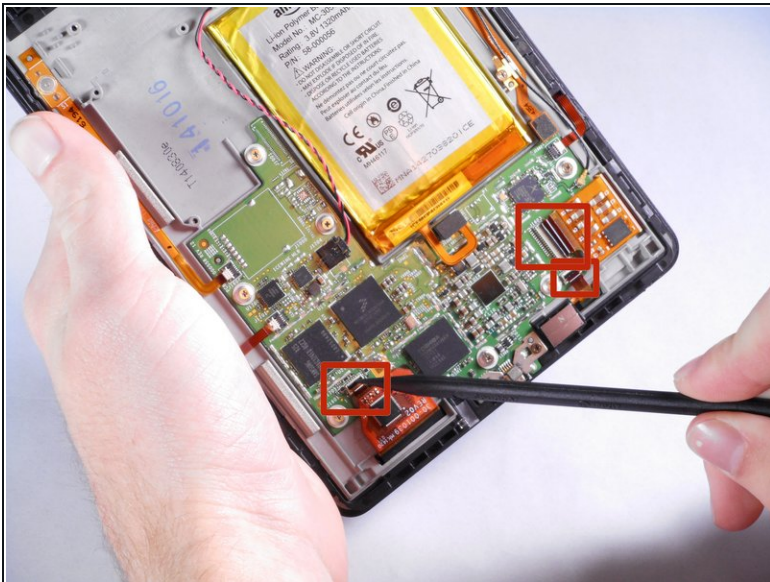

- Use a spudger to push up the black tabs on all three ribbon cables.
- Once the tabs are open, gently pull the ribbon cables out of their housings.

## Step 6



- There is quite a bit of glue between the screen and the case, So before inserting any opening tool, use plenty of heat to soften the glue.
- Insert a plastic opening tool into the small crack between the screen and the front panel. Counter-intuitively, start away from the fragile corners and in the middle of a side, near the touch buttons.
- Work your way around the screen until you can pry it all the way open.
- ① There is adhesive holding the screen to the front panel, so you will need to apply a lot of heat and some pressure to completely separate the two.



## Step 7



- Once the screen is free of the front panel, pull the loose ribbon cables through the openings in the bottom of the screen.
- Lift the screen off of the front panel.

---

To reassemble your device, follow these instructions in reverse order.