



Canon PowerShot G11 Front Cover Replacement

The guide will start after the removal of the rear replacement guide. It will be with opening the camera and removing the front cover. After the front cover is removed you can replace it with a replacement cover to fix any physical damage to the cover.

Written By: Dustin Brinegar



INTRODUCTION

The device should be turned off and the battery and memory card removed before you start the guide.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Rear Cover



- Remove the three screws on the bottom of the camera using the 00 sized phillips head screw driver.

Step 2



- Remove the four screws on the left side of the camera.

Step 3



- Remove the screw on the right side of the camera.

Step 4



- Open up the HDMI port on the right side of the camera. Then remove the screw in the HDMI port.

Step 5



- Remove the screw to the right of the view finder on the rear of the camera.

Step 6



- Use the spudger to crack open the case.

Step 7



- ⚠ The rear case is still attached to the camera with a ribbon cable. The socket has a flip up lid that must be flipped up before the cable can be removed. Use the tweezers to flip the cable attachment up.

Step 8



- The rear cover is now unattached from the camera.

Step 9 — Front Cover



- Push the button on the bottom right of the camera and then remove the plastic surrounding the lens.

Step 10



- Use the spudger to pop off front case.

Step 11



- Pull the loosened cover off and you are finished.

To reassemble your device, follow these instructions in reverse order.