



HP 7 1800 Speaker Replacement

Replace the speaker in your HP 7 1800 to get back to listening to your favorite tunes.

Written By: Todd Dobrozdravic



INTRODUCTION

This guide will aid you in the replacement of your HP 7 1800 speaker. It requires beginning soldering skills.



TOOLS:

- [Spudger](#) (1)
 - [Portable Soldering Iron](#) (1)
 - [Tweezers](#) (1)
-


Step 1 — Remove the back panel



- Carefully insert a Spudger into one of the corners of the tablet.
- Slide the Spudger along the edge popping the tabs out along the way.


⚠ Be careful not to break the tabs.

Step 2 — Remove the battery

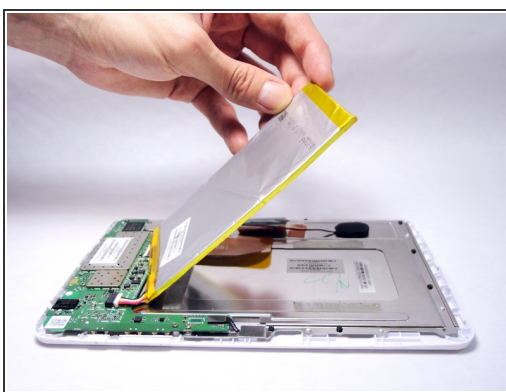


- Slide the Spudger under the battery to lift it off the adhesive.
- Gently pull the cable connection from the motherboard using tweezers.

Step 3 — Desolder the speaker wires

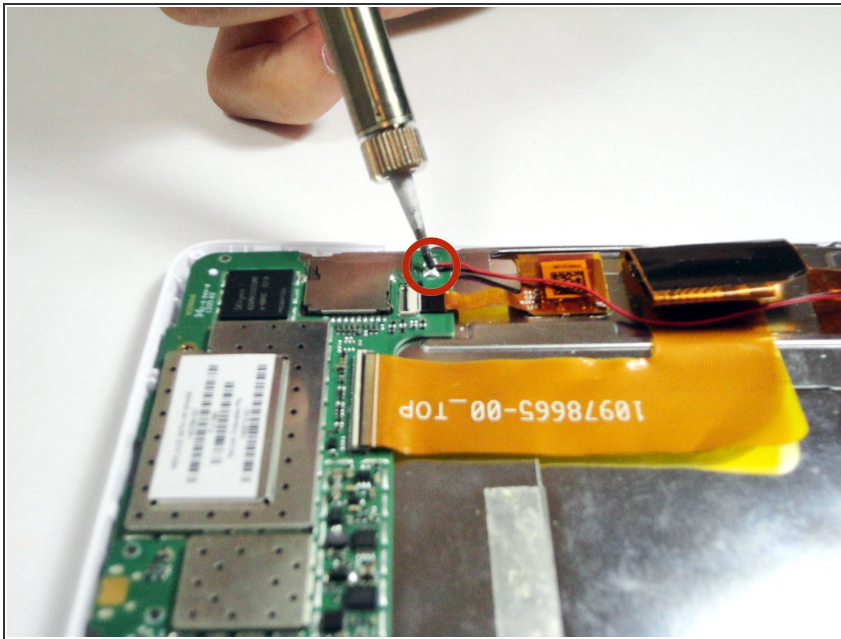

- Desolder the two leads of the speaker wire that are connected to the motherboard.

Step 4 — Remove the speaker

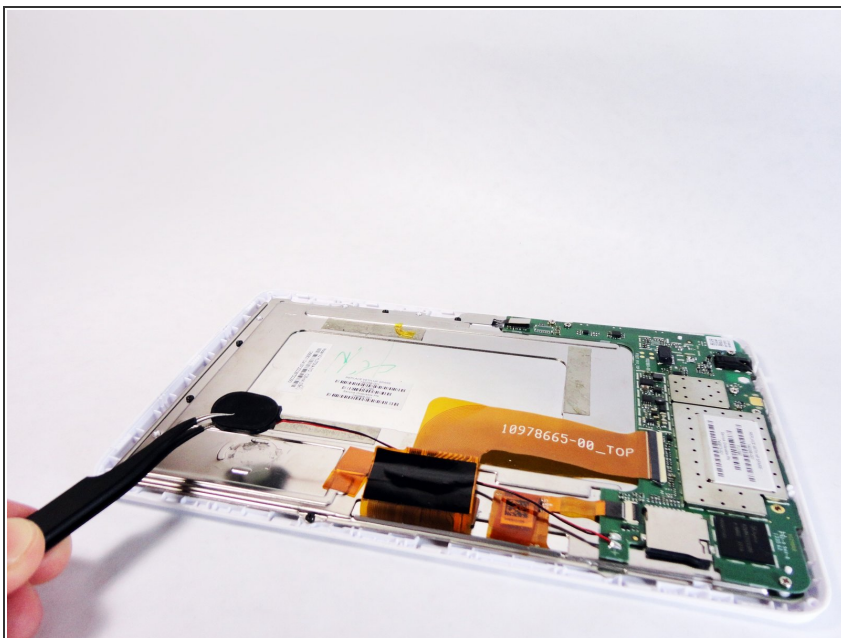

- Using tweezers, gently pull the speaker off of the metal plate.
- ⓘ The speaker is held onto the metal plate with light adhesive. It will require a little force to peel off.

To reassemble your device, follow these instructions in reverse order.