



# Computer King Muffin Kinder 7 Battery Replacement

This guide will Show you how to replace the battery in your Computer King Muffin Kinder 7.

Written By: Katherine



---

## INTRODUCTION

To complete this guide, you will need to disassemble your device and use a soldering iron to replace the battery.

Make sure to power off the device before you begin to take apart your device. Not doing so could potentially cause harm.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Soldering Iron](#) (1)
-

## Step 1 — Battery



- Use the plastic opening tool help push out the microSD card from the microSD slot.

## Step 2





- Use the plastic opening tool to unclip the plastic front from the plastic back. Use the MicroSD slot to initially start the unclipping.

### Step 3



- The battery is glued onto the black plastic. Use the plastic opening tool to pry the battery from the black plastic.

### Step 4

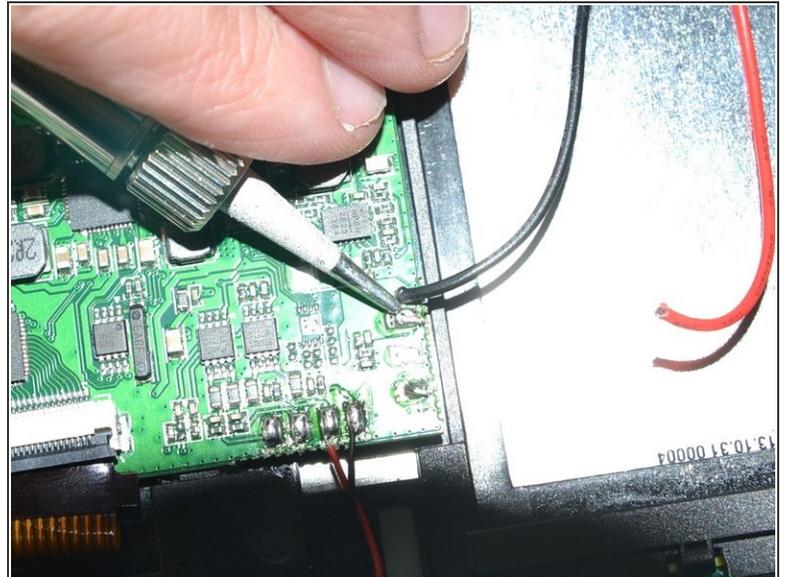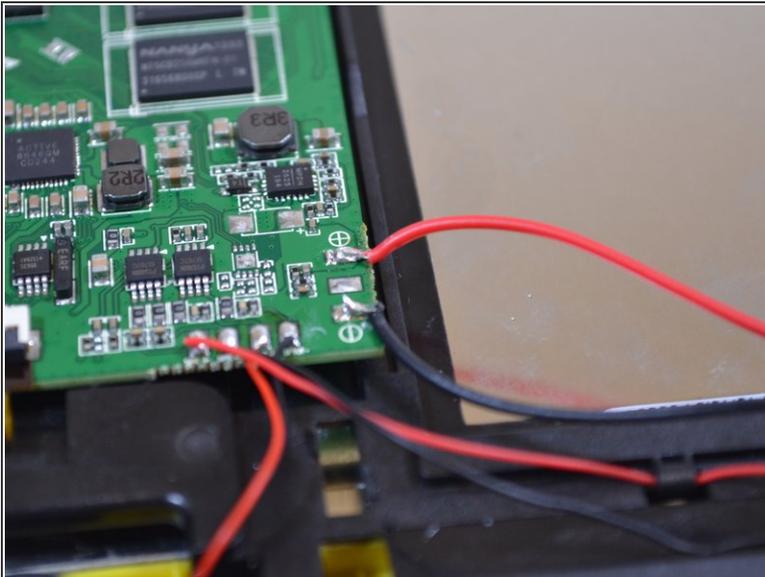

- Unsolder the red and black wires that are connected to the battery from the logic board using a soldering iron.
- Tips on how to solder can be found [here](#).

This document was generated on 2020-11-24 03:26:38 PM (MST).

To reassemble your device, follow these instructions in reverse order.