




# Disassembling DeWalt D28110 Gear Case

This guide will walk through removing the gear case from the plastic casing.

Written By: Will Young

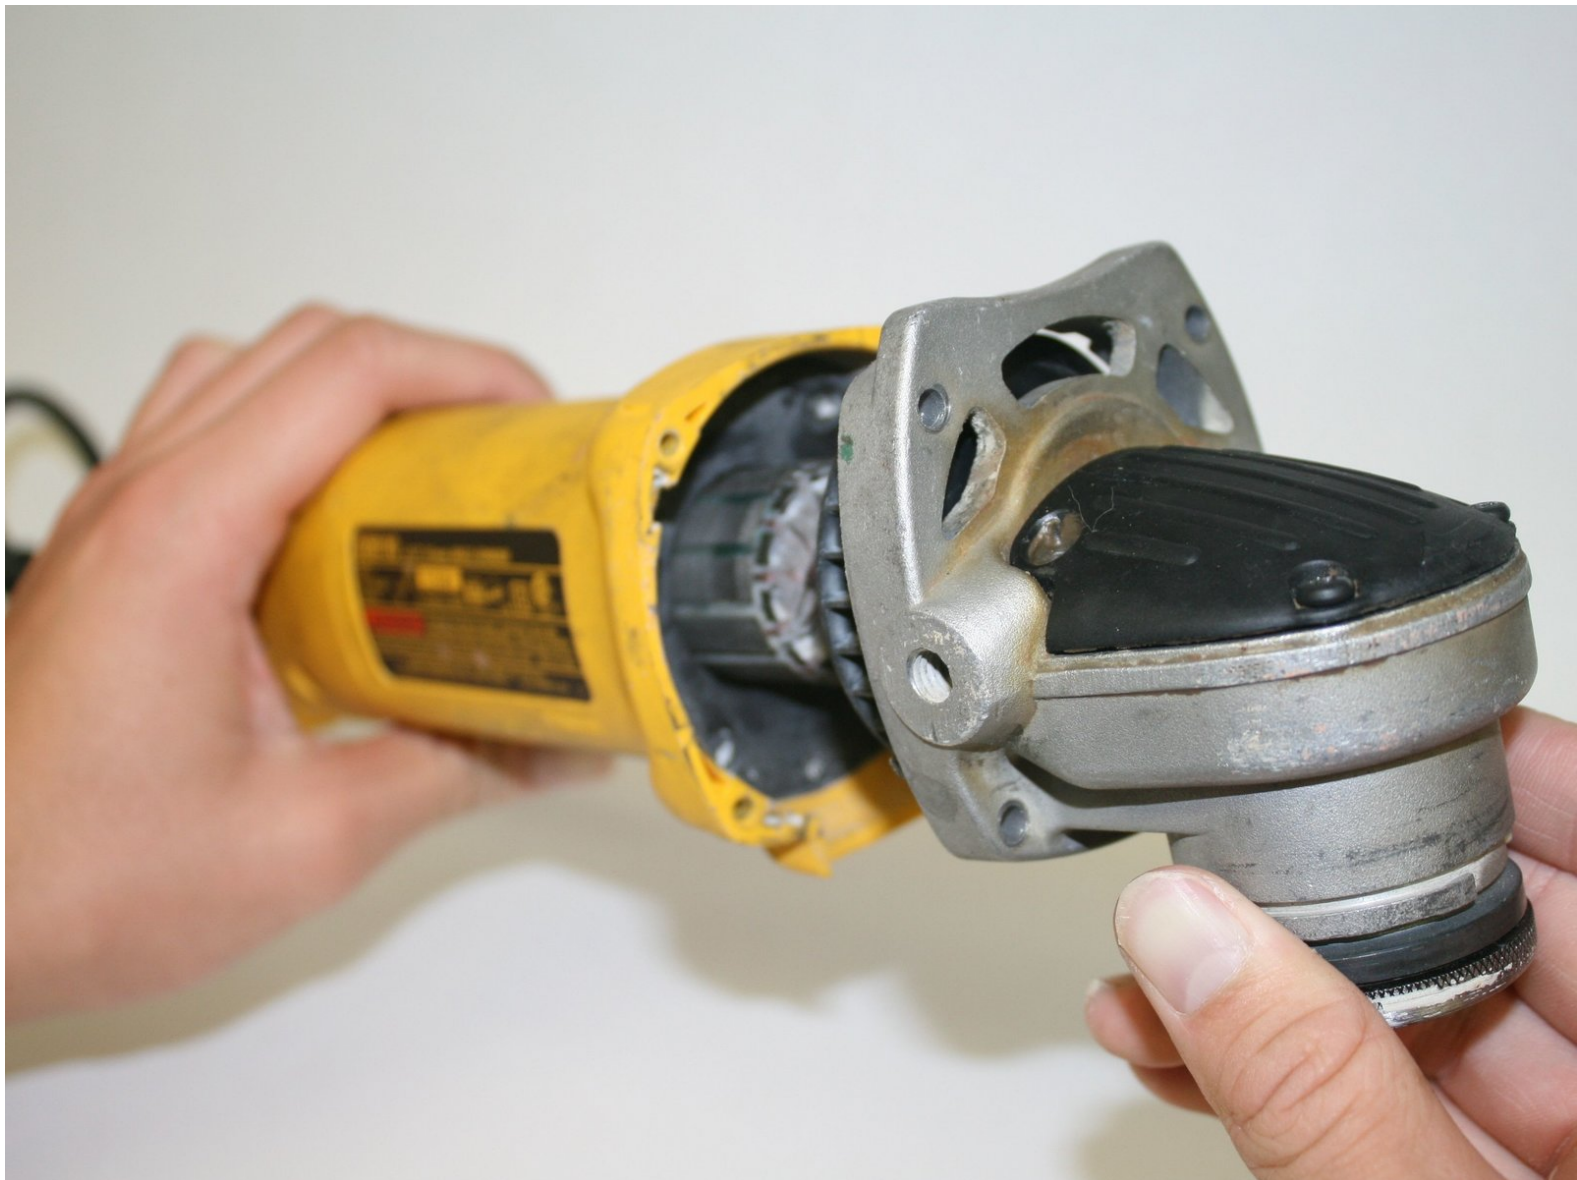

---

# INTRODUCTION

Prerequisite Only



## TOOLS:

- [T15 Torx Screwdriver](#) (1)
-

## Step 1 — Disassembling DeWalt D28110 Gear Case



- Using the T-15 screwdriver, remove the four 22-mm torx screws on the gear case.
- ⚠ Unplug the grinder before any disassembly.

## Step 2



- Pull out the gear case.

To reassemble your device, follow these instructions in reverse order.