




# Canon PowerShot G11 Top Cover Replacement

This guide will replace the top cover, including all the dials for this device.

Written By: Dustin Brinegar

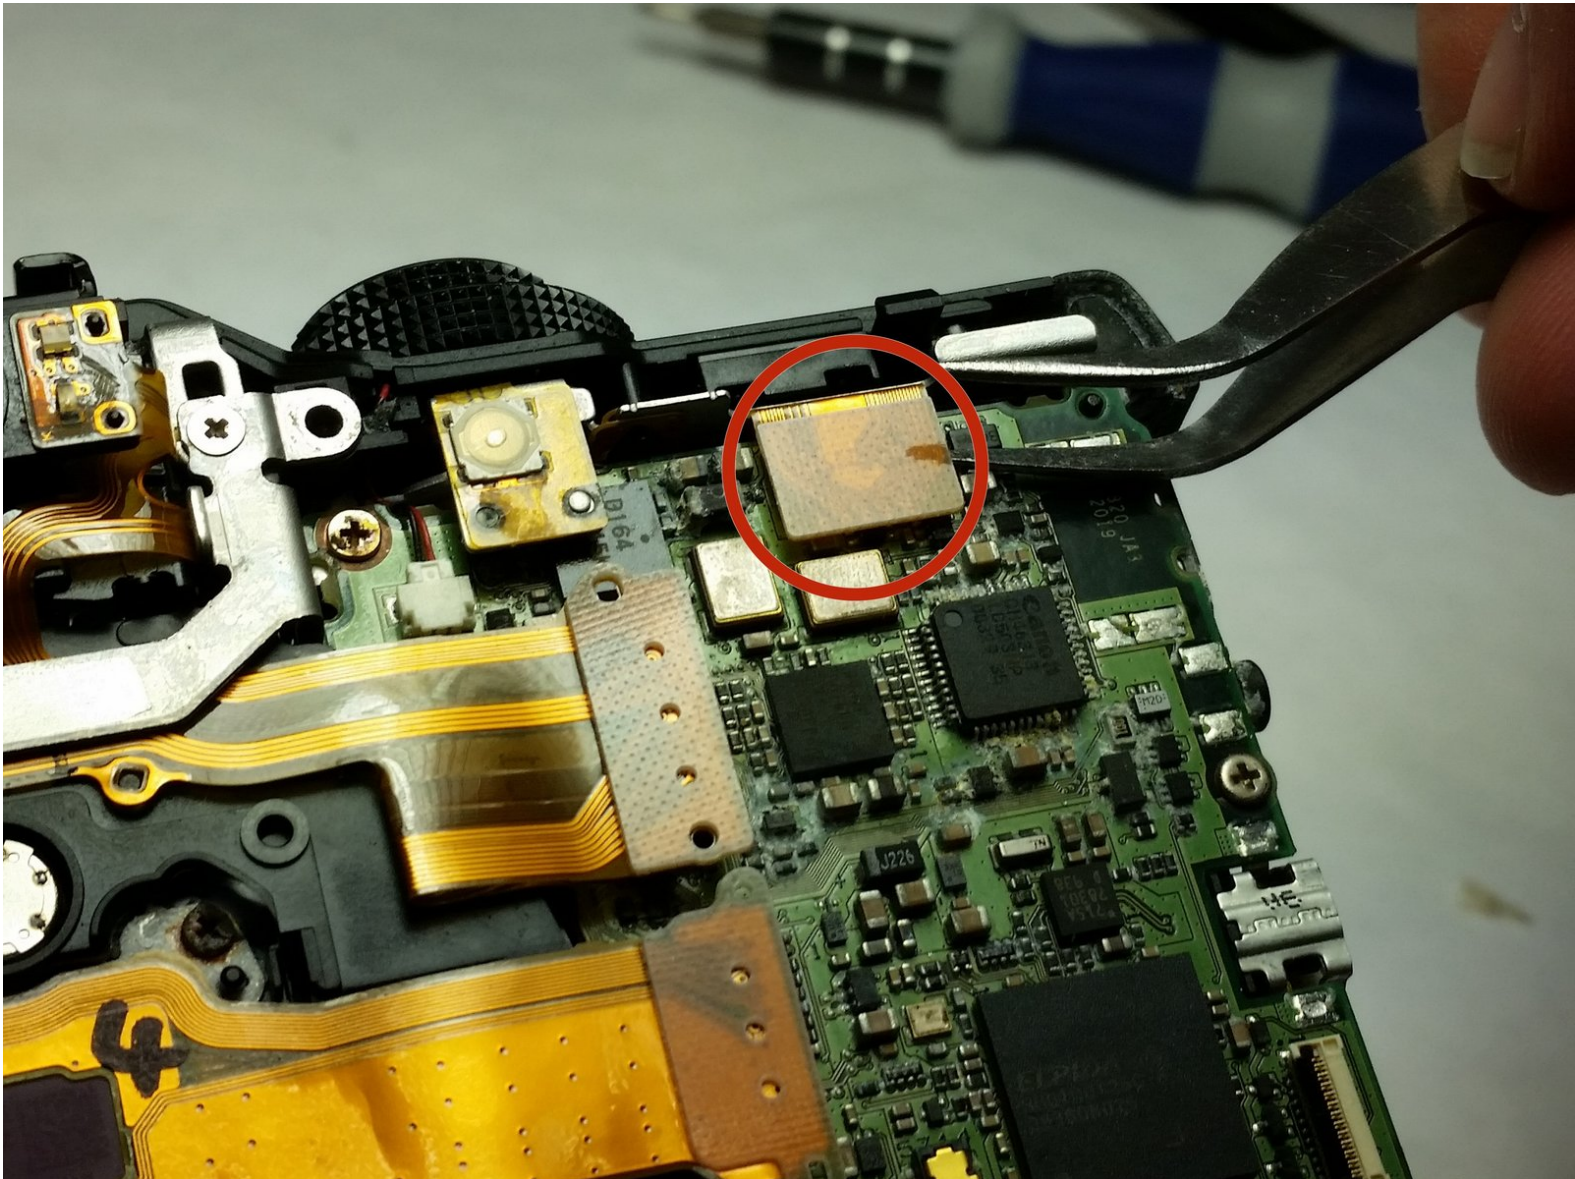



## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

## Step 1 — Front Cover



- Push the button on the bottom right of the camera and then remove the plastic surrounding the lens.

## Step 2



- Use the spudger to pop off front case.




### Step 3




- Pull the loosened cover off and you are finished.

### Step 4 — Top Cover

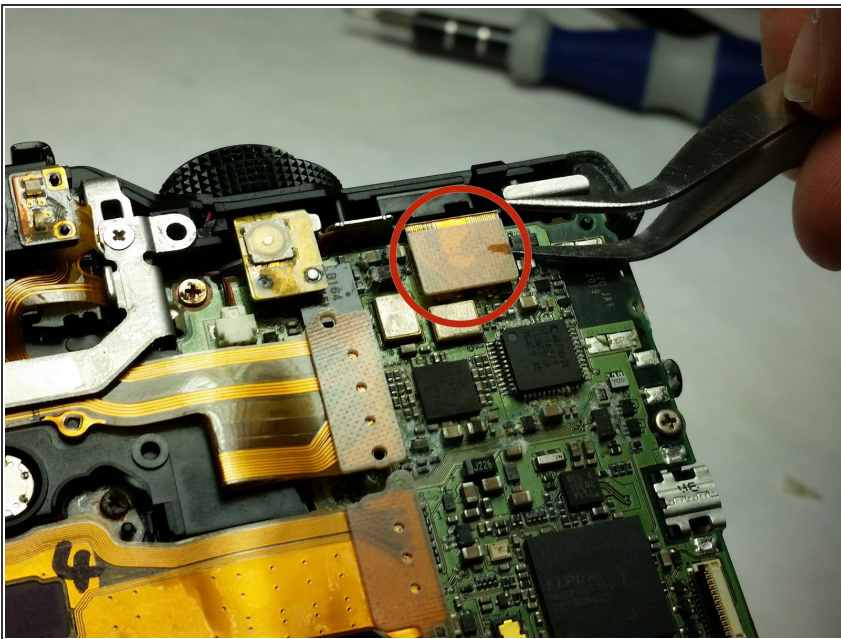


- Once both the front and rear covers are removed, disconnect this ribbon cable by flipping it up and disconnecting it.

## Step 5

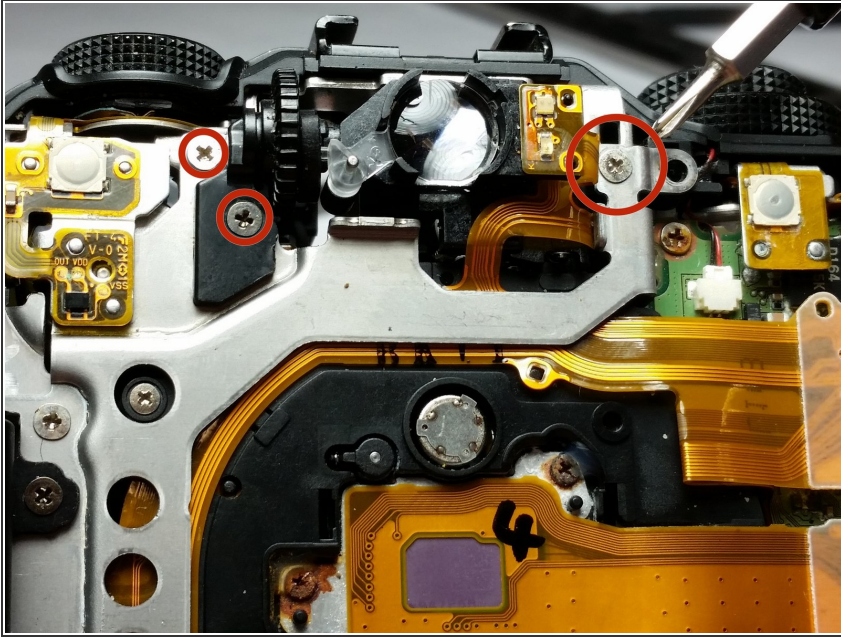

- Remove these three screws from the rear side of the camera.


## Step 6

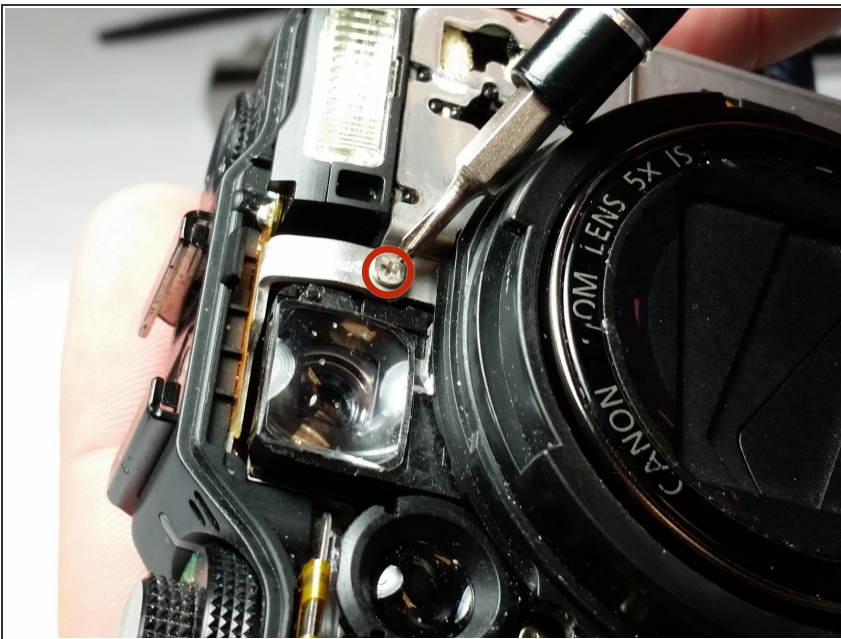

- Remove this screw from the front of the camera.




## Step 7

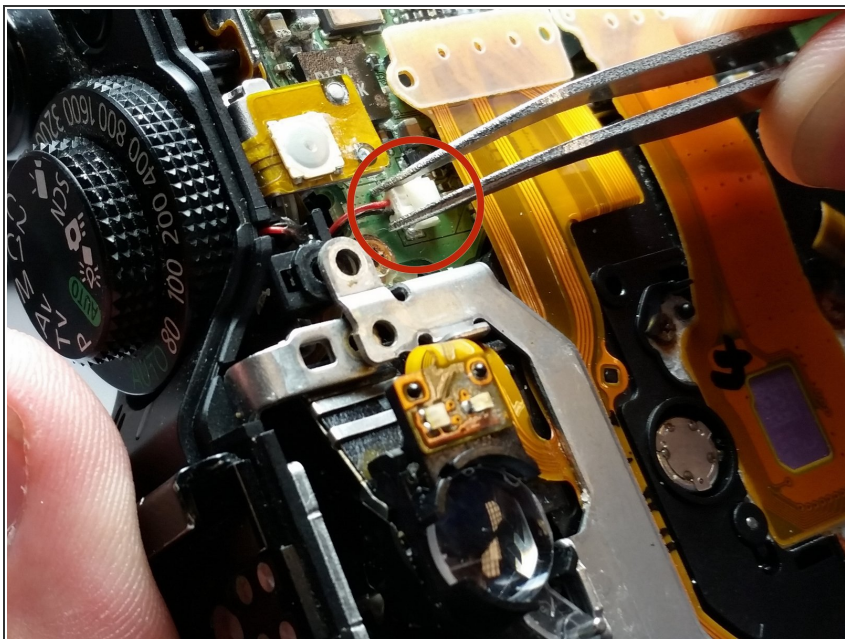

- Disconnect this cable from the motherboard by sliding it in the direction of the cable (toward the top of the camera).

## Step 8

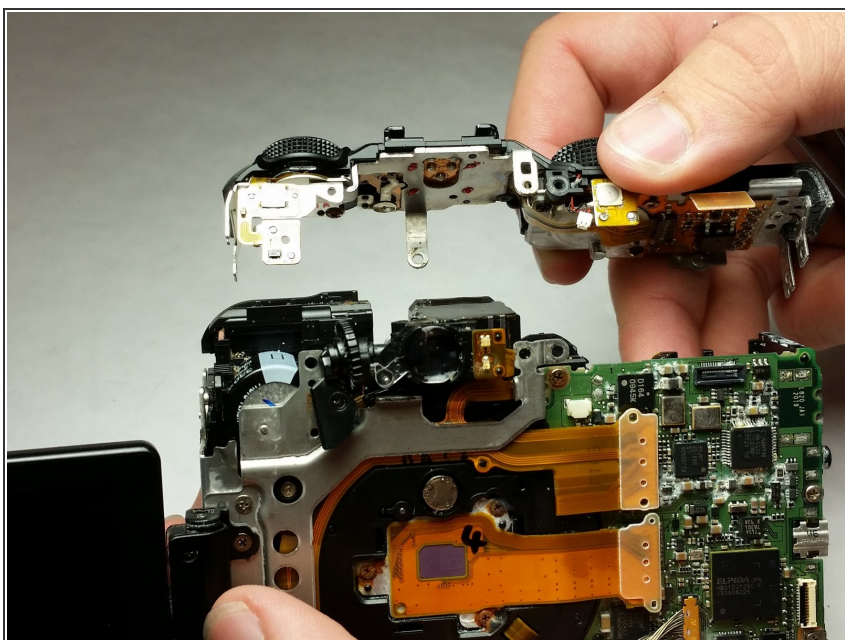

- Remove the top cover and you are finished.

To reassemble your device, follow these instructions in reverse order.