



Briggs and Stratton 675 Series Repair Air Filter Replacement

Use this guide to replace a dirty or damaged air filter in a Briggs and Stratton 675 Series Engine.

Written By: Taichi Nakahara



INTRODUCTION

Removing the air filter is really simple. It only takes one screw to be removed and the rest can be done with your hands. The air filter should be replaced annually.

TOOLS:

- [Flathead Screwdriver](#) (1)
-

Step 1 — Air Filter



⚠ Make sure the the engine is off and the spark plug wire is removed and away from the spark plug before beginning.


- Use a Flathead #4 screw driver to remove the 40mm screw that holds the air filter case in place.

Step 2



- Use your hands to pull the air filter case out of the hinge at the bottom.

Step 3

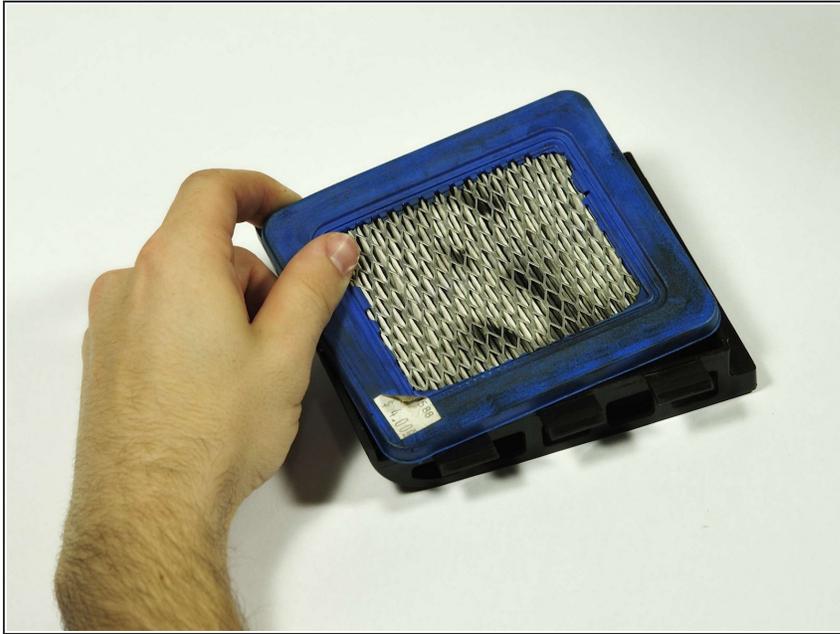

- Simply remove the air filter with your hands.

To reassemble your device, follow these instructions in reverse order.