



Microsoft Band Battery Replacement

You will be replacing one or both batteries located in the side panels.

Written By: Monique Salinger



INTRODUCTION

There are two batteries in the band, located in the side panels. One battery compartment contains a vibrator, but the replacement steps are essentially the same.

Warning: The following guide is likely to ruin the water resistance of the device.



TOOLS:

- [Spudger](#) (1)
- [T3 Torx Screwdriver](#) (1)



PARTS:

- [Microsoft Band \(1st Gen\) Replacement Battery and Vibrator](#) (1)

Step 1 — Battery



- Unscrew both side panel 2mm screws using the T3 Torx screwdriver.

Step 2



- Firmly pry up the side panel using the plastic spudger to break the waterproof seal and lift the battery panel.

Step 3



- Gently pry up one edge of the battery with the plastic spudger.

Step 4



- Remove battery from its compartment with your fingers.

To reassemble your device, follow these instructions in reverse order. Replace the vibrator in its original compartment.

