



# Kodak EasyShare M381 Back Panel Frame Replacement

The colored panel of this camera can easily...

Written By: Johannes Chandler



# INTRODUCTION

The colored panel of this camera can easily become cracked or damaged. This guide will show you how to remove it, so you can easily replace it.

---

## TOOLS:

Phillips #00 Screwdriver (1)

Tweezers (1)

Magnetic Project Mat (1)

---

## Step 1 — Battery



- First, press in and slide forward the battery latch as indicated by the arrow.

## Step 2




- Press down on battery until you hear a click and release it. Battery should easily slide out.

## Step 3 — Back Panel Frame



- Remove the 3.9 mm frame screws using a Phillips #00 screwdriver.
  - ① Using a magnetized surface to keep from losing screws may be very helpful.

## Step 4

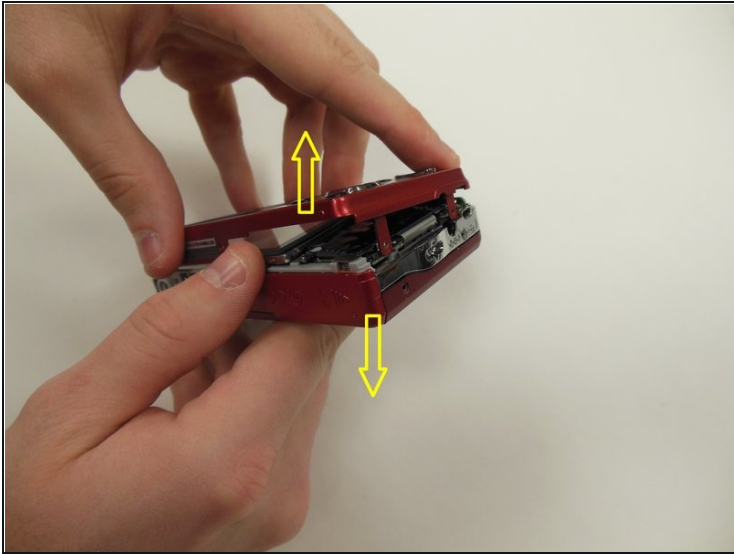

- Using both hands, carefully pull the frame apart from the camera.

---

To reassemble your device, follow these instructions in reverse order.