




Kodak EasyShare M381 Button Replacement

Removal and replacement of the buttons from...

Written By: Christina Hamby

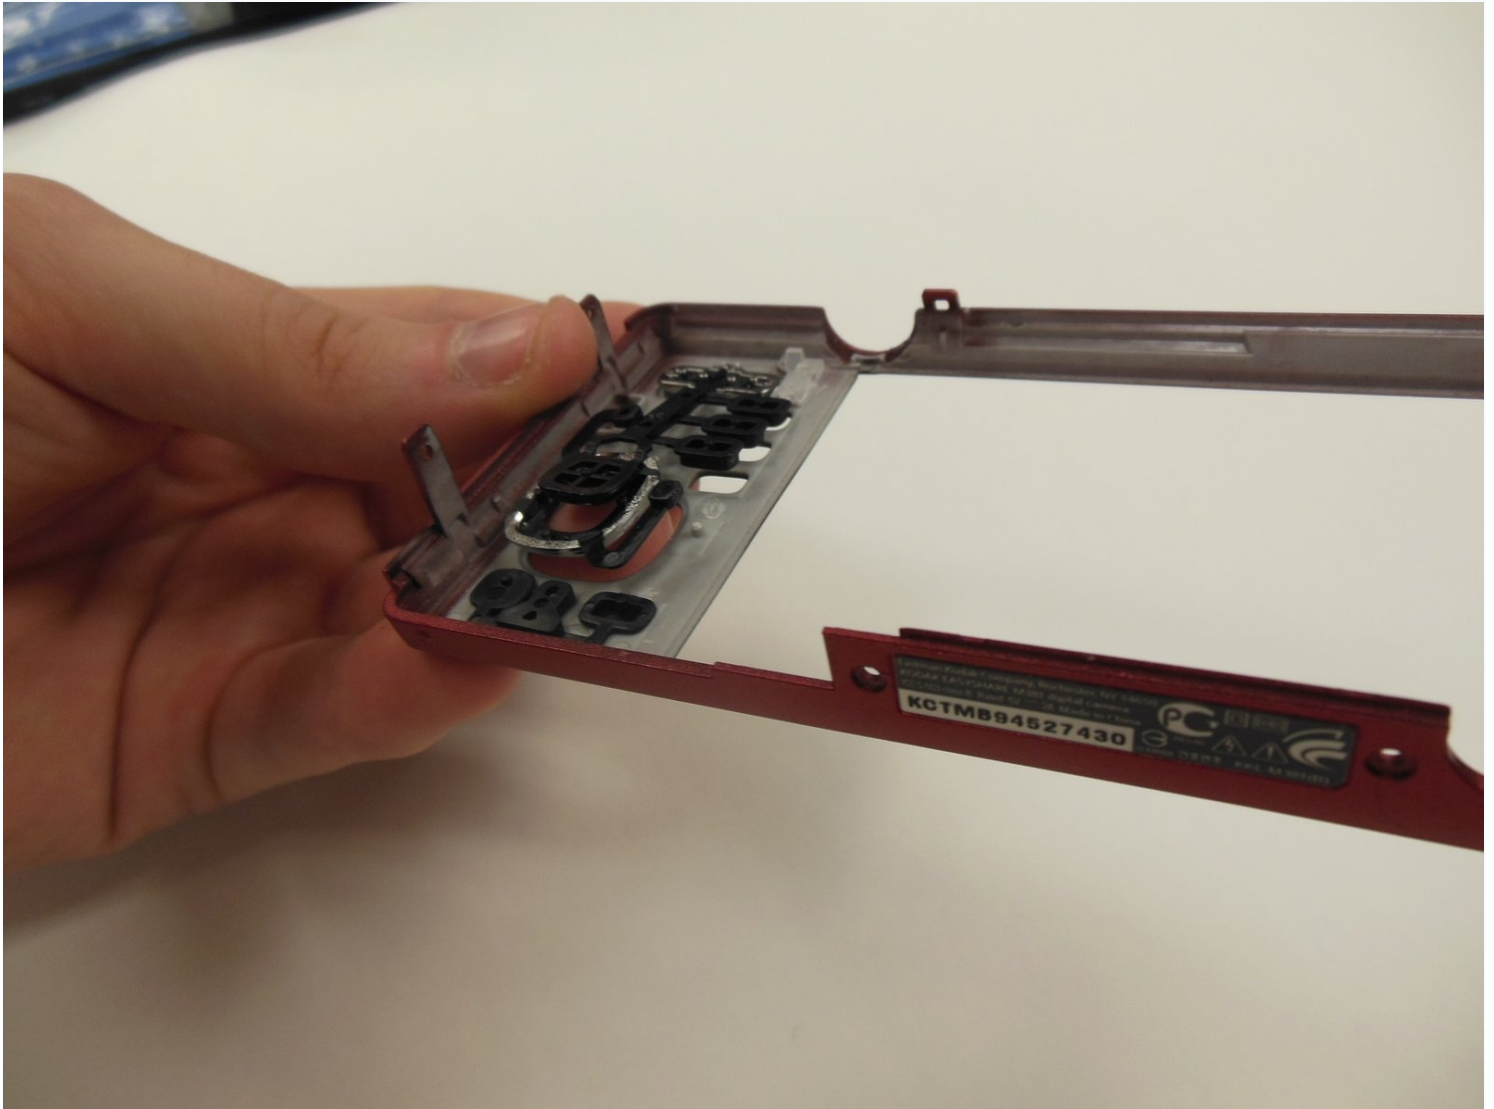

INTRODUCTION

Removal and replacement of the buttons from your Kodak EasyShare M381 can be simple and easy. You can also use this guide for simply cleaning your camera buttons if they have a weak connection. Be sure to turn the camera off and remove the batteries before beginning this repair.

TOOLS:

[Magnetic Project Mat](#) (1)

[Tweezers](#) (1)

[Phillips #00 Screwdriver](#) (1)

[Soft Cloth](#) (1)

Step 1 — Battery



- First, press in and slide forward the battery latch as indicated by the arrow.

Step 2




- Press down on battery until you hear a click and release it. Battery should easily slide out.

Step 3 — Back Panel Frame




- Remove the 3.9 mm frame screws using a Phillips #00 screwdriver.
 - ① Using a magnetized surface to keep from losing screws may be very helpful.

Step 4

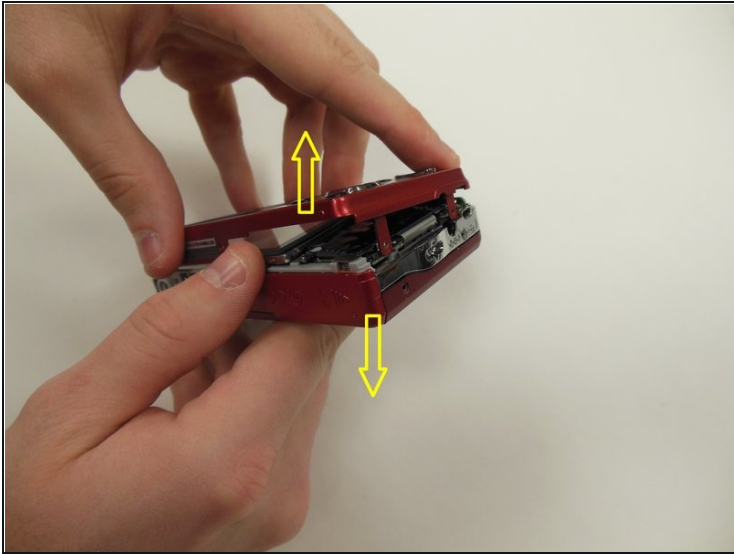


- Using both hands, carefully pull the frame apart from the camera.

Step 5 — Button

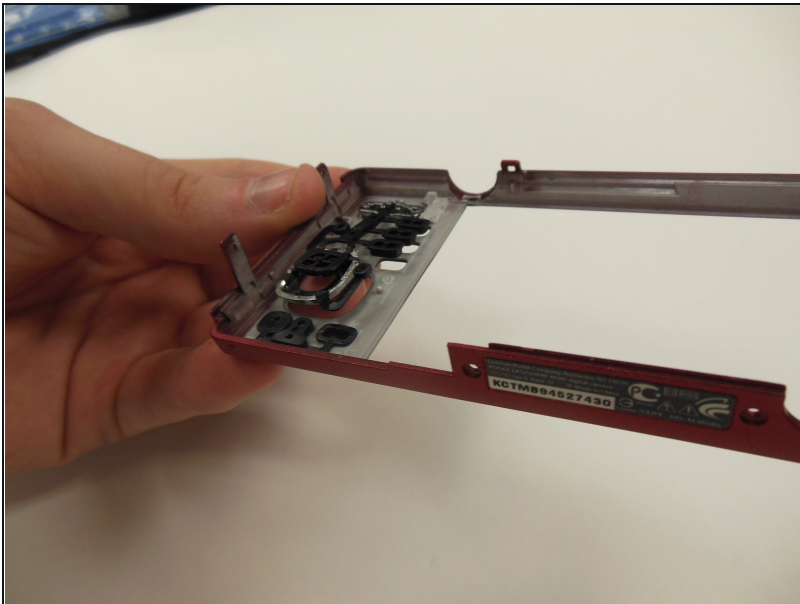

- Carefully pick up frame and push upward on buttons.

Step 6

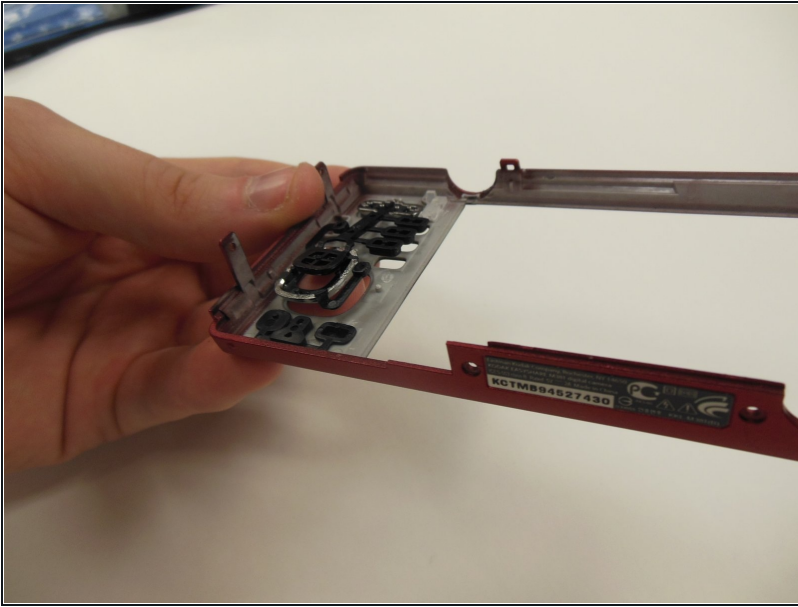

- Clean and replace as needed.
- ① A microfiber cloth, or any other type of electronic cloth may be used to clean them if desire.

To reassemble your device, follow these instructions in reverse order.