



# Nikon Coolpix S3100 Camera Battery Replacement

A short step-by-step guide on how to replace the battery in a Nikon Coolpix S3100 camera model.

Written By: Jorge



## INTRODUCTION


In order for the Nikon Coolpix S3100 to even function, you must install a battery successfully using this step-by-step guide.

## Step 1 — Battery





- Place camera with the LCD screen facing you.

## Step 2

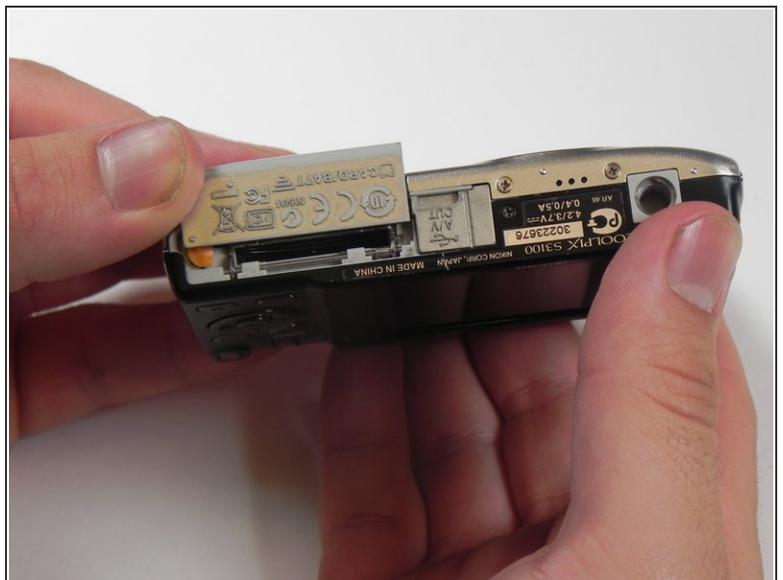

- The "Card/Batt" compartment should be located on the left side.
- Slide it away from you. (picture 2)

### Step 3

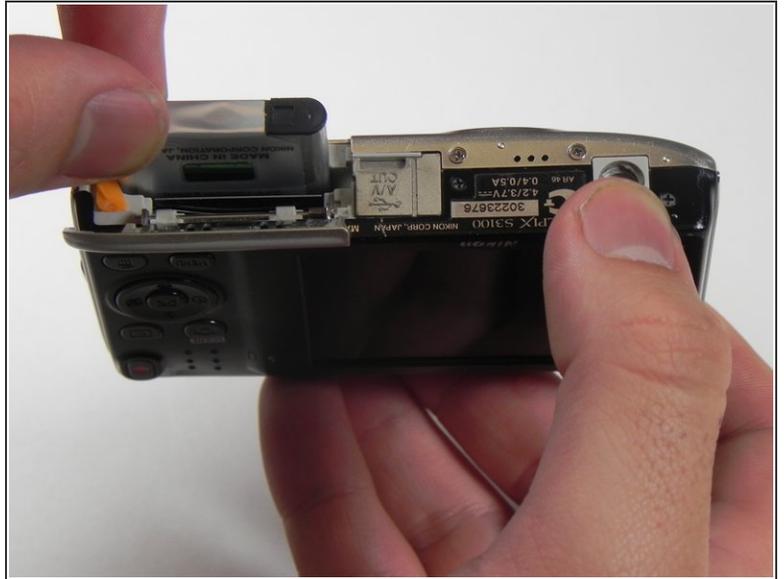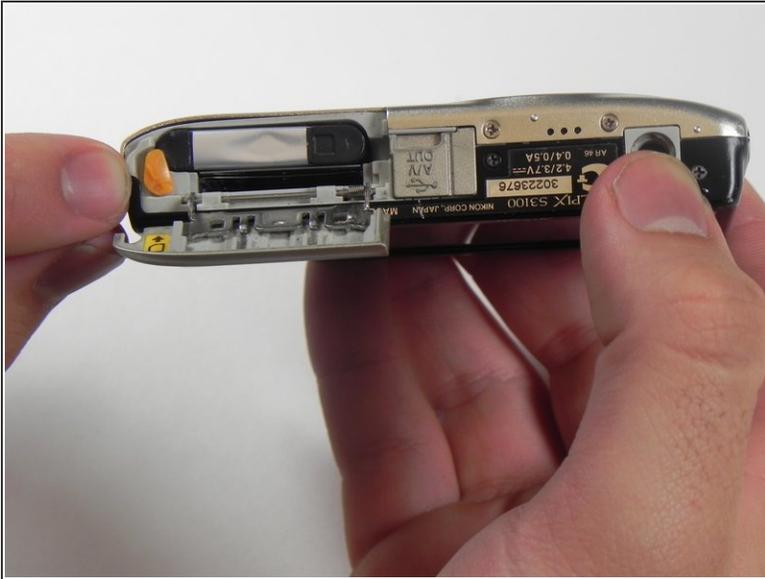

- Slide the orange tab to release the battery.
- The battery will spring up. Grab and replace.

### Step 4



- Insert new battery with the arrow facing you or the front of camera.
- ⓘ Battery replacement is a Lenmar DLZ319N.

To reassemble your device, follow these instructions in reverse order.