



Nokia Lumia 610 Touch screen / Digitizer, LCD Display Replacement

Nokia Lumia 610 Touch screen / Digitizer Replacement or LCD Display

Written By: ZFix



INTRODUCTION

If the Touchscreen / Glass of your phone is broken, this guide will help you to disassemble the phone and replace the Digitizer.

Video manual:

[video: <https://youtu.be/2M01ZDcXtpY>]



TOOLS:


- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)



PARTS:



- [Nokia Lumia Touchscreen](#) (1)

Step 1 — Touch screen / Digitizer, LCD Display

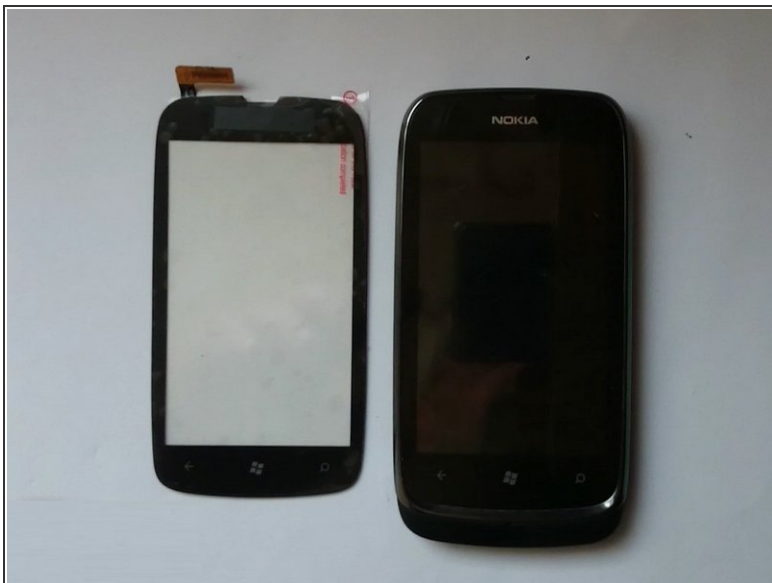


- Switch off the phone and remove the battery.

Step 2

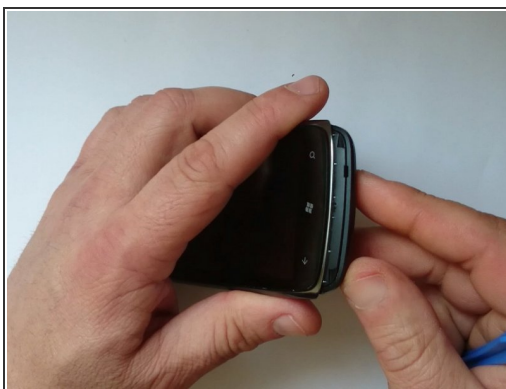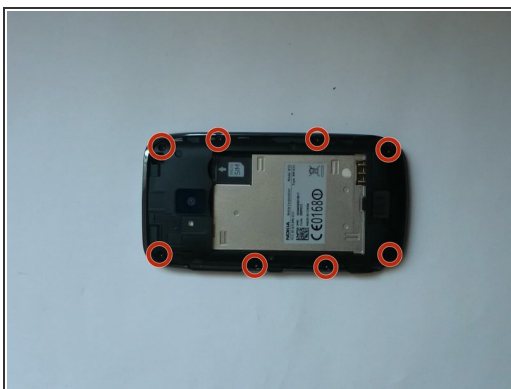


- Remove 8x Torx T5 screws.
- With a plastic tool, start with separating the middle frame from the down side.

Step 3

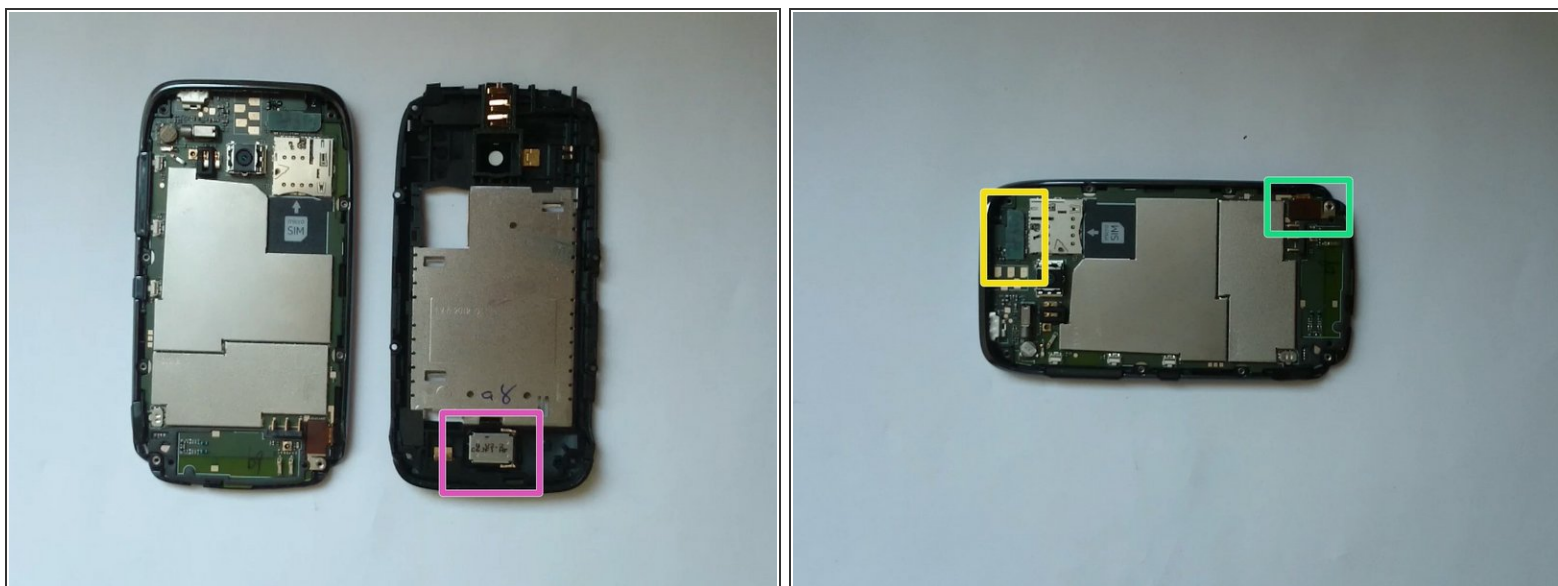

- The Loudspeaker is on the middle frame.
- Disconnect the LCD Display flex cable.
- Disconnect the Touch screen flex cable.

Step 4

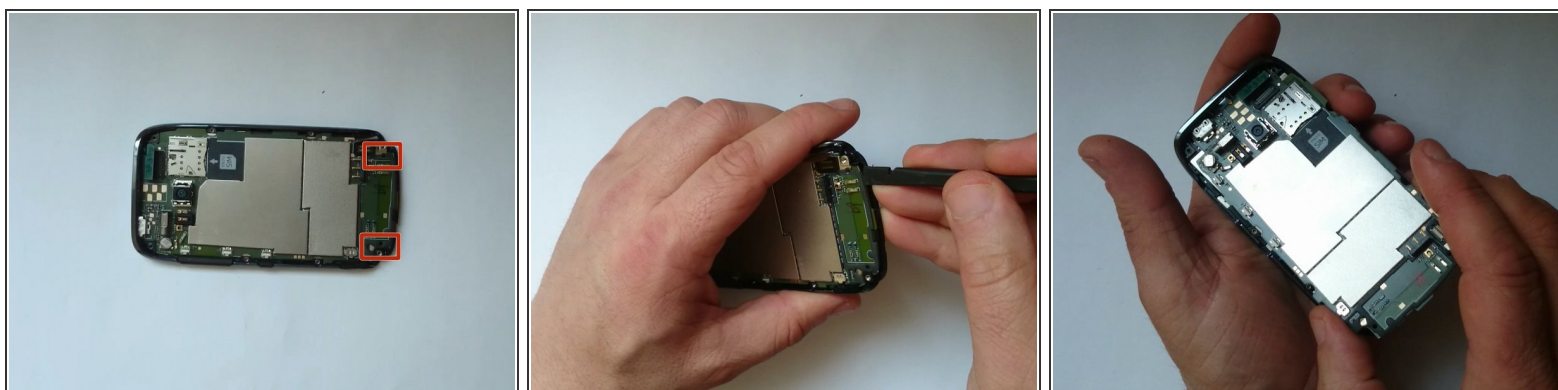


- The Logic board is held by 2x locking clips at the bottom side.
- Release it and gently remove it from the front frame.

Step 5



- Put tape on the glass to not scatter pieces.
- Warm the glass to melt the adhesive.
- Use plastic tools to separate the touchscreen from the frame.

Step 6

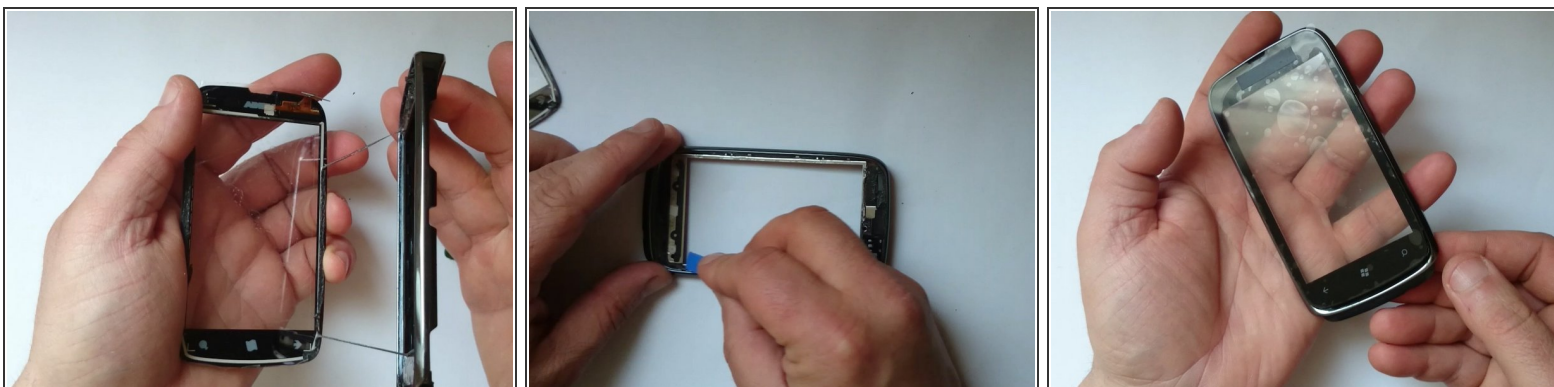

- After separating, clean up the sticker that remains on the borders.
- New line. Install the new touchscreen and reassemble the device.

Step 7



- That's all.
- .
- .
- .
- .
- .
- .
- **Did you do it successfully?**

To reassemble your device, follow these instructions in reverse order.