



Nikon Coolpix S30 Batteries Replacement

Your Nikon Coolpix S30 camera is powered by two...

Written By: Cassie Hamm



INTRODUCTION

Your Nikon Coolpix S30 camera is powered by two AA batteries. If your camera won't turn on, its batteries may be out of power. Follow this guide to remove the old batteries and install new ones. This may solve the problem and avoid other more complicated repairs. This guide will explain how to remove the battery compartment cover, change the batteries, and replace the cover securely.


Before starting this process, disconnect the camera from its charger.

PARTS:

[AA Batteries](#) (2)

Step 1 — Batteries



- Slide the battery cover to the right.
-  The hinge is on the left side of the cover which will allow the cover to stay attached.

Step 2



- Slide the second cover (yellow) to the right (similar to the outer cover). This will allow the batteries to be exposed.

Step 3



- Remove the batteries by gently tipping the camera.

To reassemble your device, follow these instructions in reverse order.