



# Nikon Coolpix S30 LCD Screen Replacement

For this guide you will need a new LCD screen....

Written By: Cassie Hamm



# INTRODUCTION

For this guide you will need a new LCD screen. If you are using iFixit tools, you will need a PH000 head and a T5 star head.

## TOOLS:

[Phillips #000 Screwdriver](#) (1)

[T5 Torx Screwdriver](#) (1)

[Tweezers](#) (1)

## Step 1 — Batteries



- Slide the battery cover to the right.
- ① The hinge is on the left side of the cover which will allow the cover to stay attached.

## Step 2



- Slide the second cover (yellow) to the right (similar to the outer cover). This will allow the batteries to be exposed.

## Step 3



- Remove the batteries by gently tipping the camera.



## Step 4 — LCD Screen



- FIRST: remove the batteries.
- Unscrew the four screws around the corners of the camera. This can be done using the iFixit kit's T5 (star tip screwdriver)

## Step 5



- Unscrew the screw on the left (silver) first. It can be removed with the same tip (T5)
- Change screwdriver tip to iFixit kit's PH000. This removes the screw on the right (black) It is a small Phillips head.

## Step 6



- Gently separate the back panel from the rest of the camera.

## Step 7




- Remove screw connecting the top right of the screen to the mother board.

## Step 8



- Spin the camera around and gently pull the screen towards you. This will allow easy access to components on the motherboard.

## Step 9

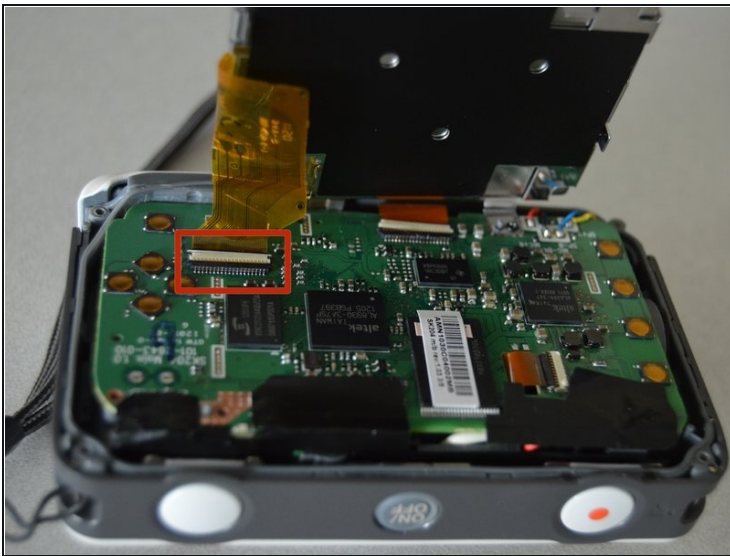

- Remove connected strip by flipping up the small off-white plastic strip with [tweezers](#).
- Gently pull out the strip from the motherboard.



## Step 10



- Remove screw that is now in the top right corner. This will detach the screen entirely.

To reassemble your device, follow these instructions in reverse order.