



# Uniden D1483-3BK Handset Keypad Replacement

This guide offers step by step instructions on how to replace a Uniden D1483-3BK handset keypad.

Written By: Arbitrary Name



---

## INTRODUCTION

To complete this guide you will have to separate the parts of the handset in order to access the keypad. The steps of this guide are moderate in difficulty. After completing this guide, users will no longer have a sticky keypad or worn out buttons.



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Set the phone with dial keys facing downward.

## Step 2



- Slide the battery cover toward the bottom of the phone.
- Lift and remove the back cover from the phone.

### Step 3



- Remove the battery from its compartment.
- Pinch the end of cord where the battery is attached to the phone and pull up gently.

### Step 4 — Handset Case



 
- Remove the two 9mm Phillips #1 screws in the battery compartment.

## Step 5




- Use the plastic opening tool to carefully separate the two halves of the case.
  - Slowly work around the entire case to fully separate the halves before pulling them apart.
- ⚠ Wires inside the case hold the two halves together, tearing these wires will lead to a need for additional repair.

## Step 6

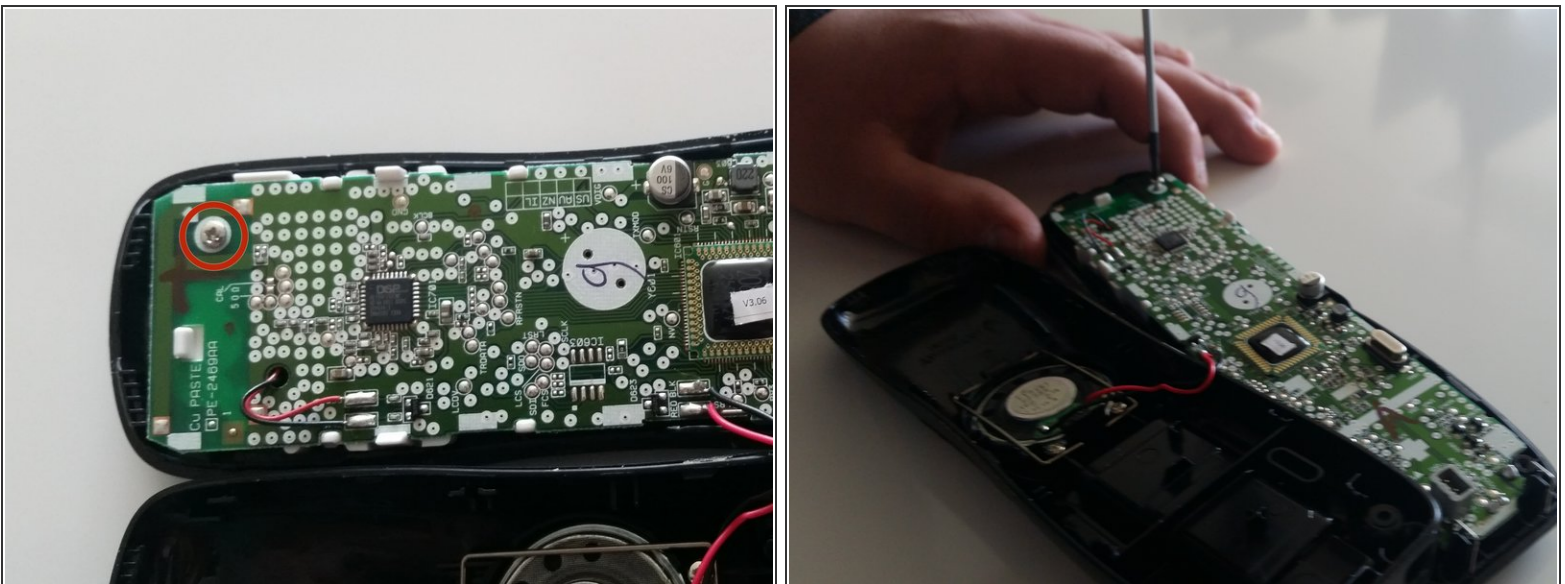

- Carefully remove the 9mm Phillips #1 screw from the top corner of the circuit board.

## Step 7

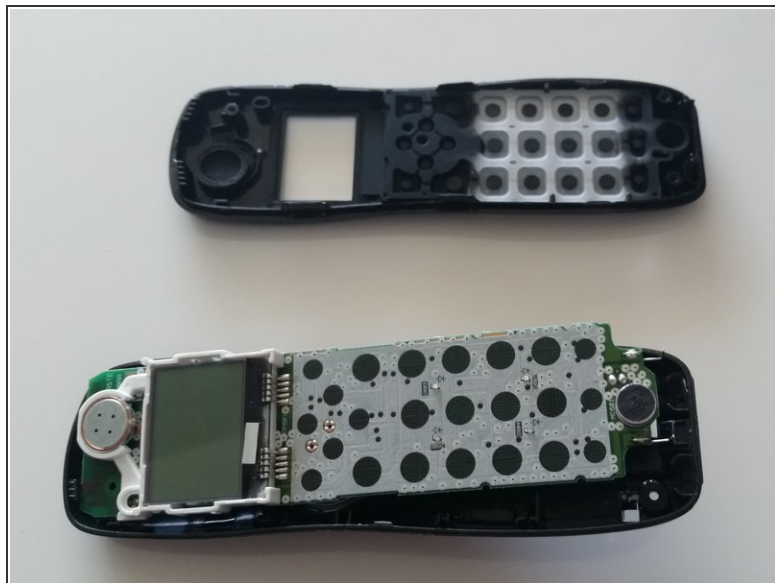 

- Carefully grasp either side of the circuit board and lift it straight out of the front half of the case.
- Set the board in the lower half of the case.

## Step 8 — Handset Keypad



- Remove the rubber keypad from the front half of the handset case.
- ⓘ The keypad comes in two separate pieces.

To reassemble your device, follow these instructions in reverse order.