



How To Clean Nikon Coolpix S30 Lens

You will need a T5 and a PH000 tip from the...

Written By: Courtney Weida



INTRODUCTION

You will need a T5 and a PH000 tip from the iFixit's kit.

If the camera is taking fuzzy pictures it may be due to debris blocking the lens.



TOOLS:

Phillips #000 Screwdriver (1)

T5 Torx Screwdriver (1)

Step 1 — Batteries



- Slide the battery cover to the right.
- ⓘ The hinge is on the left side of the cover which will allow the cover to stay attached.

Step 2



- Slide the second cover (yellow) to the right (similar to the outer cover). This will allow the batteries to be exposed.

Step 3



- Remove the batteries by gently tipping the camera.

Step 4 — How To Clean Nikon Coolpix S30 Lens



- Remove the four screws that hold the back of the case to the rest of the camera.

Step 5



- Remove the left screw from the bottom of the camera first. This can be done using the same T5 tip.
- Unscrew the screw on the right using a different attachment: PH000 (it is a small Phillip's head)

Step 6




- Remove back case from the rest of the camera carefully.

Step 7




- Remove the three screws the secure the motherboard to the front case.

Step 8

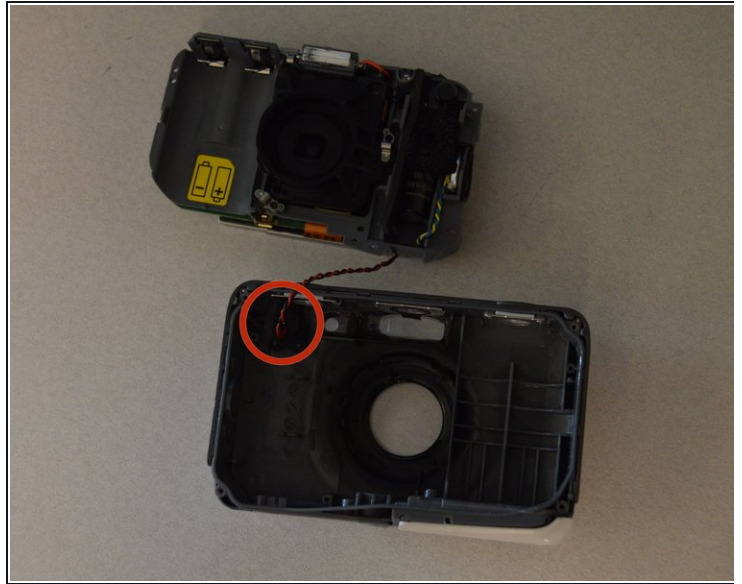

- Remove the motherboard from the front case.
- Leave the red and black wire attached but lay the piece in front of the case.

Step 9

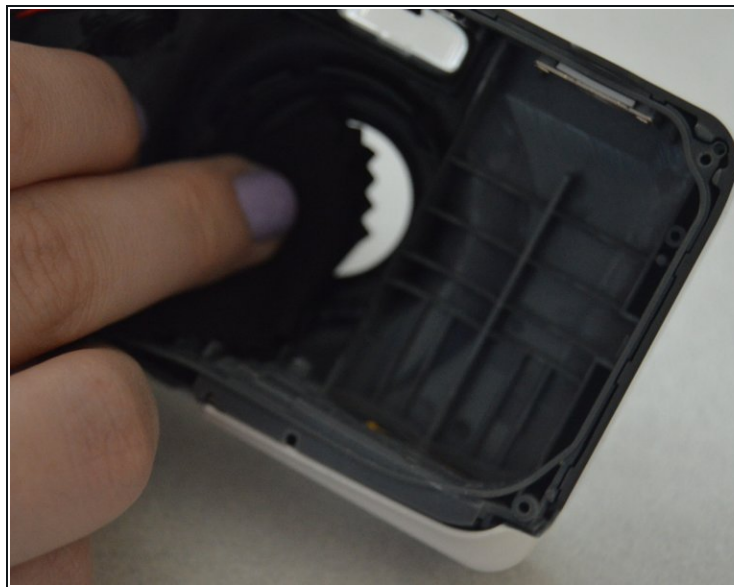

- Wipe the lens and the clear plastic on the front case to remove debris.

To reassemble your device, follow these instructions in reverse order.