


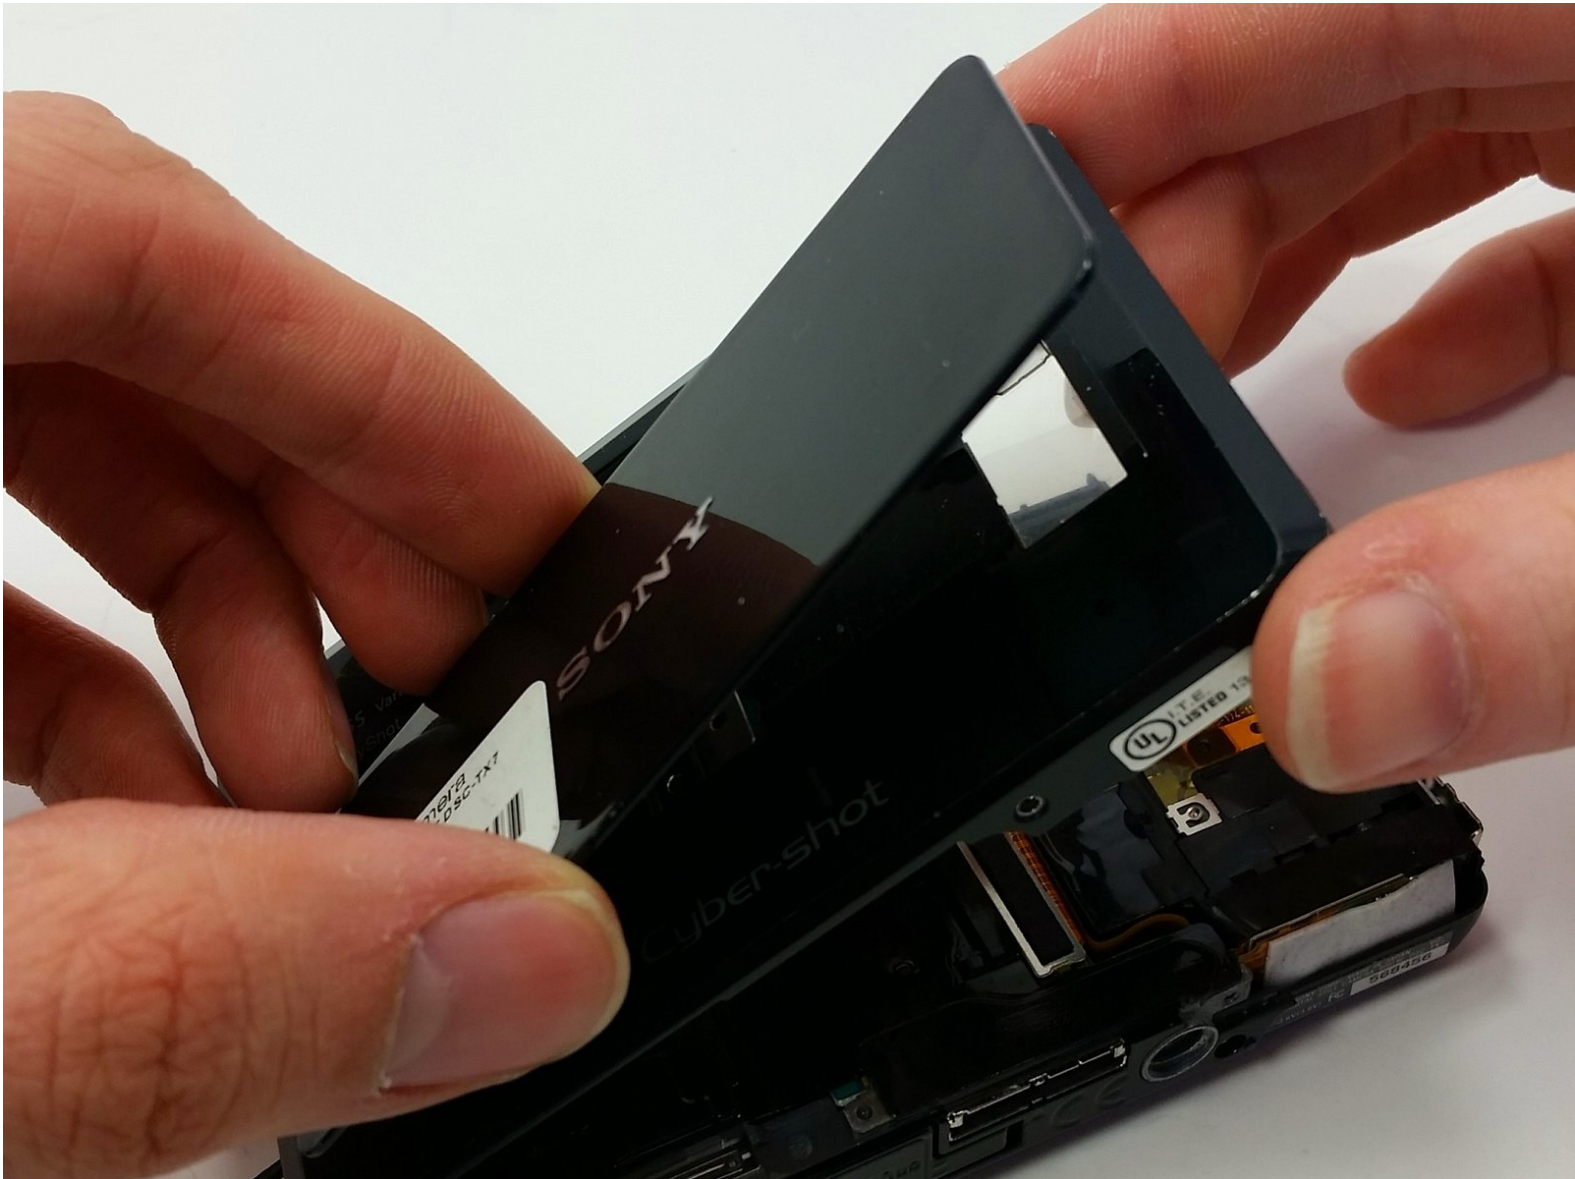

Sony Cyber-shot DSC-TX7 Front Sliding Lens Cover Replacement

Follow this guide to remove the front sliding lens cover on the Sony Cyber-shot DSC-TX7.

Written By: Leslie Mundell



INTRODUCTION

This guide will teach the user how to take off the front sliding lens cover.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-


Step 1 — Battery



- The battery compartment is located on the bottom of camera.
- Move the slider from the 'lock' position to the 'open' position.

Step 2



 Battery not shown.

- Pull battery from compartment.
- Insert newly charged battery into compartment, as shown in diagram (located in compartment).
- Shut compartment door.
- Move the slider back to the 'lock' position.

Step 3 — Front Cover



- Use the Phillips #00 screwdriver to remove the 4mm length screws. There are 6 screws total.

Step 4




- The 4 mm length screws are located on each side and on the bottom of the camera.
- 2 screws on each side (4 total).
- 2 screws on bottom.

Step 5



- Gently pry around the front cover using the plastic opening tool.
- Carefully separate front cover from body of camera.



Step 6

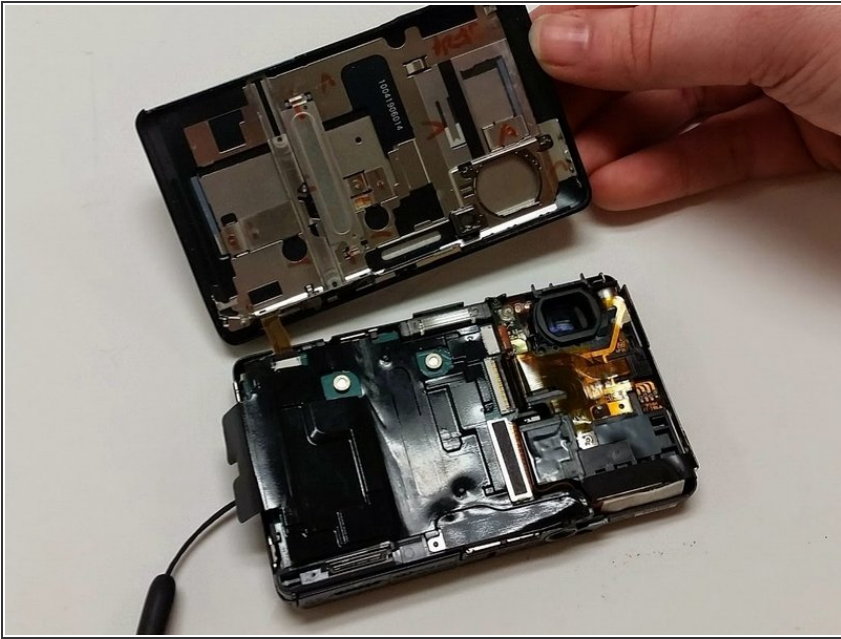

- The front cover is now removed from the camera and the internal hardware is now visible.


⚠ They front cover will still be connected by a ribbon. Be careful not to break the ribbon.

Step 7 — Front Sliding Lens Cover

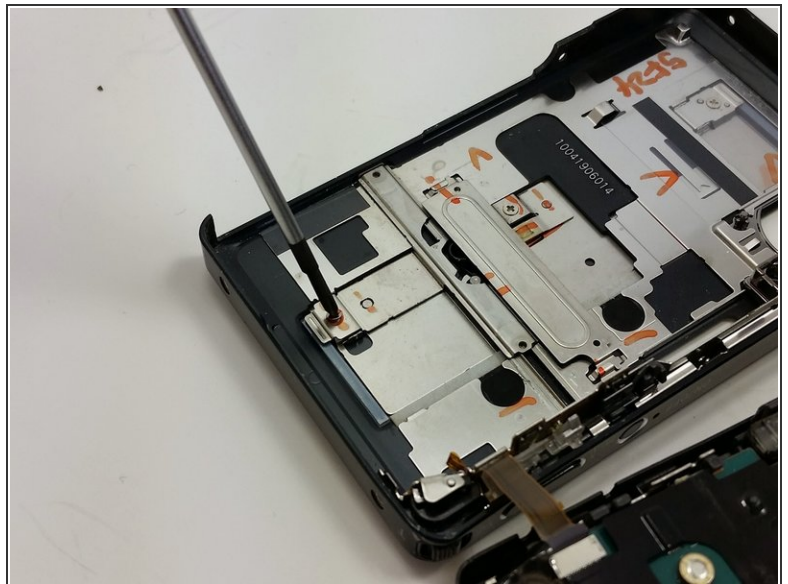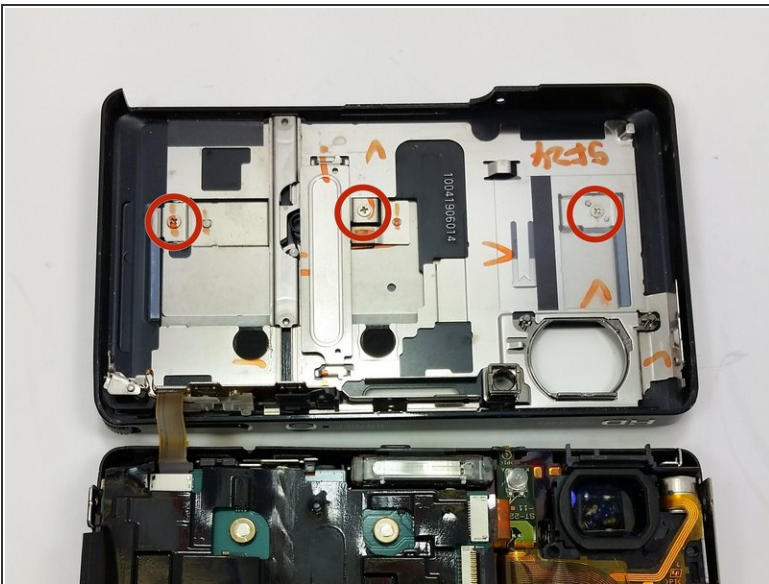

- Remove the three 4mm length screws located on the inside of the front cover with the Phillips #00 screwdriver.

Step 8

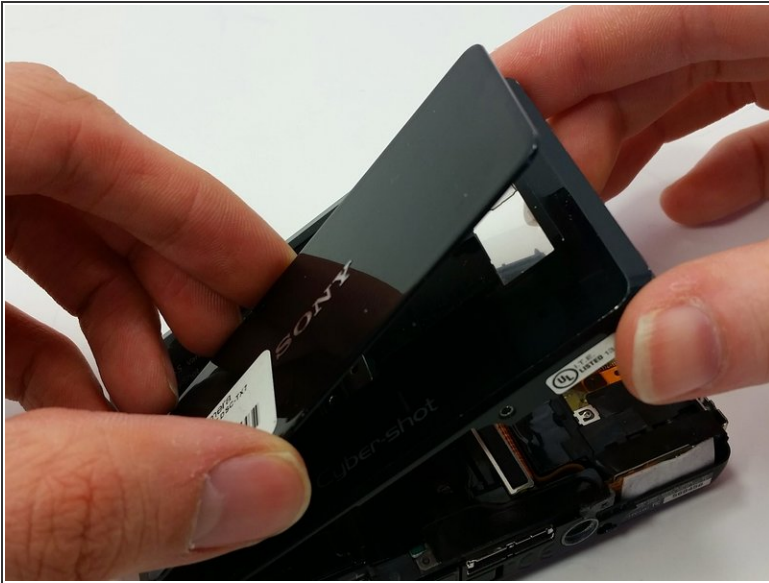

- Wiggle sliding lens cover after all screws are removed and separate from front cover.

To reassemble your device, follow these instructions in reverse order.