




Acer Iconia B1-720 Microphone/Speaker Replacement

This guide will show you how to remove the speaker or microphone from your tablet.

Written By: Phillip Keavey

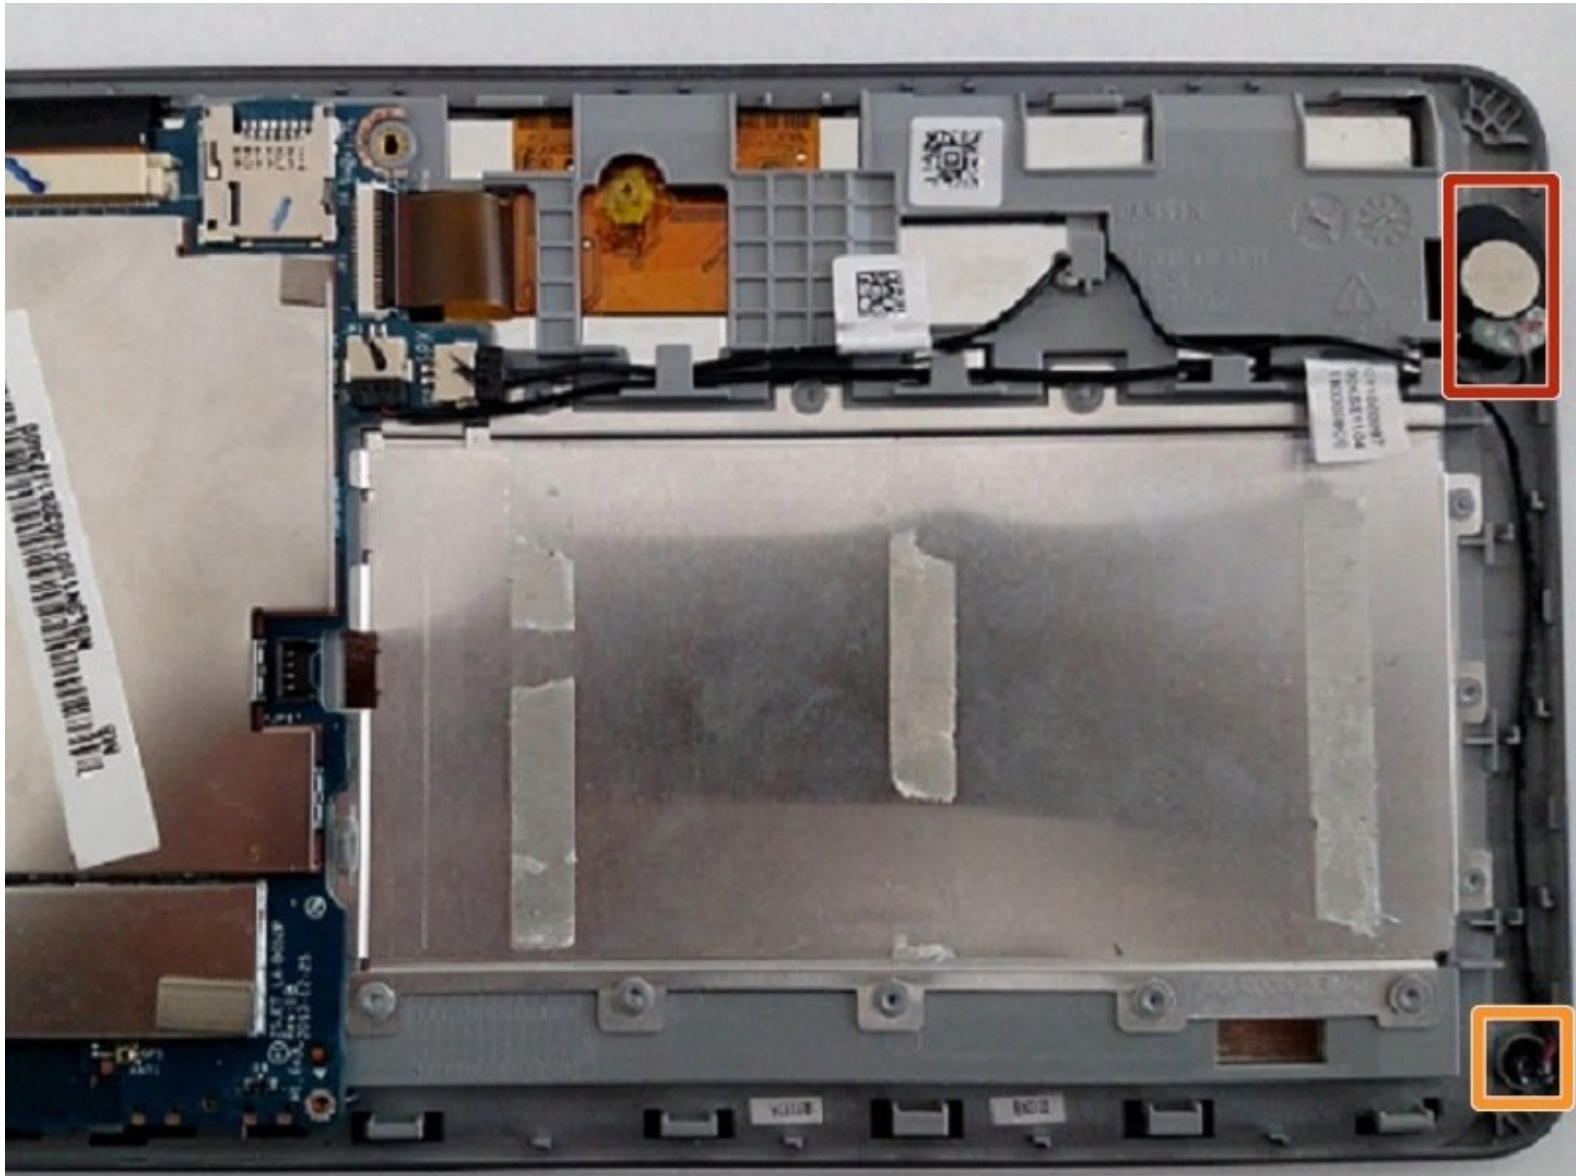

INTRODUCTION


By using this guide, you will be able to replace the speaker or microphone from your tablet.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [8" Needle Nose Plier](#) (1)
-

Step 1 — Rear Case

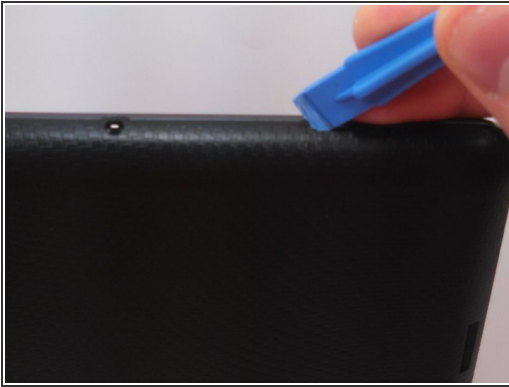

- Insert a plastic opening tool into a gap near the charging port at the top of the device. Slide the tool in either direction along the device.

Step 2

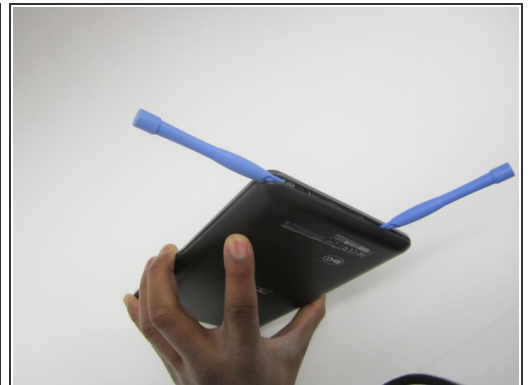




- Slide the tool along until you have completely separated the rear cover.
 - If needed, place the first tool in the gap created to hold this gap open and use a second tool to pry the remaining portion of the rear cover off.

Step 3





- Once all the sides have been separated, you should be able to simply lift the cover off of the device.

Step 4 — Microphone/Speaker

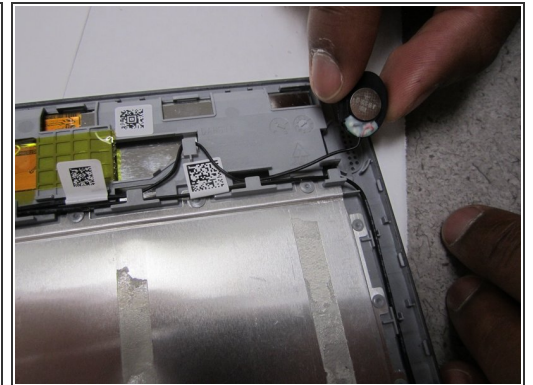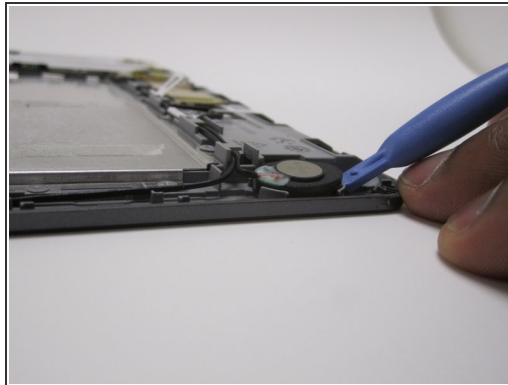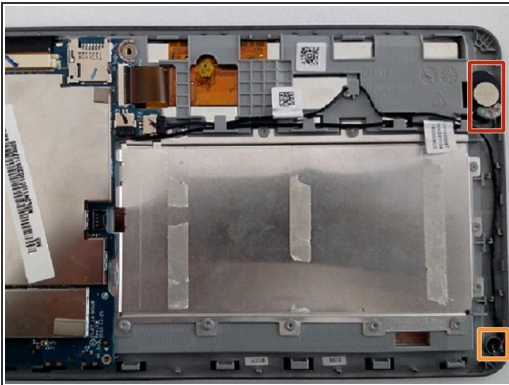


- Pry the speaker away from the device using the plastic opening tool. This may require a little force due to the adhesive that is on the device. (Battery is not shown in this picture for image)
- Tug gently on microphone to remove from slot.

Step 5

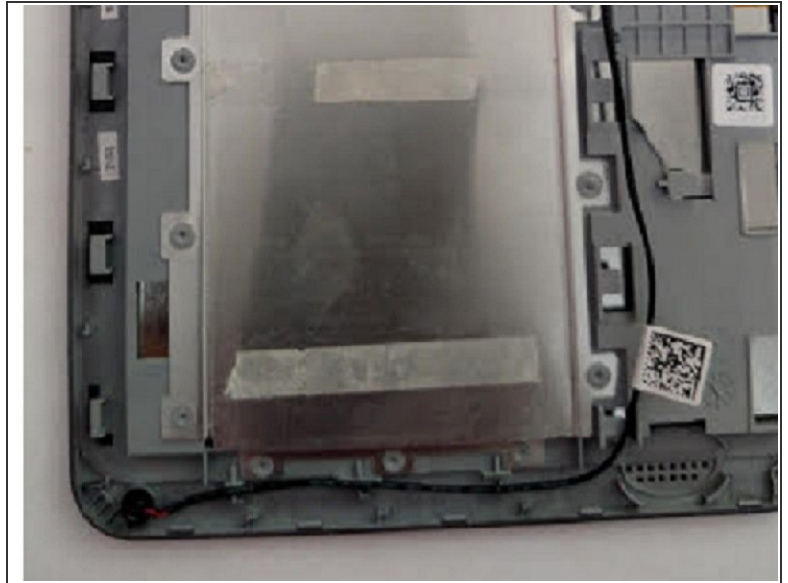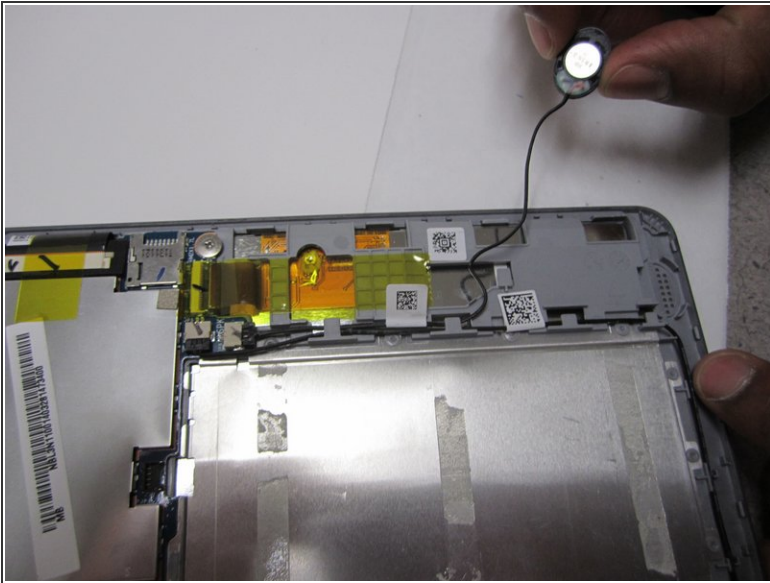

- Unwind the wire from the running channel.
- To remove microphone, follow same steps.

Step 6

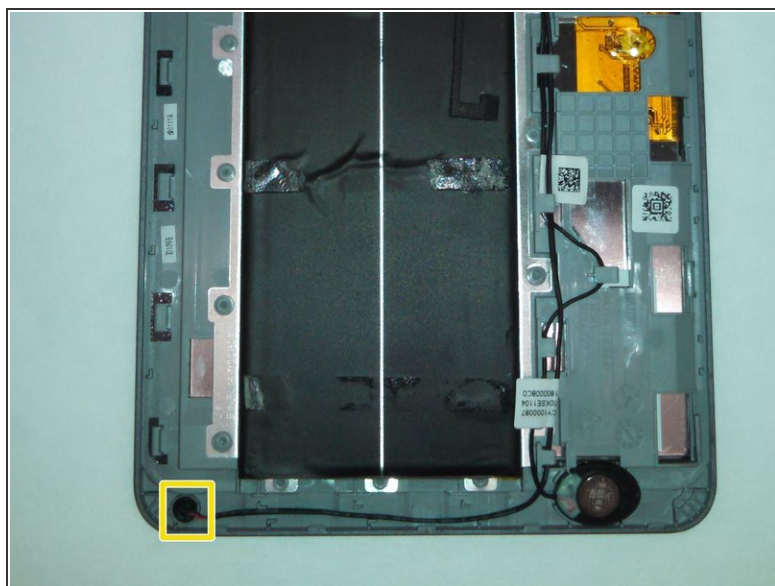

- Unplug connector from motherboard.
- Follow same procedure to remove microphone.
- Unplug the microphone in a similar fashion as with the speaker.

To reassemble your device, follow these instructions in reverse order.