



Azpen A701 General Disassembly Prerequisite Guide Replacement

This is a prerequisite guide showing removal of the back panel of the Azpen A701.

Written By: Michael



INTRODUCTION

This guide demonstrates how to remove the back panel and open the device for repairs and replacements.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — General Disassembly Prerequisite Guide




- Remove the two 2cm screws on the bottom using the PH0 Phillips head screw driver.

Step 2




- Pry open back piece with plastic spudger.
 - Remove the back piece of the device.
- i** The back panel may be difficult to pry off, use gentle force.

Step 3

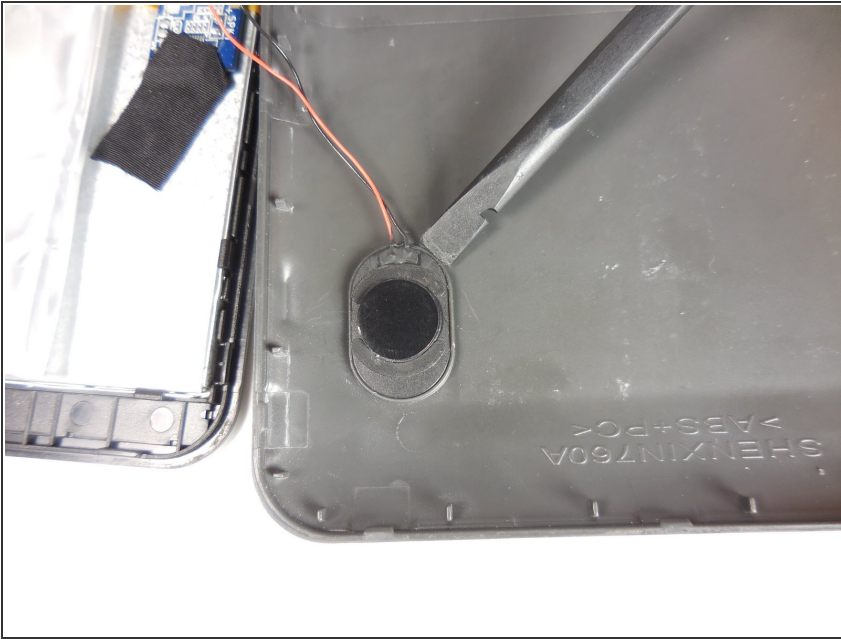

- Disconnect speaker (which is attached by black and red wires) from back piece using plastic spudger.

Step 4

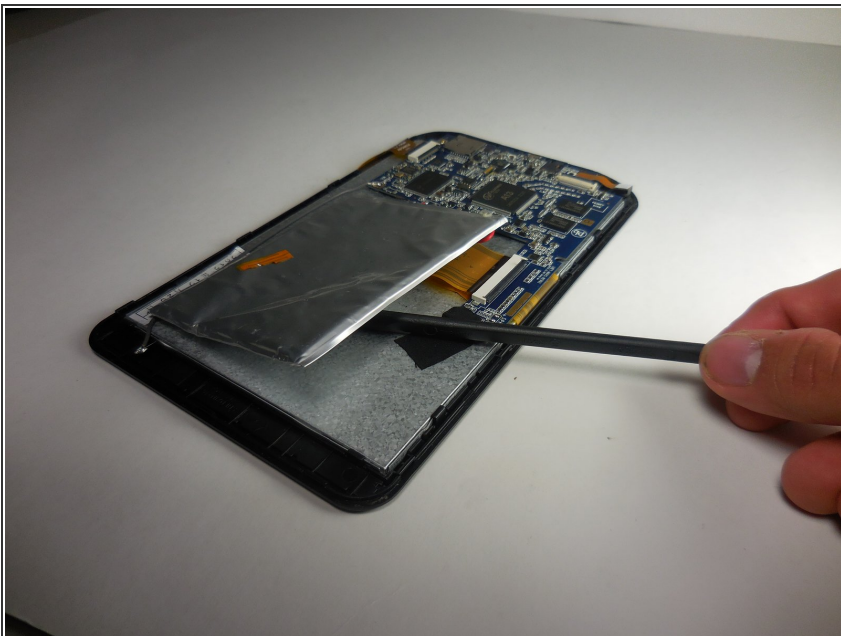

- Gently pry the battery off of the device with the plastic spudger.
- ⓘ There is a large amount of glue holding the battery to the device.
- ⚠ Do not puncture the battery with the plastic spudger.

To reassemble your device, follow these instructions in reverse order.